

The diagram shows the back panel of the switch with the following ports labeled:

- 1: VGA port
- 2: IPMI LAN port
- 3: COM1 port
- 4: USB 0 (USB 3.0) port
- 5: USB 1 (USB 3.0) port
- 6: USB 2 (USB 3.0) port
- 7: GLAN1 (X11DPI-N, 10G_LAN1 (X11DPI-T/X11DPH-Tq)) port
- 8: GLAN2 (X11DPI-N, 10G_LAN2 (X11DPI-T/X11DPH-Tq)) port
- 9: Unit Identifier Switch (UID) port
- 10: USB 3 (USB 3.0) port

Back Panel I/O Ports			
1.	COM1	6.	USB 3 (USB 3.0)
2.	USB 0 (USB 3.0)	7.	GLAN1 (X11DPI-N, 10G_LAN1 (X11DPI-T/X11DPH-Tq))
3.	USB 1 (USB 3.0)	8.	GLAN2 (X11DPI-N, 10G_LAN2 (X11DPI-T/X11DPH-Tq))
4.	IPMI LAN	9.	VGA
5.	USB 2 (USB 3.0)	10.	Unit Identifier Switch (UID)

Notes: 1. Please refer to Chapter 2 of the user's manual for detailed instructions of CPU/Heatsink and memory installation. 2. Please refer to our website at www.supermicro.com for CPU/Memory support updates. 3. All graphics shown in this quick reference guide are for illustration only. Your components may or may not look the same as the graphics shown in this quick reference guide.