

J4108-02-04X

4U108 SAS4 JBOD User's Manual

Table of Contents

Preface	
Safety Instructions	ii
About This Manual	iv
Chapter 1. Product Features	1
1.1 Box Content	
1.2 Specifications	2
1.3 Feature	
Chapter 2. Hardware Setup	
2.1 Top Cover	
2.1.1 Remove the top cover A and B	
2.1.2 Remove the top cover C	
2.1.3 Removing the top cover D	
2.2 Disk Drive	
2.2.1 Installing the 3.5" Hard Disk Drive	
2.2.2 Removing the 3.5" HDD from the Tray	
2.2.3 Installing the 2.5" Hard Disk Drive (Optional)	
2.2.4 Removing and Installing the HDD Tray	
2.3 Power Supply Unit Module	
2.3.1 Installing the Power Supply Unit	
2.3.2 Removing the Power Supply Unit	
2.4 Fan Module	
2.4.1 Installing the Fan	
2.4.2 Removing the Fan	
2.5 Expander Module	
2.5.1 Installing the Expander	
2.6 Drive Backplane Module	
2.6.1 Installing the HDD Backplane Module	
2.7 Drive Slot Map	
2.8 Cable Cover	
2.8.1 Installing the Cable Cover	
2.8.2 Removing the Cable Cover	
2.9 Bridge Board Module	
2.9.1 Installing the Bridge Board	
2.9.2 Removing the Bridge Board	
2.10 Rear Handle	
2.10.1 Installing the Rear Handle	
2.10.2 Removing the Rear Handle	
2.11 Slide Rail	
2.12 Standard Cabling	
2.12.1 Single expander JBOD and 1 host server with 1 HBA card	
2.12.2 Dual expander JBOD and 1 host server with 2 HBA cards	
2.12.3 Dual expander JBOD and 2 host servers with 1 HBA card each	27
2.13 Drive Backplane: 30 Bay	28
2.13.1 Placement	
2.13.2 Connector	
2.13.3 LED Indicator	
2.14 Drive Backplane: 24 Bay	32

2.14.1 Placement	
2.14.2 Connector	
2.14.3 LED Indicator	
Chapter 3 Sub-system Configuration Setup	
3.1 Supported Configuration and Unsupported Feature	36
3.1.1 Supported Multiple Host/Path Access	
3.1.2 Unsupported Feature	
3.2 SES Inband Features	37
3.2.1 SES Pages	.37
3.2.2 SES Elements	
3.2.3 Implementation on SES Pages	.38
3.2.3.1 SES String In Page	.38
3.2.3.2 SES Threshold Out / In	.38
3.2.3.3 SES Vendor specific page: Canister Number (page code 83h) Out / In	
3.2.3.4 SES Vendor specific page: Firmware Version and MFG Version (page)	age
code 8Ch) In	
3.2.4 Implementation on SES Elements	
3.2.4.1 Power Supply Element	
3.2.4.2 Cooling Element	
3.2.4.3 Temperature Sensor Element	
3.2.4.4 Enclosure Element	
3.2.4.5 Voltage Element	
3.2.4.6 Array Device Element	
3.2.5 SES Element Control Functions	
3.2.5.1 LED indicators (blue and red) associated with an attached disk drive.	
3.2.5.2 How to power off the entire enclosure	
3.2.5.4 How to enable/disable the enclosure alarm by your software	
3.2.5.5 How to enable/disable the enclosure alarm by your software	
3.2.5.6 How to update firmware / MFG for the Edge expanders	
3.2.5.7 How to update all firmware/MFG through in-band SES with a tar l	
which includes all Edge firmware/MFG and Hub firmware/MFG	
3.3 Configure Serial Command Line Interface	
3.3.1 How to enable/disable T10 zoning	
3.3.2 How to configure T10 zoning	
3.3.3 How to get all revisions in AIC® SAS Expander	.63
3.3.4 How to configure enclosure address (HUB only)	
3.3.5 How to configure standby timer for all disk drives (EDGE only)	
3.3.6 How to configure wide port checker	
3.3.7 How to power off/on all disk drives automatically	
3.3.8 How to configure EDFB (EDGE only)	
3.3.9 How to configure power setting (HUB only)	.65
3.3.10 How to configure zone count	.66
3.3.11 How to configure zoning of the wide port (HUB only)	
3.3.12 How to configure zoning of the disk slot (EDGE only)	
3.4 Vendor Specific Vital Product Data (VPD) Page	72
Chapter 4. BMC Configuration Settings	73
4.1 Login	
4.2 Sensor's Location for Fan and Temperature	

4.3 Expander Setting via SOL	78
4.3.1 SOL	78
4.4 Web UI	83
4.4.1 User Name and Password	83
4.4.2 Menu Bar	84
4.4.3 Quick Button and Logged-in User	85
4.4.4 Dashboard	
4.4.5 Sensor	87
4.4.5.1 Sensor Detail	88
4.4.6 FRU Information	89
4.4.7 Logs & Reports	91
4.4.7.1 IPMI Event Log	92
4.4.7.2 Audit Log	93
4.4.8 Settings	94
4.4.8.1 Date & Time	95
4.4.8.2 Log Settings	96
4.4.8.3 Network Settings	99
4.4.8.4 Platform Event Filter	105
4.4.8.5 Services	114
4.4.8.6 SMTP Settings	
4.4.8.7 System Firewall	120
4.4.8.8 User Management	129
4.4.8.9 Power Restore Policy	
4.4.8.10 Zone Configurations	
4.4.9 Remote Control	136
4.4.10 HDD Management	137
4.4.11 Power Control	138
4.4.12 Maintenance Group	
4.4.12.1 Backup Configuration	140
4.4.12.2 Firmware Image Location	
4.4.12.3 BMC Firmware Information	
4.4.12.4 BMC Firmware Update	143
4.4.12.5 Preserve Configuration	
4.4.12.6 Restore Configuration	151
4.4.12.7 Expander Update	
4.4.12.8 BMC Reset	155
4.4.13 Sign Out	156
Chapter 5. Technical Support	157



Copyright © 2024 AIC®, Inc. All Rights Reserved.

This document contains proprietary information about AIC® products and is not to be disclosed or used except in accordance with applicable agreements.

Document Release History

Release Date	Version	Update Content
September, 2024	1	Release to public.
October, 2024	1.1	Add 3.5" HDD removal info.
January, 2025	1.2	Correct page30/34 pin definition typo.
June, 2025	1.3	Update front panel and add 8644 LED indicator.
July, 2025	1.4	Update RQST IDENT_Red LED description.

Preface

Copyright

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photo-static, recording or otherwise, without the prior written consent of the manufacturer.

Trademarks

All products and trade names used in this document are trademarks or registered trademarks of their respective holders.

Changes

The material in this document is for information purposes only and is subject to change without notice.

Warning

- 1. A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
- 2. Use only shielded cables to connect I/O devices to this equipment.
- 3. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Disclaimer

AIC® shall not be liable for technical or editorial errors or omissions contained herein. The information provided is provided "as is" without warranty of any kind. To the extent permitted by law, neither AIC® or its affiliates, subcontractors or suppliers will be liable for incidental, special or consequential damages including downtime cost; lost profits; damages relating to the procurement of substitute products or services; or damages for loss of data, or software restoration. The information in this document is subject to change without notice.

Instruction Symbols

Special attention should be given to the instruction symbols below.



NOTE

This symbol indicates that there is an explanatory or supplementary instruction.



CAUTION

This symbol denotes possible hardware impairment. Upmost precaution must be taken to prevent serious hardware damage.



WARNING

This symbol serves as a warning alert for potential body injury. The user may suffer possible injury from disregard or lack of attention.

Safety Instructions

Before getting started, please read the following important cautions:

- All cautions and warnings on the equipment or in the manuals should be noted.
- Most electronic components are sensitive to electrical static discharge. Therefore, be sure to ground yourself at all times when installing the internal components.
- Use a grounding wrist strap and place all electronic components in static-shielded devices. Grounding wrist straps can be purchased in any electronic supply store.
- Be sure to turn off the power and then disconnect the power cords from your system before performing any installation or servicing. A sudden surge of power could damage sensitive electronic components.
- Do not open the system's top cover. If opening the cover for maintenance is a must, only a trained technician should do so. Integrated circuits on computer boards are sensitive to static electricity. Before handling a board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. This will help to discharge any static electricity on your body.
- Place this equipment on a stable surface when install. A drop or fall could cause injury.
- Please keep this equipment away from humidity.
- Carefully mount the equipment into the rack, in such manner, that it won't be hazardous due to uneven mechanical loading.
- This equipment is to be installed for operation in an environment with maximum ambient temperature below 35°C.
- The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- Never pour any liquid into ventilation openings. This could cause fire or electrical shock.
- Make sure the voltage of the power source is within the specification on the label when connecting the equipment to the power outlet. The current load and output power of loads shall be within the specification.
- This equipment must be connected to reliable grounding before using. Pay special attention to power supplied other than direct connections, e.g. using of power strips.
- Place the power cord out of the way of foot traffic. Do not place anything over the power cord. The power cord must be rated for the product, voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product.
- If the equipment is not used for a long time, disconnect the equipment from mains to avoid being damaged by transient over-voltage.
- Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.

- If one of the following situations arise, the equipment should be checked by service personnel:
 - 1. The power cord or plug is damaged.
 - 2. Liquid has penetrated the equipment.
 - 3. The equipment has been exposed to moisture.
 - 4. The equipment does not work well or will not work according to its user manual.
 - 5. The equipment has been dropped and/or damaged.
 - 6. The equipment has obvious signs of breakage.
 - 7. Please disconnect this equipment from the AC outlet before cleaning. Do not use liquid or detergent for cleaning. The use of a moisture sheet or cloth is recommended for cleaning.
- · Module and drive bays must not be empty! They must have a dummy cover.

CAUTION



The equipment intended for installation should be placed in Restricted Access Location.

CAUTION



This unit may have more than one power supply. Disconnect all power sources before maintenance to avoid electric shock.



About This Manual

Thank you for selecting and purchasing J4108-02-04X.

This user's manual is provided for professional technicians to perform easy hardware setup, basic system configurations, and quick software startup. This document pellucidly presents a brief overview of the product design, device installation, and firmware settings for J4078-02-04X. For the latest version of this user's manual, please refer to the AIC® website: https://www.aicipc.com/en/productdetail/51367.

Chapter 1 Product Features

J4108-02-04X is an ideal SAS JBOD that is specifically designed to accommodate diverse corporations and enterprises who pursue flexibility, easy control, and density in external or backup storage. This product supports designs and is easily deployed for your benefit.

Chapter 2 Hardware Setup

This chapter displays an easy installation guide for assembling the main components of the JBOD. Utmost caution for proceeding to set up the hardware is highly advised. Do not endanger yourself by placing the device in an unstable environment. The consequences for negligent actions may be extremely severe.

Chapter 3 Sub-system Configuration Setup

This chapter provides details about the supported features and unsupported configurations about your host(s) and expander controller connection.

Chapter 4 BMC Configuration Settings

This chapter illustrates the diverse functions of IPMI BMC, including the details on logging into the web page and assorted definitions. These descriptions are helpful in configuring various functions through Web GUI without entering the BIOS setup.

Chapter 5 Technical Support

For more information or suggestion, please contact the nearest AIC® corporation representative in your district or visit the AIC® website: https://www.aicipc.com/en/index. It is our greatest honor to provide the best service for our customers.

Chapter 1. Product Features

J4108-02-04X is a high performance JBOD product that includes 108 x 3.5" drive bays and single/dual expander module(s). For more information about our product, please visit our website at https://www.aicipc.com/en/index.

Before removing the subsystem from the shipping carton, visually inspect the physical condition of the shipping carton. Exterior damage to the shipping carton may indicate that the contents of the carton are damaged. If any damage is found, do not remove the components; contact the dealer where the subsystem was purchased for further instructions. Before continuing, first unpack the subsystem and verify that the contents of the shipping carton are all there and in good condition.

1.1 Box Content

This product contains the components listed below.

Please confirm the number and the condition of the components before installation.

- System chassis
 (includes power supply, fan & hard disk drive tray)
- Power cord (vary per region)
- Rear handle (uninstalled)
- Cable management kit x 1 (optional)
- Slide rail x 1 set

1.2 Specifications

	Number of Expander	Single/Dual		AC Input	Platinum: • 200-240V~50/60Hz,15A	
General	Expander Chip	Hub: SAS4x48 Edge: SAS35x40 & SAS35x36/SAS4x40 &SAS4x32			Titanium: • 100-127V~,50/60Hz,12A (except China) • 200-240V~,50/60Hz,10A	
	Host/Expansion Interface	4 x Mini SAS HD (SFF-8674) per expander module (backward compatible with SFF-8644 SAS12G)	Electrical and Environmental			
Drives Supported	Drive Interface	24Gb & 12Gb SAS if using dual expanders 24Gb & 12Gb SAS + 6Gb SAS/SATA if using single expander		Operating Environment	Temperature : 0°C to 35°C Relative humidity : 20% to 80 %	
Supported	Form Factor	No	Non-operating Environment	Temperature : -20°C to 60° C Relative humidity : 10% to 90 %		
Administration	Admin/Firmware Upgrade	In-band IEM port		Dimensions (W x D x H)	mm : 434 x 1050 x 176 434 x 1273 x 176 (with CMA)	
/ Management	LED Indicators, Audible Alarm	Yes			inches: 17 x 41 x 7	
	Drive Bays	108	Dhariad		17 x 50 x 7 (with CMA)	
	Cooling	• 8 x 60x56mm hot swap fans (Dual-rotor)	Physical Specification	Specification Gross Weight (w/ PSU, Rail a	Gross Weight	kgs : 66.97
		• 1 x 40x56mm fan per expander module			Pallet; w/o Disks)	lbs : 147.6
Hot swap and Redundancy	Power Supply	2000W 1+1 hot swap redundant 80+ Platinum (with C20 power plug) 2000W 1+1 hot swap redundant 80+ Titanium		Packaging Dimensions	mm : 640 x 1380 x 526	
		(with C14 power plug)		(W x D x H)	inches: 25.2 x 54.3 x 20.7	
	Power Entry	Dual AC Inlet			41" slide rail	
	Expander Modules	Dual SAS topology (Optional)	Mounting	Option	Cable Management Kit	


1.3 Feature

J4108-02-04X is a reliable SAS JBOD with 108 drives bays. This product is designed to accommodate single/dual hub expanders with 4 Mini SAS HD wide ports. Featuring the expander chip, Broadcom SAS4x48, which is underscored for its high scalability and performance of supporting up to 22.5 Gb/s, this product enhances these features by integrating designs, redundant fans, and expansion to offer easy control and high performance for our customers.

- Intelligent Enclosure Management
- Individual drive power management
- Hot swap design for easy maintenance and management
- Enclosure Cable Management Kit
- Tool-less drive trays

Front Panel


J4108-02-04X offers 2 system buttons (System Power switch & System Alert Mute switch) and 4 LED indicators (Power, Power Fail, Temperature (overheating), and Fan Fault).

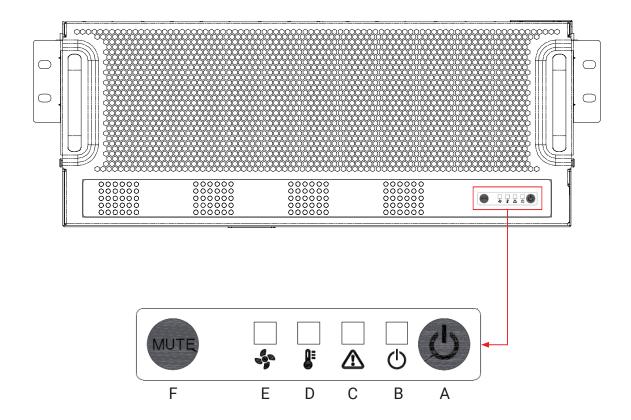

Item	Description	Behavior	Status
А	System Power	Normal	Off
		Press	Boot up
		Long Press	System shut down
В	Power LED	On	Blue
В	Powel LED	Off	No status
С	Power Fail LED	Normal	Off
		Failed	Red
D	Taman anatoma (Overhantina) LED	Normal	Off
	Temperature (Overheating) LED	Failed	Red
F	Fan Fault LED	Normal	Off
E Fall Fault I	raii rauit LED	Failed	Red
F	System Alert Mute Switch	Normal	Off
		Press	Alert mute


Rear Panel

2000W CPRS power module

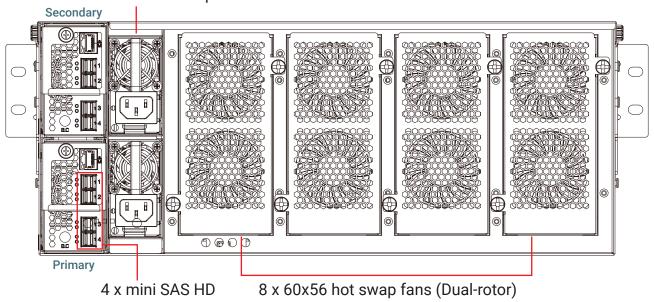

Rear Expander Panel

J4108-02-04X offers single/dual expander(s) with 1 BMC port and 4 mini SAS HD ports per expander module.

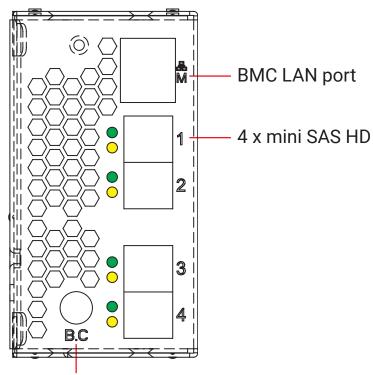

BMC console port & debug port


8644-LED Indicator Definition

Color	Description
Green	All 4 PHYs within the port are linked.
Yellow	At least 1 PHY within the port is linked.
Off	No PHYs within the port are linked.

Major Components

J4108-02-04X offers 3.5" x 108 HDD bays.


- 24Gb & 12Gb SAS if using dual expanders 24Gb & 12Gb SAS + 6Gb SAS/SATA if using single expander

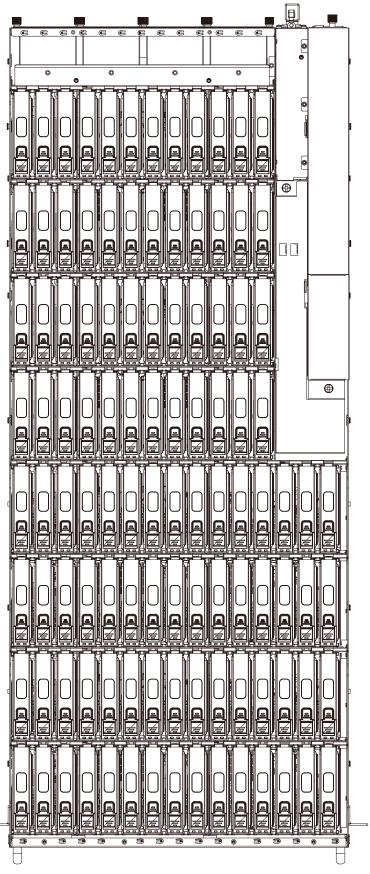

Chapter 2. Hardware Setup


2.1 Top Cover

The server consists of four covers: A, B, C, D.

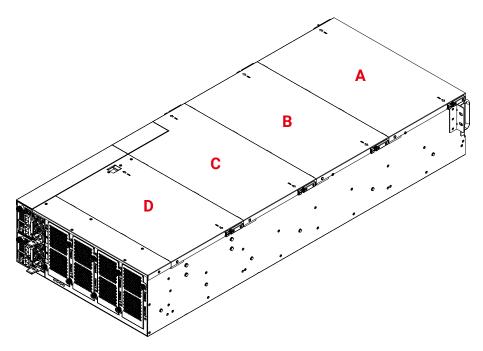


2.1.1 Remove the top cover A and B

- ① Press the release button on both sides of the top cover and simultaneously push the cover towards the front panel.
- ② Lift upward to remove the cover from the chassis.

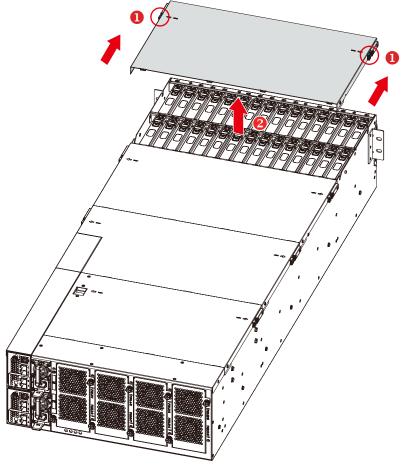


2.1.2 Remove the top cover C

- ① Press the release button on both sides of the top cover and simultaneously push the cover towards the front panel.
 ② Lift upward to remove the cover from the chassis.

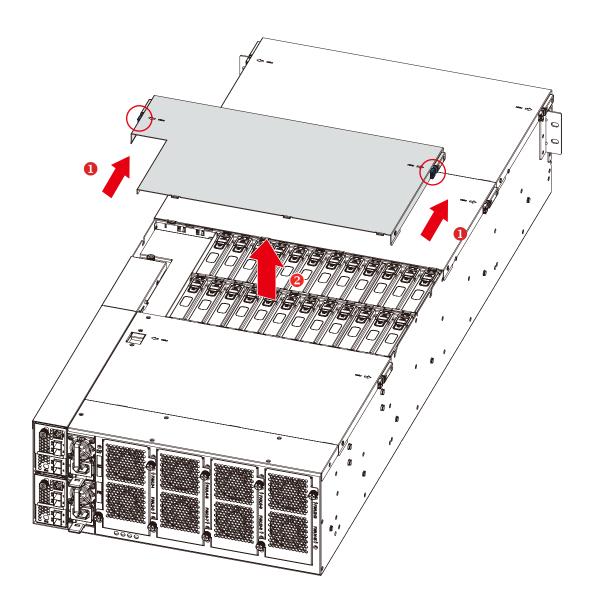

2.1.3 Removing the top cover D

- ① Press the release button on both sides of the top cover and simultaneously push the cover towards the front panel.
- ② Lift upward to remove the cover from the chassis.

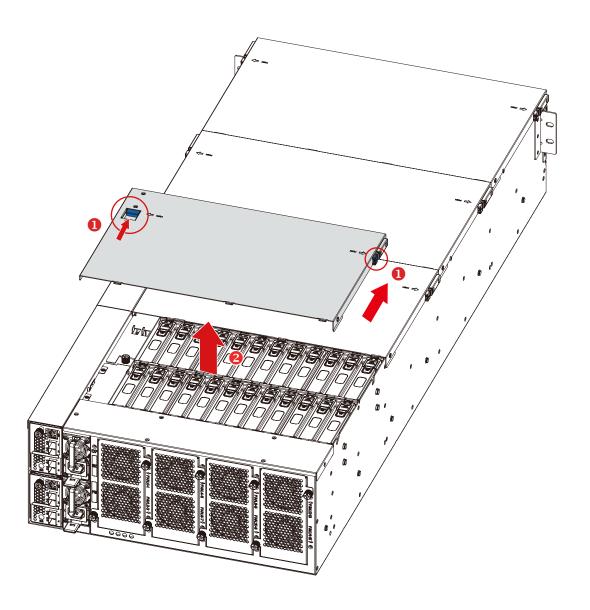





2.2 Disk Drive

2.2.1 Installing the 3.5" Hard Disk Drive


- ① Match the dimples on the HDD with the tool-less tray.
- ② Align the HDD with the tray by placing it against each other.

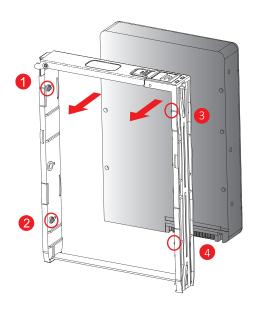

③ Insert the HDD into the tool-less tray in the suggested order above. Make certain to attach the side of the tray with the larger dimples to the HDD first and the side with the smaller dimples last for easier installation.

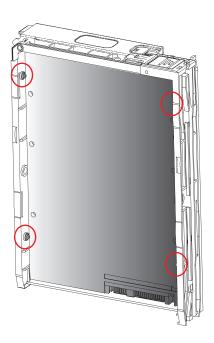


④ Complete the installation.

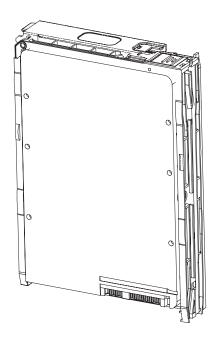

2.2.2 Removing the 3.5" HDD from the Tray

Pull the sides of the tray to remove the HDD. Make certain to pull the tray with smaller dimples first away from the HDD and the larger dimples last for easier removal.

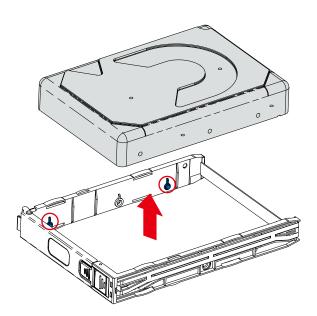


NOTE

When you remove the HDD from the tray, please push out the disk only from one direction to avoid causing damage.


According to the image display above, the dimples should be on the bottom of the tray.

2.2.3 Installing the 2.5" Hard Disk Drive (Optional)


① Attach the HDD onto the HDD bracket and secure the screws (in red circle).

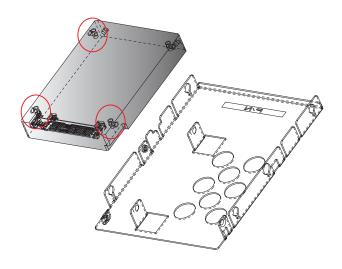

② Match the dimples (in dotted red circle) on the HDD bracket and HDD with the tool-less tray.

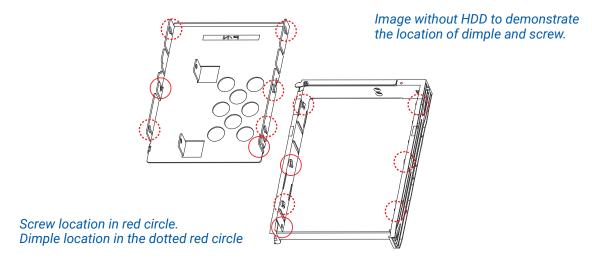

- ③ Insert the bracket and HDD into the tool-less tray.
- ④ Secure the screws on the bracket to complete installation.

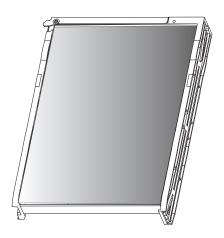


2.2.4 Removing and Installing the HDD Tray

2.2.4.1 Installing the HDD Tray

- ① Insert the drive tray into chassis HDD cage. Make sure the drive tray is correctly secured in place when its front edge aligns with the bay edge.
- ② Push the tray lever until it reaches the end and clicks.

2.2.4.2 Removing the HDD Tray

- ① Press the release button on the tray lever.
- ② Pull upwards to remove the HDD tray from the enclosure.

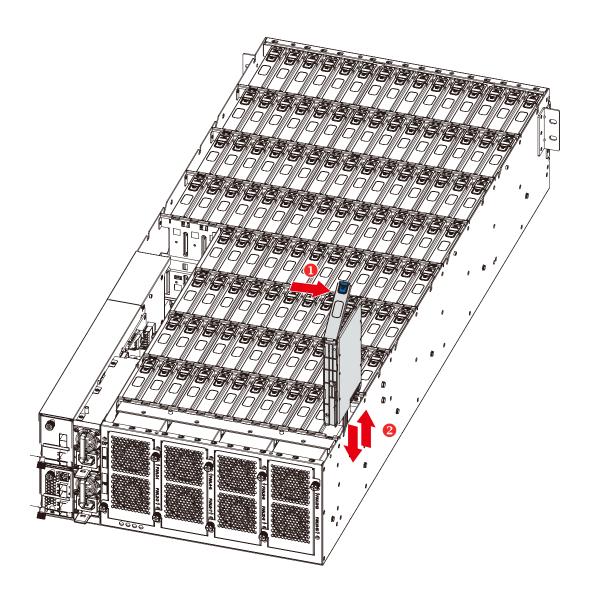




2.3 Power Supply Unit Module

2.3.1 Installing the Power Supply Unit

Push the power supply module into the enclosure. Make sure the latch on the module is fully hooked onto the PSU housing.

2.3.2 Removing the Power Supply Unit

- ① Remove power cables connected to the power supply module. Allow a minute for fan to spin down.
- ② Push the latch and hold the handle.
- ③ Pull the power supply module gently until it slides out of the enclosure.

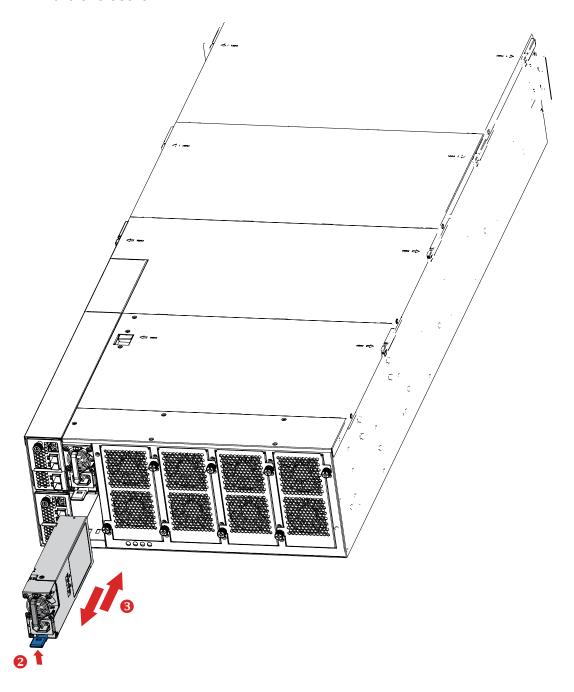




2.4 Fan Module


2.4.1 Installing the Fan

Align the fan module with the opening in the enclosure and insert the module into the JBOD.

2.4.2 Removing the Fan

- ① Loosen the thumb screws x 2 pcs on the fan module.
- ② Pull the fan module from the enclosure.

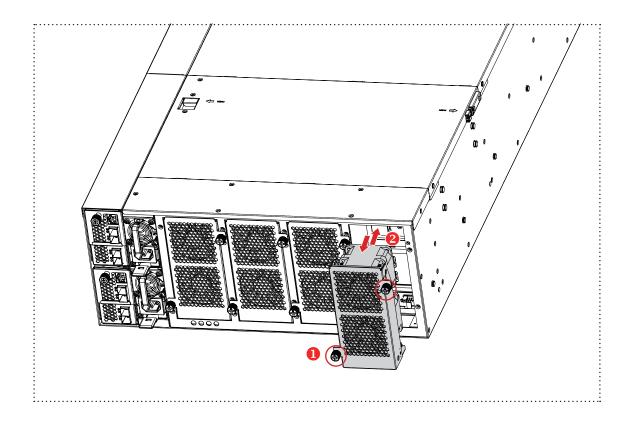

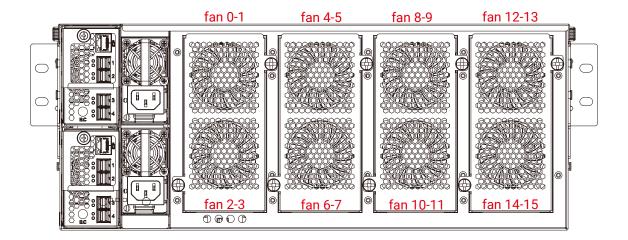


2.5 Expander Module

2.5.1 Installing the Expander

- ① Align the expander module with the opening in front of the enclosure and insert it into the enclosure.
- ② Close the lever and secure the retaining screw.

2.5.2 Removing the Expander

Loosen the screw to remove.

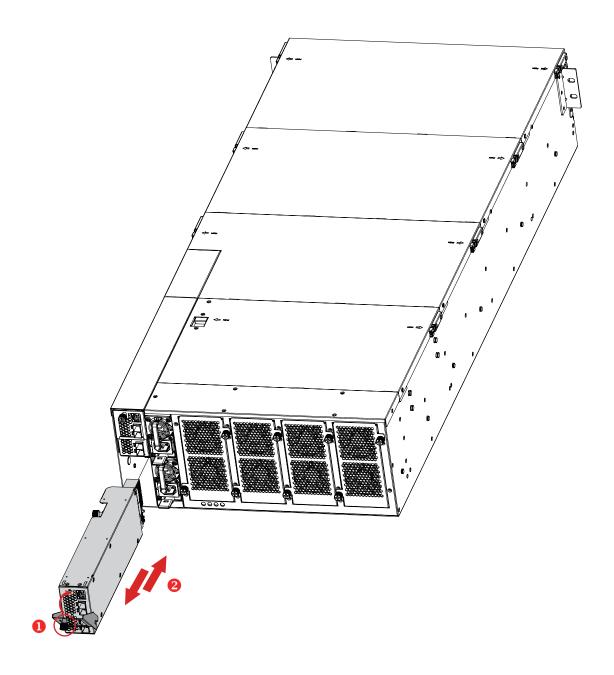



2.6 Drive Backplane Module





NOTE

Before you pull out the HDD backplane, you must remove all the HDD trays and cables.


2.6.1 Installing the HDD Backplane Module


- ① Align the backplane onto the U-shaped bracket(marked in blue) and fasten the screws*5(circle in red).
- 2 Put down the 30bay/24bay HDD Assembly onto the backplane and fasten the screw*2 on each side of the U-shaped bracket.
- ③ Steadily put down the HDD Backplane Module into the chassis.

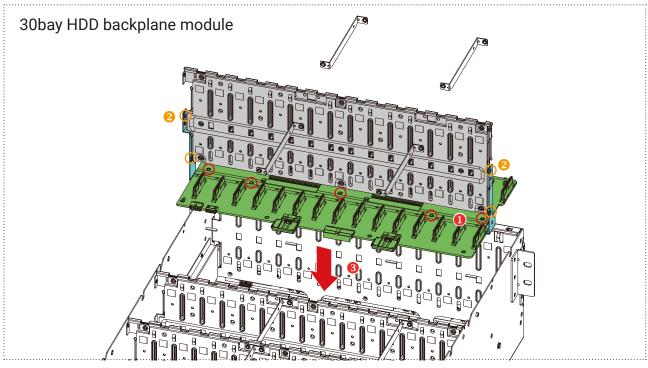

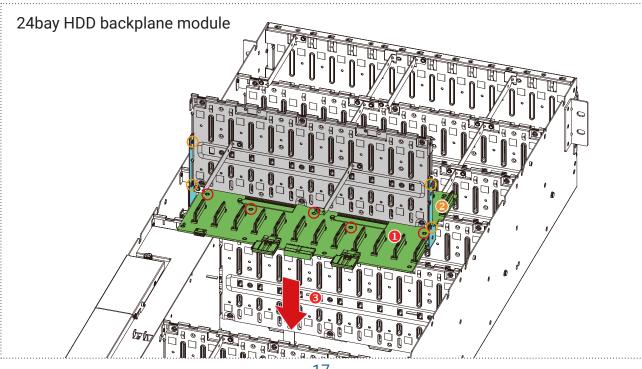

- Secure the HDD Rail Support Bracket(marked in orange) on the module and fasten the screws*2 for each bracket.
- © (1) For 30bay HDD assembly module Fasten the screws*3 on the A side and screws*2 on the B side.
 - (2) For 24bay HDD assembly module Fasten the screws*3 on the A side and screw*1 on the B side.
- © Secure the backplane module with the screws*8 to the bottom of the chassis to complete the installation.

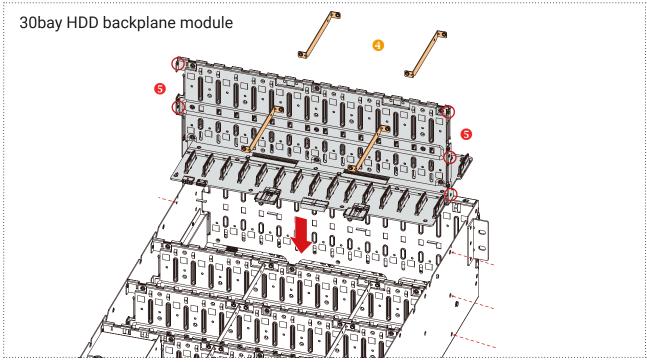


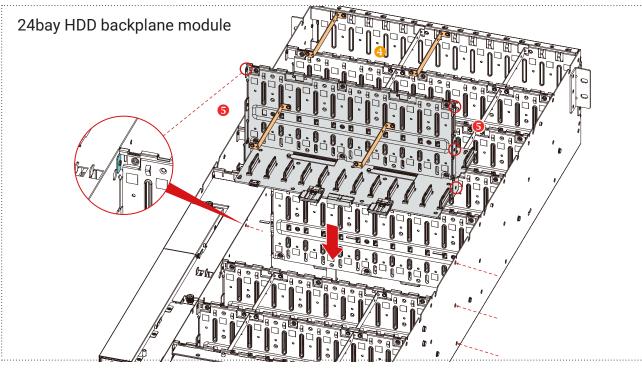




There are four HDD Rail Support Bracket for each HDD Backplane module. Please refer to the placement below marked in red circle.

- **1** 30BAY HDD RAIL FRONT ASSY
- 2 30BAY HDD RAIL MID ASSY
- **3** 24BAY HDD RAIL FRONT ASSY
- **4** 24BAY HDD RAIL MID ASSY

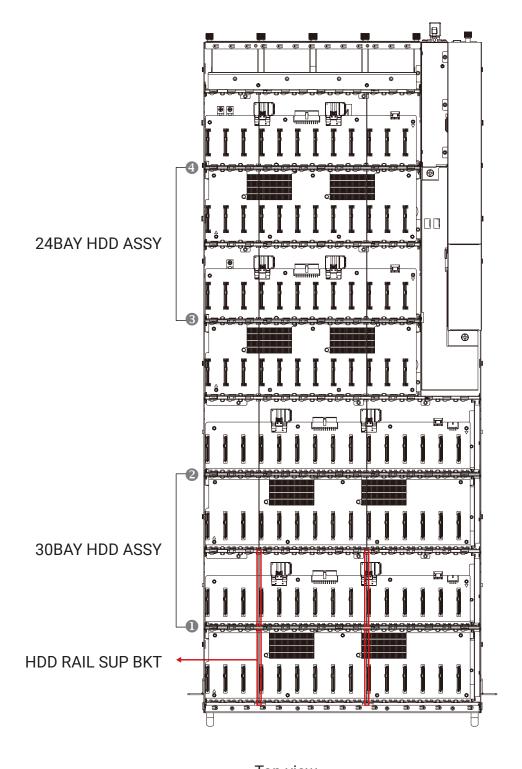

Top view

2.7 Drive Slot Map

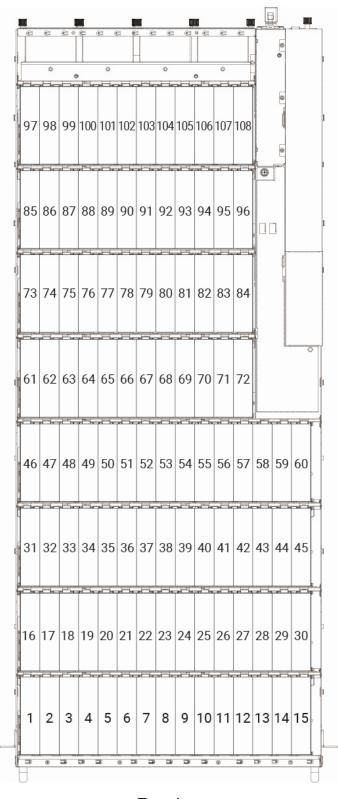

Top view




NOTE

The sequence of the system drive slot number is not equal to the backplane HDD number.

2.8 Cable Cover

2.8.1 Installing the Cable Cover

- ① Place the cable cover onto the enclosure.
- ② Secure the thumb screw*2 on the cable cover.

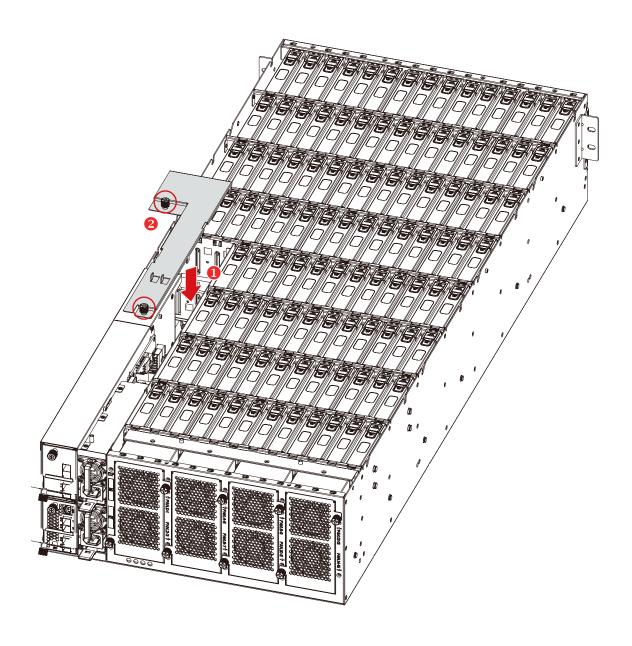

2.8.2 Removing the Cable Cover


Loosen the thumb screws to remove.



2.9 Bridge Board Module

2.9.1 Installing the Bridge Board

- ① Insert the bridge board into the chassis.
- ② Secure the screw*2 on the side of the bridge.

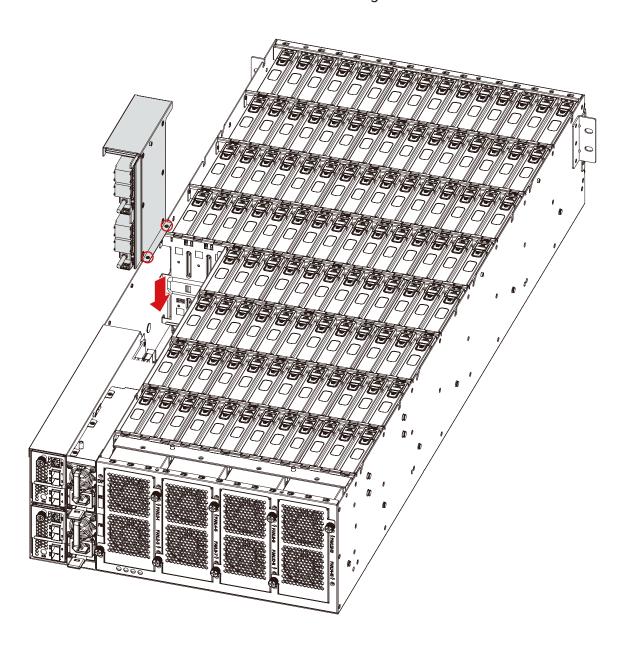

2.9.2 Removing the Bridge Board


Dislodge the screws to remove.




2.10 Rear Handle

2.10.1 Installing the Rear Handle

- ① Match the locking plate on the handle with the locks on the chassis.
- ② Pull the handle upward to lock the handle onto the chassis.

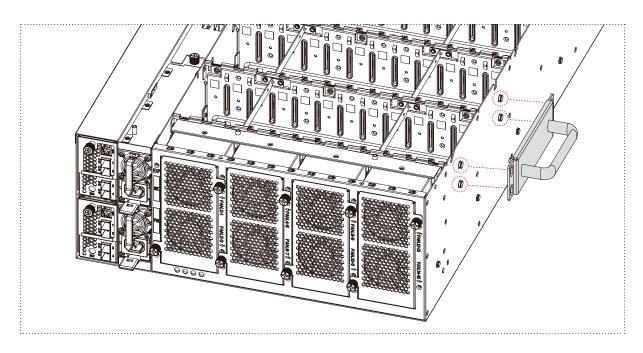

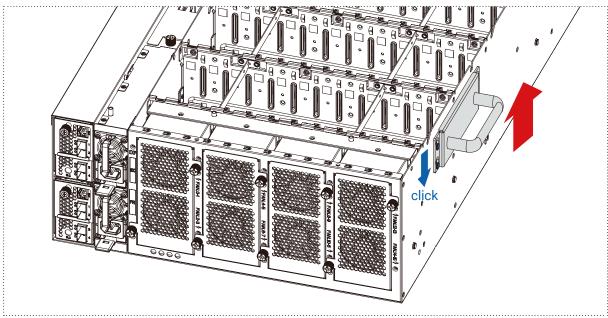


2.10.2 Removing the Rear Handle


- ① Push the handle downward to dismantle the lock from the handle.
- ② Remove the handle from the chassis.




2.11 Slide Rail


- 1. Attach the slide rail bracket assembly to the rack frame.
 - ① Align and attach the front rail bracket to the rack.
 - ② Ensure that the latch on the rail is hooked onto the rack.

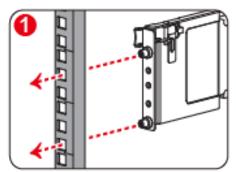

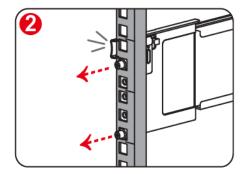



- ③ Align and attach the rear rail bracket to the rack by pushing the latch outward. Ensure the latch is hooked onto the rack.
- ④ Ensure that the latch on the rail is hooked onto the rack.

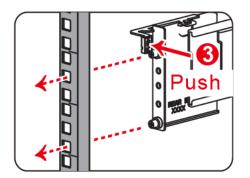

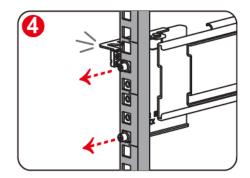


⑤ Secure the rail bracket with a washer and screw on both sides of the rail bracket.

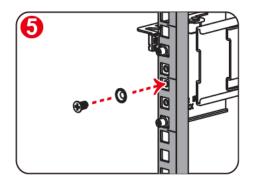

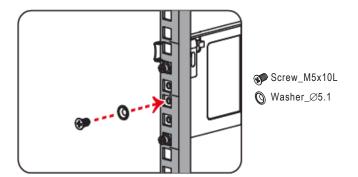


⑥ Repeat ① to ⑤ to install the other side of the rack.

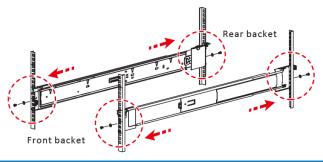





- 2. Attach the chassis onto the rack frame
 - ① Pull the inner and middle rail to fully locked position.

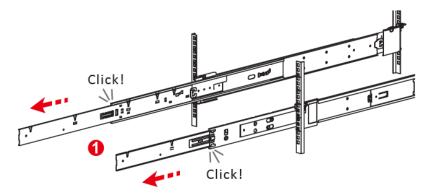


② Position the chassis vertically into the rail. Ensure the standoffs on the chassis slide into the v slots on the rail bracket.

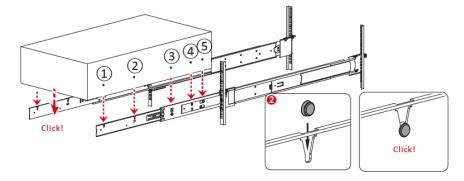

3 Secure the chassis to the rail with screws.

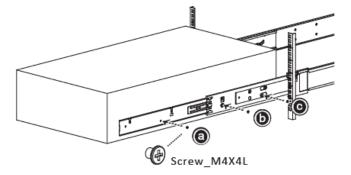


④ Push the release tab on the inner rail and push the chassis into the frame.

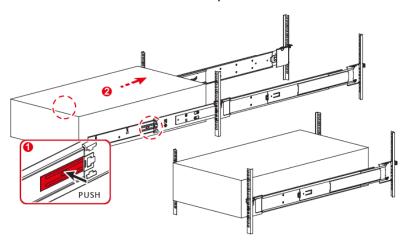


2.12 Standard Cabling


2.12.1 Single expander JBOD and 1 host server with 1 HBA card

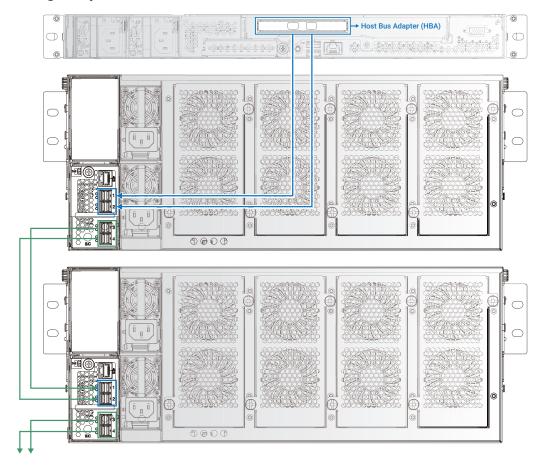

2.12.2 Dual expander JBOD and 1 host server with 2 HBA cards

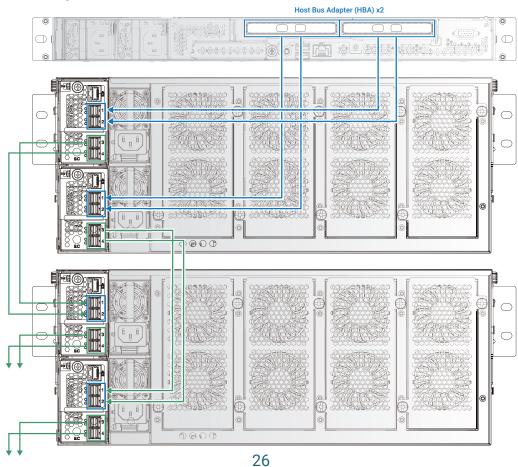


2.12.3 Dual expander JBOD and 2 host servers with 1 HBA card each

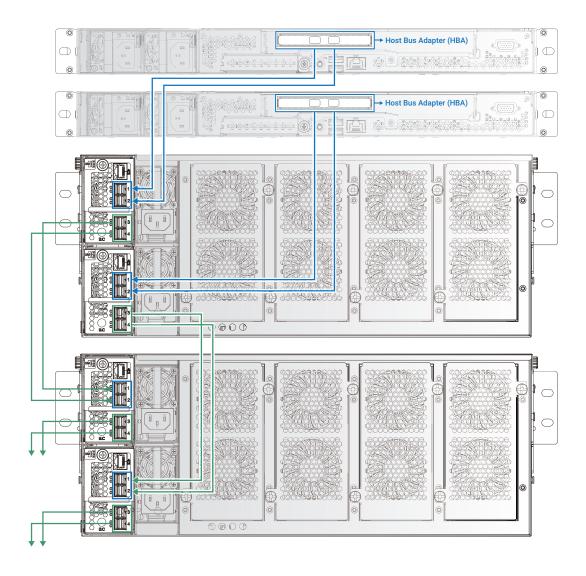


2.13 Drive Backplane: 30 Bay

2.13.1 Placement

Top view

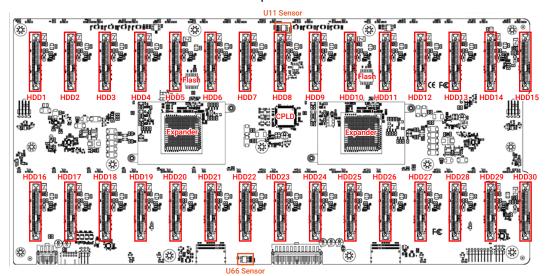

Bottom view

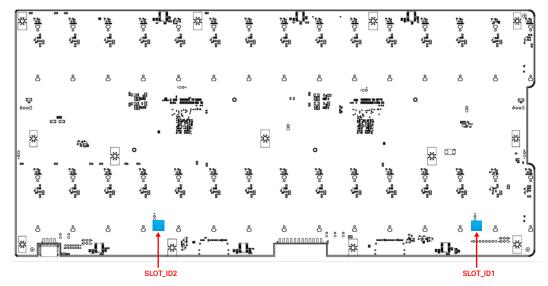

SAS PHY Mapping

	HDD1	HDD2	HDD3	HDD4	HDD5	HDD6	HDD7	HDD8	HDD9	HDD10	HDD11	HDD12	HDD13	HDD14	HDD15
Prima -ry	phy-06	phy-05	phy-04	phy-03	phy-02	phy-39	phy-38	phy-37	phy-36	phy-35	phy-34	phy-33	phy-32	phy-31	phy-30
Second -arv	phy-10	phy-09	phy-08	phy-07	phy-06	phy-05	phy-04	phy-03	phy-02	phy-39	phy-38	phy-37	phy-36	phy-35	phy-34






	HDD16	HDD17	HDD18	HDD19	HDD20	HDD21	HDD22	HDD23	HDD24	HDD25	HDD26	HDD27	HDD28	HDD29	HDD30
Prima -ry	phy-07	phy-08	phy-09	phy-10	phy-11	phy-20	phy-21	phy-22	phy-23	phy-24	phy-25	phy-26	phy-27	phy-28	phy-29
Second -ary	phy-11	phy-12	phy-13	phy-14	phy-15	phy-16	phy-17	phy-18	phy-19	phy-20	phy-25	phy-30	phy-31	phy-32	phy-33



About JBOD slot mapping, please refer to 2.7 Drive Slot Map.

2.13.2 Connector

Location

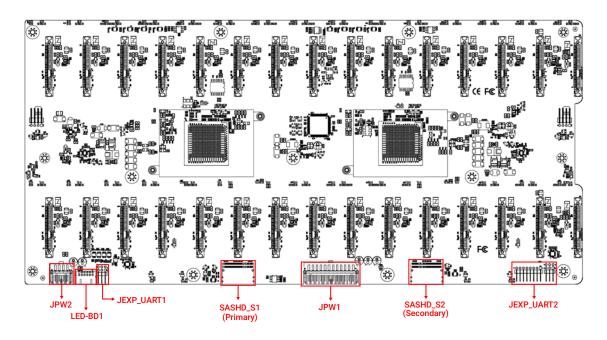

External Connectors

Connector Function	Physical Description	Comments
HDD1~30	SFF-8680 SAS Receptacle(SMT H:14.15mm)	HDD connector

Internal Connectors


Connector Function	Physical Description	Comments		
Power Supply (JPW1)	15 x 2 Pin Power Connector	12V. 4.5 A per pin.		
Power Supply (JPW2)	4 x 2 Pin Power Connector	12V. 4.5 A per pin.		
SAS SlimLine (SASHD_S1) (SASHD_S2)	74 pin 8i SAS SlimLine	SAS Host connection		
UART (JEXP_UART1) (JEXP_UART2)	3 x 2 Pin Header	Expander SMART/DEBUG port.		
LED Board (LED-BD1)	6 x 2 Pin Header	Connect to Front LED Board		

Power Connector (JPW1)



GND	13	1	GND
GND	14	2	GND
GND	15	3	GND
GND	16	4	GND
GND	17	5	GND
GND	18	6	GND
+12V	19	7	+12V
+12V	20	8	+12V
+12V	21	9	+12V
+12V	22	10	+12V
+12V	23	11	+12V
+12V	24	12	+12V

 Power Connector (JPW2)



GND	5	1	GND
GND	6	2	GND
+12V	7	3	+12V
+12V	8	4	+12V

Control for Expander (JEXP_UART1/ JEXP_UART2)

 


 DBG_SIRXD
 2
 1
 SM_SIRXD

 GND
 4
 3
 GND


 DBG_SITXD
 6
 5
 SM_SITXD

Front LED Board Control for Display HDD LED Status (LED-BD1)



+3V3	1	2	+5V
SLOAD2	3	4	SDATAOUT2
SCLOCK2	5	6	GND
SLOAD1	7	8	SDATAOUT1
SCLOCK1	9	10	CPLD SDA
CPLD SCL	11	12	GND

2.13.3 LED Indicator

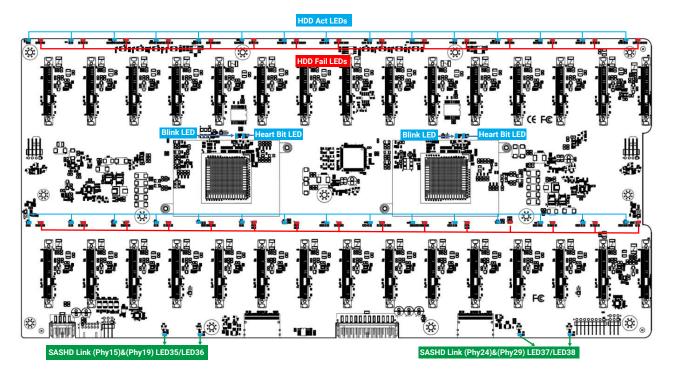


Indicator	Color	Behavior	Description
SAS PHY Link Status		On	Link up
(LED35/LED36)	Blue	Blinking	Activity is detected
(LED37/LED38)		Off	Link down
Expander Blink (LED33) (LED34)	Blue	Blinking	Expander alive, 0.0833Hz (12 seconds per cycle)
Expander HeartBit (LED32) (LED31)	der HeartBit Blue Blinking		Expander FW running
		On	HDD present
HDD Activity LEDs	Blue	Blinking	HDD Activity detected: 8Hz
		Off	HDD Locate: 0.5Hz
		On	Set by any of the following bits: 1. RQST MISSING 2. RQST FAULT
HDD Fault/Status LEDs	Red	Blinking	Set by any of the following bits: 1. RQST CONS CHECK 2. RQST IN CRIT ARRAY 3. RQST IN FAILED ARRAY 4. RQST REBUILD/REMAP 5. RQST R/R ABORT 6. RQST INSERT 7. RQST REMOVE 8. PRDFAIL
		Off	No control bit is set or set by any of the following bits: 1. RQST OK 2. RQST RSVD DEVICE 3. RQST HOT SPARE 4. RQST ACTIVE 5. DO NOT REMOVE 6. RQST IDENT 7. DEVICE OFF


2.14 Drive Backplane: 24 Bay

2.14.1 Placement

Top view

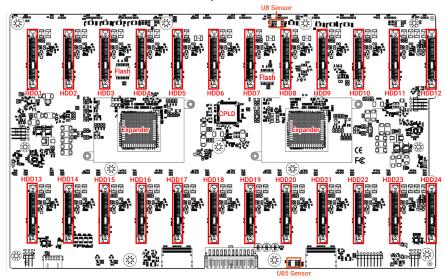

Bottom view

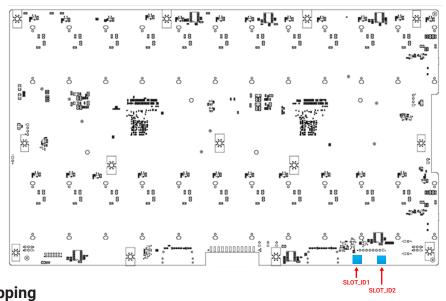

SAS PHY Mapping

	HDD1	HDD2	HDD3	HDD4	HDD5	HDD6	HDD7	HDD8	HDD9	HDD10	HDD11	HDD12
Primary	phy-05	phy-04	phy-03	phy-02	phy-01	phy-00	phy-31	phy-30	phy-29	phy-28	phy-27	phy-26
Secondary	phy-05	phy-04	phy-03	phy-02	phy-01	phy-00	phy-31	phy-30	phy-29	phy-28	phy-27	phy-26






	HDD13	HDD14	HDD15	HDD16	HDD17	HDD18	HDD19	HDD20	HDD21	HDD22	HDD23	HDD24
Primary	phy-06	phy-07	phy-08	phy-09	phy-18	phy-19	phy-20	phy-21	phy-22	phy-23	phy-24	phy-25
Secondary	phy-06	phy-08	phy-07	phy-10	phy-09	phy-11	phy-12	phy-13	phy-18	phy-23	phy-24	phy-25



About JBOD slot mapping, please refer to 2.7 Drive Slot Map.

2.14.2 Connector

Location

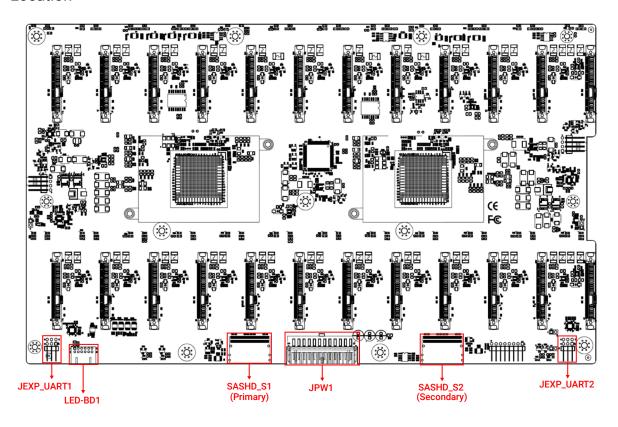

External Connectors

Connector Function	Physical Description	Comments
HDD1~24	SFF-8654 SAS Receptacle(SMT H:14.15mm)	HDD connector

Internal Connectors


Connector Function	Physical Description	Comments		
Power Supply (JPW1)	15 x 2 Pin Power Connector	12V. 4.5 A per pin.		
SAS SlimLine (SASHD_S1) (SASHD_S2)	74 pin 8i SAS SlimLine	SAS Host connection		
UART (JEXP_UART1) (JEXP_UART2)	13 x / Pin Header	Expander SMART/DEBUG port.		
LED Board (LED-BD1)	6 x 2 Pin Header	Connect to Front LED Board		

Power Connector (JPW1)




GND	13	1	GND
GND	14	2	GND
GND	15	3	GND
GND	16	4	GND
GND	17	5	GND
GND	18	6	GND
+12V	19	7	+12V
+12V	20	8	+12V
+12V	21	9	+12V
+12V	22	10	+12V
+12V	23	11	+12V
+12V	24	12	+12V

 Control for Expander (JEXP_UART1/ JEXP_UART2)




DBG_SIRXD	2	1	SM_SIRXD
GND	4	3	GND
DBG_SITXD	6	5	SM_SITXD

 Front LED Board Control for Display HDD LED Status (LED-BD1)



+3V3	1	2	+5V
SLOAD2	3	4	SDATAOUT2
CLOCK2	5	6	GND
SLOAD1	7	8	SDATAOUT1
CLOCK1	9	10	CPLD SDA
PLD SCL	11	12	GND
SLOAD2 CLOCK2 SLOAD1 CLOCK1	5	4 6 8	SDATAOUT GND SDATAOUT CPLD SDA

2.14.3 LED Indicator

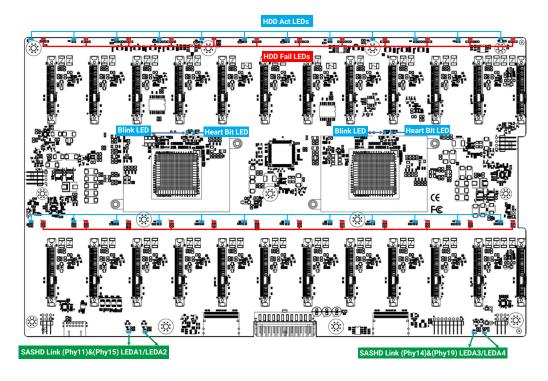


Indicator	Color	Behavior	Description
SAS PHY Link Status		On	Link up
(LEDA1/LEDA2)	Blue	Blinking	Activity is detected
(LEDA3/LEDA4)		Off	Link down
Expander Blink (LED27)	Blue	Blinking	Expander alive, 0.0833Hz
(LED25)	Bide	Diriking	(12 seconds per cycle)
Expander HeartBit (LED28) (LED26)	Blue	Blinking	Expander FW running
		On	HDD present
HDD Activity LEDs	Blue	Blinking	HDD Activity detected: 8Hz
		Off	HDD Locate: 0.5Hz
			Set by any of the following bits:
		On	1. RQST MISSING
			2. RQST FAULT
			Set by any of the following bits:
			1. RQST CONS CHECK
		Dialina	2. RQST IN CRIT ARRAY
			RQST IN FAILED ARRAY RQST REBUILD/REMAP
		Blinking	5. RQST REBUILD/REIMAP
			6. RQST INSERT
HDD Fault/Status	Red		7. RQST REMOVE
LEDs	1100		8. PRDFAIL
			No control bit is set or set by any of the
			following bits:
			1. RQST OK
			2. RQST RSVD DEVICE
		Off	3. RQST HOT SPARE
			4. RQST ACTIVE
			5. DO NOT REMOVE
			6. RQST IDENT
			7. DEVICE OFF

Chapter 3 Sub-system Configuration Setup

3.1 Supported Configuration and Unsupported Feature

3.1.1 Supported Multiple Host/Path Access

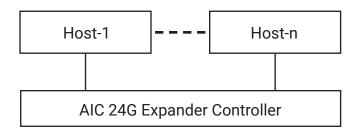

To have multiple host/path access support (the host number can be up to the number of wide ports on each AIC® 24G Expander Controller), only the following drives are supported for shared access:

- 1. SAS drive / Nearline SAS drive
- 2. SATA drive with an interposer which provides SATA-to-SAS conversion

3.1.2 Unsupported Feature

- 1. Enclosure logical identifier can be changed.
- 2. Locating a drive via any HBA utility. Users should send standard SES command to locate a drive.
- 3. The management software MegaRAID Storage Manager with LSI 6G RAID Card is not supported.

3.2 SES Inband Features

To ensure proper function, high performance, and durability, J4108-02-04X has implemented SCSI Enclosure Services to monitor the status of power supply, system cooling fan, and working temperature. It also has indicators to deliver the status of fail devices such as power supply or cooling fan. You can get the information directly from the front indicators to know how your enclosure works.

For detailed information, please visit http://www.t10.org

If you are a member of the T10 working group, the Standard which controlled by T10 technical committee, could be found at

http://www.t10.org/cgi-bin/ac.pl?t=f&f=ses2r19a.pdf

3.2.1 SES Pages

00h - List of supported diagnostic pages

01h - SES configuration

02h - SES enclosure control / enclosure status

04h - SES String In

05h - SES Threshold Out / In

07h - SES element descriptor

0Ah - SES additional element

0Eh - SES download microcode control / SES download microcode status

83h - SES Vendor specific page: Canister Number

8Ch - SES Vendor specific page: Firmware Version and MFG Version

3.2.2 SES Elements

02h - Power Supply

03h - Cooling

04h - Temperature Sensor

0Eh - Enclosure

12h - Voltage

17h - Array Device

3.2.3 Implementation on SES Pages

3.2.3.1 SES String In Page

Get PMBUS information with String In Page.

String In Format

BYTE/BIT	7	6	5	4	3	2	1	0
0	I2C cong	gestion (0:	no conge	estion, 1: c	congestio	n or failure	e)	
1	DCLLMo	DOLL Madulat CTATUC MODD						
2	P30 10100	PSU Module1 STATUS_WORD						
3	DOLLMO	DOLL Modules CTATUS WORD						
4	PSU Module2 STATUS_WORD							
5-14	Reserve	Reserved (0xFF)						

3.2.3.2 SES Threshold Out / In

It includes only Temperature Sensor and Voltage Sensor elements.

Threshold control element format

BYTE/BIT	7	7 6 5 4 3 2 1 0						
0	REQUES	REQUESTED HIGH CRITICAL THRESHOLD						
1	REQUES	REQUESTED HIGH WARNING THRESHOLD						
2	REQUES	REQUESTED LOW WARNING THRESHOLD						
3	REQUES	TED LOW	CRITICAL	.THRESH	OLD			

Threshold status element format

BYTE/BIT	7	6	5	4	3	2	1	0
0	HIGH CR	HIGH CRITICAL THRESHOLD						
1	HIGH WA	HIGH WARNING THRESHOLD						
2	LOW WA	LOW WARNING THRESHOLD						
3	LOW CR	TICAL TH	IRESHOLD)				

3.2.3.3 SES Vendor specific page: Canister Number (page code 83h) Out / In The length N of canister number can be $0\sim30$ bytes. If no canister number is entered (N=0), then canister number is restored to default: $0x20\ 0x20\ 0x20\ 0x20\ 0x20\ 0x20\ 0x20\ 0x20\ 0x20\ 0x20\ 0x20$ (8 spaces in ASCII).

Canister Number control format

BYTE/BIT	7	6	5	4	3	2	1	0
0~N	Canister	Number						

If no canister number is found, return Status = 1 (failed) only, else return Status=0 (success) followed by canister number.

Canister Number status format

BYTE/BIT	7	6	5	4	3	2	1	0
0	Status (0	Status (0: success, 1: failed)						
1~N (if success)	Canister	Number						

3.2.3.4 SES Vendor specific page: Firmware Version and MFG Version (page code 8Ch) In There are one firmware version (4 bytes) and one MFG version (4 bytes) per expander. There are 4 expanders in 4U78 and 5 expanders in 4U108.

Firmware Version and MFG Version status format

BYTE/BIT	7	6	5	4	3	2	1	0
0~3	Hub expa	ınder firmv	vare versio	n				
4~7	Hub expa	nder MFG	version					
8~11	First Edge	e firmware	version					
12~15	First Edge	e MFG vers	sion					
16~19	Second E	Second Edge firmware version						
20~23	Second E	Second Edge MFG version						
24~27	Third Edg	Third Edge firmware version						
28~31	Third Edg	Third Edge MFG version						
32~35	Fourth Ed	Fourth Edge firmware version (only applicable to 4U108)						
36~39	Fourth Ed	lge MFG v	ersion (onl	y applicab	e to 4U10	8)		

3.2.4 Implementation on SES Elements

Only the fields highlighted in green are supported.

3.2.4.1 Power Supply Element

(A) Power Supply Control Element

BYTE/BIT	7	6	5	4	3	2	1	0	
		COMMON CONTROL							
0	SELECT	T PRDFAIL DISABLE RST Reserved							
1	RQST IDENT	DO NOT REMOVE							
2			Reserved						
3	Reserved	RQST FAIL	RQST ON			Reserved			

Field	Value
RQST ON	Please refer to section "SES Element Control Functions" for details.

(B) Power Supply Status Element

BYTE/BIT	7	6	5	4	3	2	1	0			
0	COMMON STATUS										
U	Reserved	PRDFAIL	DISABLE	SWAP	El	EMENT ST	TATUS COL	DE			
1	IDENT	DO NOT REMOVE		Reserved							
2		Rese	erved	rved DC OVER UNDER CURRENT Reser							
3	HOT SWAP	FAIL	RQSTED ON	OFF	OVERTMP FAIL	TEMP WARN	AC FAIL	DC FAIL			

Field	Value
ELEMENT	OK: No failure or warning conditions detected
STATUS CODE	CRITICAL: FAIL bit is set due to one or more failure condition
FAIL	A failure condition is detected
RQSTED ON	1: On
	0: Off
OFF	1: Off
	0: On
AC FAIL	A failure condition is detected
DC FAIL	A failure condition is detected

3.2.4.2 Cooling Element

(A) Cooling Control Element

BYTE/BIT	7	6	5	4	3	2	1	0			
		COMMON CONTROL									
0	SELECT	PRDFAIL	DISABLE	RST SWAP		Reserved					
1	RQST IDENT	DO NOT REMOVE		Reserved							
2			'								
3	Reserved	RQST FAIL	RQST ON	Rese	erved REQUESTED SPEED CODE						

Field	Value
RQST IDENT	Please refer to section "SES Element Control Functions" for details.
REQUESTED SPEED CODE	Please refer to section "SES Element Control Functions" for details.

(B) Cooling Status Element

BYTE/BIT	7	6	5	4	3	2	1	0				
0		COMMON STATUS										
U	Reserved	PRDFAIL	DISABLED	SWAP	El	LEMENT ST	TATUS COL)E				
1	IDENT	DO NOT REMOVE		Reserved		ACTUAL	FAN SPEE	D (MSB)				
2			ACTUAL FAN SPEED (LSB)									
3	HOT SWAP	FAIL	RQSTED ON	OFF	Reserved	ACTU	AL SPEED	CODE				

Field	Value
ELEMENT	OK: Actual fan speed > 0
STATUS CODE	CRITICAL: The fan RPM can't be detected or equal to 0.
IDENT	Applicable only for Cooling element 0 0: Enable the smart fan function 1: Disable the smart fan function
ACTUAL FAN SPEED	Current fan RPM
FAIL	The fan RPM can't be detected or equal to 0.

3.2.4.3 Temperature Sensor Element

(A) Temperature Sensor Control Element

BYTE/BIT	7	6	5	4	3	2	1	0	
		COMMON CONTROL							
0	SELECT	PRDFAIL	DISABLE	RST SWAP		Rese	erved		
1	RQST IDENT	RQST FAIL		OFFSET F	OR REFERE	NCE TEMI	PERATURE		
2			REC	UESTED T	EMPERAT	URE			
3	RQST OVERRIDE				Reserved				

(B) Temperature Sensor Status Element

BYTE/BIT	7	6	5	4	3	2	1	0			
0		COMMON STATUS									
	Reserved	PRDFAIL DISABLE SWAP ELEMENT STATUS COL			DE						
1	IDENT	FAIL		OFFSET FOR REFERENCE TEMPERATURE							
2			TEMPERATURE								
3	RQSTED OVERRIDE		Reserved		OT FAILURE	OT WARNING	UT FAILURE	UT WARNING			

Field	Value
ELEMENT STATUS CODE	OK: Everything is Ok NON-CRITICAL: If either warning limit is exceeded CRITICAL: If either failure limit is exceeded
FAIL	A warning or failure condition is detected
TEMPERATURE	Temperature reading
OT FAILURE	Temperature has exceeded the failure high threshold value
OT WARNING	Temperature has exceeded the warning high threshold value
UT FAILURE	Temperature is below the failure low threshold value
UT WARNING	Temperature is below the warning low threshold value

3.2.4.4 Enclosure Element

(A) Enclosure Control Element

BYTE/BIT	7	6	5	4	3	2	1	0				
		COMMON CONTROL										
0	SELECT	PRDFAIL	DISABLE	RST SWAP		Res	Reserved					
1	RQST IDENT		Reserved									
2		CYCLE JEST		POWER CYCLE DELAY								
3		Р	OWER OFF	DURATIO	N		REQUEST FAILURE	REQUEST WARNING				

Field	Value
POWER CYCLE REQUEST	Please refer to section "SES Element Control Functions" for details.
POWER CYCLE DELAY	Please refer to section "SES Element Control Functions" for details.
POWER OFF DURATION	Please refer to section "SES Element Control Functions" for details.
REQUEST FAILURE	Please refer to section "SES Element Control Functions" for details.
REQUEST WARNING	Please refer to section "SES Element Control Functions" for details.

(B) Enclosure Status Element

BYTE/BIT	7	6	5	4	3	2	1	0				
0		COMMON STATUS										
U	Reserved	PRDFAIL	DISABLE	SWAP		ELEMENT	ENT STATUS CODE					
1	IDENT		Reserved									
2		TIM	TIME UNTIL POWER CYCLE FAILURE WARNING INDICATION									
3		REQUE	ST POWE	R OFF DUR	ATION		FAILURE REQUESTED	WARNING REQUESTED				

Field	Value
ELEMENT	OK
STATUS CODE	OK
	The time until the enclosure's power is scheduled to be off.
	0: No Power cycle scheduled,
TIME UNTIL	1~60: The enclosure is scheduled to begin a power cycle after
POWER CYCLE	the indicated number of minutes.
	63: The enclosure is scheduled to begin a power cycle after
	zero minute.

	The time that power is scheduled to keep off when power is cycled.
REQUEST POWER OFF	0: (i) No power cycle is scheduled or (ii) It is scheduled to be kept off for 10 seconds.
DURATION	1~60: Power is scheduled to be kept off for the indicated number of minutes. 63: Power is scheduled to be kept off until manually restored.
FAILURE REQUESTED	Set by the REQUEST FAILURE on Enclosure Control Element
WARNING REQUESTED	Set by the REQUEST WARNING on Enclosure Control Element.

3.2.4.5 Voltage Element

(A) Voltage Control Element

BYTE/BIT	7	6	5	4	3	2	1	0
	COMMON CONTROL							
0	SELECT	PRDFAIL	DISABLE	RST SWAP	Reserved			
1	RQST IDENT	RQST FAIL	Reserved					
2	Reserved							
3	Reserved							

(B) Voltage Status Element

BYTE/BIT	7	6	5	4	3	2	1	0	
0	COMMON STATUS								
0	Reserved	PRDFAIL	DISABLE	SWAP	ELEMENT STATUS CODE)E	
1	IDENT	FAIL	Reserved		WARN OVER	WARN UNDER	CRIT OVER	CRIT UNDER	
2		VOLTACE							
3		VOLTAGE							

Field	Value
ELEMENT STATUS CODE	OK: Everything is Ok NON-CRITICAL: If either warning limit is exceeded CRITICAL: If either failure limit is exceeded
FAIL	A warning or failure condition is detected
WARN OVER	Voltage has exceeded the warning high threshold value
WARN UNDER	Voltage is below the warning low threshold value
CRIT OVER	Voltage has exceeded the failure high threshold value
CRIT UNDER	Voltage is below the failure low threshold value
VOLTAGE	Voltage reading

3.2.4.6 Array Device Element

(A) Array Device Control Element

BYTE/BIT	7	6	5	4	3	2	1	0		
-		COMMON CONTROL								
0	SELECT	PRDFAIL	DISABLE	RST SWAP	Reserved0					
1	RQST OK	RQST RSVD DEVICE	RQST HOT SPARE	RQST CONS CHECK	RQST IN CRIT ARRAY	RQST IN FAILED ARRAY	RQST REBULD/ REMAP	ROST R/R ABORT		
2	RQST ACTIVE	DO NOT REMOVE	Reserved 2	RQST MISSING	RQST INSERT	RQST REMOVE	RQST IDENT	Reserved 1		
3	Reserved 5	Reserved 4	RQST FAULT	DEVICE OFF	ENABLE BYP A	ENABLE BYP B	Reserved3			

Field	Value
PRDFAIL	Please refer to section "SES Element Control Functions" for details.
RQST OK	Please refer to section "SES Element Control Functions" for details.
RQST RSVD DEVICE	Please refer to section "SES Element Control Functions" for details.
RQST HOT SPARE	Please refer to section "SES Element Control Functions" for details.
ROST CONS CHECK	Please refer to section "SES Element Control Functions" for details.
ROST IN CRIT ARRAY	Please refer to section "SES Element Control Functions" for details.
RQST IN FAILED ARRAY	Please refer to section "SES Element Control Functions" for details.
RQST REBUILD/ REMAP	Please refer to section "SES Element Control Functions" for details.
RQST R/R ABORT	Please refer to section "SES Element Control Functions" for details.
RQST ACTIVE	Please refer to section "SES Element Control Functions" for details.
DO NOT REMOVE	Please refer to section "SES Element Control Functions" for details.
Reserved2	Please refer to section "SES Element Control Functions" for details.
RQST MISSING	Please refer to section "SES Element Control Functions" for details.
RQST INSERT	Please refer to section "SES Element Control Functions" for details.
RQST REMOVE	Please refer to section "SES Element Control Functions" for details.
RQST IDENT	Please refer to section "SES Element Control Functions" for details.
Reserved5	Please refer to section "SES Element Control Functions" for details.
RQST FAULT	Please refer to section "SES Element Control Functions" for details.
DEVICE OFF	Please refer to section "SES Element Control Functions" for details.

(B) Array Device Status Element

BYTE/	7	6	5	4	3	2	1	0
BIT								
0				COMMON	STATUS			
	Reserved	PRDFAIL	DISABLE	SWAP		ELEMENT S	TATUS CODI	Ē
1	ОК	RSVD DEVICE	HOT SPARE	CONS CHK	IN CRIT ARRAY	IN FAILED ARRAY	REBUILD/ REMAP	R/R ABORT
2	APP CLIENT BYPASSED A	DO NOT REMOVE	ENCLOSURE BYPASSED A	ENCLOSURE BYPASSED B	READY TO INSERT	RMV	IDENT	REPORT
3	APP CLIENT BYPASSED B	FAULT SENSED	FAULT REQSTD	DEVICE OFF	BYPASSED A	BYPASSED B	DEVICE BYPASSED A	DEVICE BYPASSED B

Field	Value
PRDFAIL	Set by the PRDFAIL on Array Device Control Element
ELEMENT STATUS CODE	OK: A drive is detected in the slot NOT INSTALLED: No drive is installed in the slot
ОК	Set by the RQST OK on Array Device Control Element
RSVD DEVICE	Set by the RQST RSVD DEVICE on Array Device Control Element
HOT SPARE	Set by the RQST HOT SPARE on Array Device Control Element
CONS CHK	Set by the RQST CONS CHECK on Array Device Control Element
IN CRIT ARRAY	Set by the RQST IN CRIT ARRAY on Array Device Control Element
IN FAILED ARRAY	Set by the RQST IN FAILED ARRAY on Array Device Control Element
REBUILD/ REMAP	Set by the RQST REBUILD/REMAP on Array Device Control Element
R/R ABORT	Set by the RQST R/R ABORT on Array Device Control Element
DO NOT REMOVE	Set by the DO NOT REMOVE on Array Device Control Element
READY TO INSERT	Set by the RQST INSERT on Array Device Control Element
RMV	Set by the RQST REMOVE on Array Device Control Element
IDENT	Set by the RQST IDENT on Array Device Control Element
FAULT REQSTD	Set by the RQST FAULT on Array Device Control Element
DEVICE OFF	Set by the DEVICE OFF on Array Device Control Element

3.2.5 SES Element Control Functions

3.2.5.1 LED indicators (blue and red) associated with an attached disk drive

Array Device Slot control element

BYTE/BIT	7	6	5	4	3	2	1	0			
		COMMON CONTROL									
0	SELECT	PRDFAIL	DISABLE	RST SWAP	Reserved0						
1	RQST OK	RQST RSVD DEVICE	RQST HOT SPARE	RQST CONS CHECK	RQST IN CRIT ARRAY	RQST IN FAILED ARRAY	RQST REBULD/ REMAP	RQST R/R ABORT			
2	RQST ACTIVE	DO NOT REMOVE	Reserved 2	RQST MISSING	RQST INSERT	RQST REMOVE	RQST IDENT	Reserved 1			
3	Reserved 5	Reserved 4	RQST FAULT	DEVICE OFF	ENABLE BYP A	ENABLE BYP B	Reserved 3				

The default behavior for blue LED is "LED is on when the disk is not busy, and off when the disk is executing a command." When the "RQST IDENT" bit is set, the blue LED overwrites its default behavior with a slow blink while the red LED is off. The blue LED is set "Activity" for not overwriting its default behavior.

The behavior "Fast Blink" is "LED is blinking at 2Hz frequency."

The behavior "Slow Blink" is "LED is blinking at 0.5Hz frequency."

The behavior "ON"/"OFF" is "LED is solid ON/OFF without blinking."

Slot Control Bit	Blue LED	Red LED
RQST OK	Activity	OFF
RQST RSVD DEVICE	Activity	OFF
RQST HOT SPARE	Activity	OFF
RQST CONS CHECK	Activity	Fast Blink
RQST IN CRIT ARRAY	Activity	Slow Blink
RQST IN FAILED ARRAY	Activity	Slow Blink
RQST REBUILD/REMAP	Activity	Fast Blink
RQST R/R ABORT	Activity	Slow Blink
RQST ACTIVE	Activity	OFF
DO NOT REMOVE	Activity	OFF
RQST MISSING	ON	ON
RQST INSERT	Activity	Slow Blink
RQST REMOVE	Activity	Slow Blink
RQST IDENT	Slow Blink	OFF (12G Edge) Slow Blink (24G Edge)
RQST FAULT	ON	ON
DEVICE OFF	OFF	OFF
PRDFAIL	Activity	Slow Blink

How to turn on/off the power of a drive slot

Array Device Slot control element

BYTE/BIT	7	6	5	4	3	2	1	0			
		COMMON CONTROL									
0	SELECT	PRDFAIL	DISABLE	RST SWAP	Reserved0						
1	RQST OK	RQST RSVD DEVICE	RQST HOT SPARE	ROST CONS CHECK	RQST IN CRIT ARRAY	ROST IN FAILED ARRAY	RQST REBULD/ REMAP	RQST R/R ABORT			
2	RQST ACTIVE	DO NOT REMOVE	Reserved 2	RQST MISSING	RQST INSERT	RQST REMOVE	RQST IDENT	Reserved 1			
3	Reserved 5	Reserved 4	RQST FAULT	DEVICE OFF	ENABLE BYP A	ENABLE BYP B	Reserved3				

The "DEVICE OFF" for a drive slot is defined in the bit4, byte3 of the "Array Device Slot control element" in the SES specification. Set the bit to turn off a slot power, and vice versa. We use the software package "sg3_utils" on Linux for example, and have a SAS HBA and a cable to connect your host with the expander.

(A) Show the device for AIC® Expander Controller (canister)

\$ sg_map -i

/dev/sg2 AIC 24G 4U108Hub 1830

(B) Get the current state of a slot power. The "Device off=0" means the slot power is on.

\$ sg_ses --page=2 /dev/sg2

Element 0 descriptor:

App client bypass B=0, Fault sensed=0, Fault reqstd=0, Device off=0

(C) Get the descriptor of a slot power

\$ sg_ses --page=7 /dev/sg2

Element 0 descriptor: Disk001

(D) Turn off a slot power

\$ sg_ses --descriptor=Disk001 --set=3:4:1 /dev/sg2

(E) Turn on a slot power

\$ sg_ses --descriptor=Disk001 --clear=3:4:1 /dev/sg2



NOTE

This function is not recommended to use with RAID card due to the RAID card limitation

3.2.5.2 How to power off the entire enclosure

Power Supply control element

BYTE/BIT	7	6	5	1	2	2	1	Λ			
DTIE/DII	/	U	5	4	<u> </u>		l	U			
			COMMON CONTROL								
0	SELECT	PRDFAIL	DISABLE	RST SWAP	RST SWAP Reserved						
1	RQST IDENT	DO NOT REMOVE		Reserved							
2			Reserved								
3	Reserved	RQST FAIL	RQST ON			Reserved					

The "RQST ON" for Power Supply is defined in the bit5, byte3 of the "Power Supply control element" in the SES specification. Clear the bit on Power Supply Element "PowerSupply00" or "PowerSupply01" to power off the entire enclosure. We use the software package "sg3_ utils" on Linux for example, and have a SAS HBA and a cable to connect your host with the expander.

(A) Show the device for AIC® Expander Controller (canister) \$ sg_map -i

/dev/sg2 AIC 24G 4U108Hub 1830

(B) Power off the entire enclosure \$ sg_ses --descriptor=PowerSupply00 --clear=3:5:1 /dev/sg2

3.2.5.3 How to enable/disable the enclosure power cycle by your software

Enclosure control element

BYTE/BIT	7	6	5	4	3	2	1	0		
			COMMON CONTROL							
0	SELECT	PRDFAIL	DISABLE	RST SWAP	RST SWAP Reserved					
1	RQST IDENT			Reserved						
2		CYCLE UEST		POWER CYCLE DELAY						
3		P	OWER OFF	DURATIO	N		REQUEST FAILURE	REQUEST WARNING		

The "POWER CYCLE REQUEST", "POWER CYCLE DELAY" and "POWER OFF DURATION" for Enclosure are defined in the bit7~6, byte2, bit5~0, byte2 and bit7~2, byte3 of the "Enclosure" control element" in the SES specification. Set "POWER CYCLE REQUEST" as 01b to begin a power cycle in minutes set by "POWER CYCLE DELAY" (1~60 minutes, 0 for beginning power cycle immediately) and keep off for minutes set by "POWER OFF DURATION" (set 1~60 minutes, 0 for 10 seconds and 63 for keeping off). A request to begin a power cycle while a previous request is still active should override the previous request. Set "POWER CYCLE REQUEST" as 10b to cancel any scheduled power cycle.

(A) Show the device for AIC® Expander Controller (canister) \$ sq_map -i

1830 /dev/sg2 AIC 24G 4U108Hub

(B) Request to begin a power cycle (POWER CYCLE REQUEST = 01b) after 10 minutes (POWER CYCLE DELAY = 10 = 0Ah) and keep off for 3 minutes (POWER OFF DURATION =3):

sg_ses --descriptor=EnclosureElement00 --set=2:7:14=0x1283 /dev/sg2

3.2.5.4 How to enable/disable the enclosure alarm by your software

Enclosure control element

BYTE/BIT	7	6	5	4	3	2	1	0	
0			COMMON CONTROL						
	SELECT	PRDFAIL	DISABLE	RST SWAP		Res	served		
1	RQST IDENT				Reserved				
2	POWER REQI	CYCLE JEST	POWER CYCLE DELAY						
3			POWER OF	DURATION			REQUEST FAILURE	REQUEST WARNING	

The system alarm LED is used for the enclosure alarm and power alarm. The "REQUEST FAILURE" and "REQUEST WARNING" for Enclosure are defined in the bit1, byte3 and bit0, byte3 of the "Enclosure control element" in the SES specification. Setting either bit can enable the enclosure alarm. Clearing both bits disables the enclosure alarm. We use the software package "sg3_utils" on Linux for example, and have a SAS HBA and a cable to connect your host with the expander.

(A) Show the device for AIC® Expander Controller (canister) \$ sg_map -i

/dev/sg2 AIC 24G 4U108Hub 1830

- (B) Enable the enclosure alarm
 - \$ sg_ses --descriptor=EnclosureElement01 --set=3:1:1 /dev/sg2
 - \$ sg_ses --descriptor=EnclosureElement01 --set=3:0:1 /dev/sg2
- (C) Disable the enclosure alarm
 - \$ sg_ses --descriptor=EnclosureElement01 --clear=3:1:1 /dev/sg2 and
 - \$ sg_ses --descriptor=EnclosureElement01 --clear=3:0:1 /dev/sg2

3.2.5.5 How to manually change PWM (fan speed) for all Cooling elements

Cooling control element

BYTE/BIT	7	6	5	4	3	2	1	0			
				COMMON	N CONTROL						
0	SELECT	PRDFAIL	DISABLE	RST SWAP	Reserved						
1	RQST IDENT	DO NOT REMOVE			Rese	Reserved					
2				Reserved							
3	Reserved	RQST FAIL	RQST ON	Rese	erved	REQUES	STED SPEE	D CODE			

The "RQST IDENT" for Cooling is defined in the bit7, byte1 and the "REQUESTED SPEED CODE" is defined in the bit2 ~ 0, byte3 of the "Cooling control element" in the SES specification. Set "RQST IDENT" bit to disable the smart fan function, and then change PWM or fan speed for all Cooling elements by setting the "REQUESTED SPEED CODE" bits. Clear "RQST IDENT" bit to enable the smart fan function again. Please disable the smart fan function before changing PWM or fan speed. Only the first Cooling element of each type (HUB fans and System fans) supports this feature. We use the software package "sg3_utils" on Linux for example, and have a SAS HBA and a cable to connect your host with the expander.

(A) Show the device for AIC® Expander Controller (canister) \$ sg_map -i

/dev/sg2 AIC 24G 4U108Hub 1830

(B) Set "RQST IDENT" of the first Cooling element to disable the smart fan function "HubCoolingElement00" is the first cooling element for the HUB / motherboard, and "SysCoolingElement00" is the first cooling element for the HDDs / backplane. Here we take "SysCoolingElement00" as example.

\$ sg_ses --descriptor= SysCoolingElement00 --set=1:7:1 /dev/sg2

(C) Set "REQUESTED SPEED CODE" of Cooling element 0 to change PWM or fan speed for all Cooling elements. Set "REQUESTED SPEED CODE"=7 (100% PWM) for example. \$ sg_ses --descriptor= SysCoolingElement00 --set 3:2:3=7 /dev/sg2

REQUESTED SPEED CODE	PWM
7	100%
6	90%
5	80%
4	70%
3	60%
2	50%
1	40%
0	Leave at current speed

3.2.5.6 How to update firmware / MFG for the Edge expanders

BYTE/BIT	7	6	5	4	3	2	1	0		
		COMMON CONTROL								
0	SELECT	PRDFAIL	DISABLE	BLE RST Reserved						
1	RQST OK	RQST RSVD DEVICE	RQST HOT SPARE	ROST CONS CHECK	RQST IN CRIT ARRAY	ROST IN FAILED ARRAY	RQST REBULD/ REMAP	RQST R/R ABORT		
2	RQST ACTIVE	DO NOT REMOVE	Reserved 2	RQST MISSING	RQST INSERT	RQST REMOVE	RQST IDENT	Reserved 1		
3	Reserved 5	Reserved 4	RQST FAULT	DEVICE OFF	ENABLE BYP A	ENABLE BYP B	Rese	rved3		

All Edge expanders are hidden behind Hub, so please follow the steps below to update firmware / MFG on Edge0 via inband SAS. The same steps can be applied to the other Edge expanders. We use the software package "sg3_utils" and LSI utility "g3Xflash" on Linux for example, and have a SAS HBA and a cable to connect your host with the expander.

(A) Show the device for AIC® Expander Controller (canister) \$ sg_map -i /dev/sg2 AIC 24G 4U108Hub 1830

(B) Set the "Reserved2" of the first Array Device element on the Edge expander to make it visible. On 4U78, please use "Disk001" for Edge0, "Disk031" for Edge1, and "Disk055" for Edge2. On 4U108, please use "Disk001" for Edge0, "Disk031" for Edge1, "Disk061" for Edge2, and "Disk085" for Edge3.

\$ sg_ses --descriptor=Disk001 --set=2:5:1 /dev/sg2

(C) Get SAS address for the Hub. This example uses SAS address (500605B0:000272BF) for Hub.

\$./g3Xflash -i get avail

(D) Reset Hub to have an additional device for Edge0 \$./g3Xflash -i 500605b0000272bf reset exp (E) Show the devices for the Hub and the Edge0 \$ sg_map -i

/dev/sg2 AIC 24G 4U108Hub 1830 /dev/sg3 AIC 24G 4U108Edge0 1831

(F) Update firmware on Edge0

\$ sg_write_buffer --id=0x0 --in=<firmware filename> --mode=0x2 --offset=0 /dev/sg3

(G) Update MFG of the Edge0

\$ sg_write_buffer --id=0x83 --in=<MFG filename> --mode=0x2 --offset=0 /dev/sg3

(H) Get SAS address of Edge0. The SAS address (50015B20:9000EBBF) is used for Edge0.

\$./g3Xflash -i get avail

(I) Reset the Edge0 to activate its new firmware / MFG.

\$./g3Xflash -i 50015b209000ebbf reset exp

(J) Get the current firmware version on Edge0 for confirmation.

\$./g3Xflash -i 50015b209000ebbf get ver

(K) Set the "Reserved5" of the first Array Device element on the Edge expander to make it invisible

\$ sq_ses --descriptor=Disk001 --set=3:7:1 /dev/sq2

(L) Reset the Hub to refresh the change on Edge0

\$./g3Xflash -i 500605b0000272bf reset exp

3.2.5.7 How to update all firmware/MFG through in-band SES with a tar ball which includes all Edge firmware/MFG and Hub firmware/MFG

Please follow the steps below to update all firmware/MFG through in-band SES with a tar ball which includes all Edge firmware/MFG and Hub firmware/MFG. We use the software package "sg3_utils" on Linux for example, and have a SAS HBA and a cable to connect your host with the expander. The version of the software package "sg3_utils" must be v1.41 or newer.

If Broadcom 24Gb SAS/NVMe eHBA 96xx card is used, the profile ID of the card has to be changed before all firmware/MFG update. The eHBA 96xx firmware phase 8.7 (or newer) and the utility "scrutinyCLI version 8.6" (or newer) can support the profile ID change in the following.

- 1. Run "show -all" using ScrutinyCLI. This should show "Profile Id: 0x2" and "Supported Profile Id: 0x2, 0x0, 0x3".
 - Profile Id 0x1: Entry RAID for mixed SAS, SATA, and NVMe
 - Profile Id 0x2: Feature HBA for mixed SAS, SATA, and NVMe
 - Profile Id 0x3: IT HBA for SAS/SATA only
 - Profile Id 0x4: IT HBA for NVMe only
- 2. Change the profile ID using "ctrl -personality -profileid 0" command
- 3. Reboot the system to activate the new profile
- 4. Run "show -all" again to confirm the new profile "Profile Id: 0x0"
- (A) Show the device for AIC® Expander Controller (canister) \$ sg_map -i /dev/sg2 AIC 24G 4U108Hub 1830
- (B) Set the time-out interval with the option "-t". The update process on 4U78_SE takes about 170 seconds, and the update process on 4U108_SE takes about 215 seconds. \$ sg_write_buffer /dev/sg2 --id=0x04 --bpw=4k --in=4U78_SE_4U108_SE_24G_Edge_24G_Hub.tar --mode=0x2 --offset=0 -t 600

3.3 Configure Serial Command Line Interface

The RS232 setting - baud rate: 38400 bps, data bits: 8, parity: none, stop bits: 1, flow control: none



NOTE

If you need to configure T10 zoning, we recommend using the "one-click" function for T10 zoning of AIC JBOD BMC. Please refer to 4.4.8.10 Zone Configurations for a simple setting. The following section 3.3.2 How to configure T10 zoning is for T10 zoning manual settings and can be skipped.

3.3.1 How to enable/disable T10 zoning The default T10 zoning configuration is off.

- (A) Check the current zoning state cmd> phyzone state Zoning is OFF
- (B) Enable zoning cmd> phyzone on
- (C) Disable zoning cmd> phyzone off

3.3.2 How to configure T10 zoning

Remove the SAS cable (SFF-8674) between the HBA/RAID card and the JBOD-4U108 before configuration T10 zoning. After configuring T10 zoning, please power cycle the JBOD-4U108 and then insert the SAS cable back (SFF-8674).

After enabling T10 zoning, five predefined groups are Group1, Group8, Group9, Group10, and Group11. Each PHY should be in one of the five groups, and all PHYs in a wide port should be in the same group. Each PHY in Group1 can access any PHY in other groups, and vice versa. Each PHY in Group8 cannot access any PHY in Group9, and vice versa.

The command syntax is "phyzone phy_index group." The following example shows how to setup one drive accessed only by the first port and another drive accessed only by the second port.

The configuration for the example is

- (A) PHY8 PHY11 for the first wide port of HUB
- (B) PHY4 PHY7 for the second wide port of HUB
- (C) PHY20 PHY35 for drives on EDGE

```
Step 1 Read the current group for PHY4 of HUB.
  cmd> phyzone 4
  Phy 4 for Zone Group 1
Step 2 Assign the second port (PHY4 - PHY7) for Group9.
  cmd> phyzone 4 9
  cmd> phyzone 5 9
  cmd> phyzone 6 9
  cmd> phyzone 7 9
Step 3 Assign the first port (PHY8 - PHY11) of HUB for Group8.
  cmd> phyzone 8 8
  cmd> phyzone 9 8
  cmd> phyzone 10 8
  cmd> phyzone 11 8
Step 4 Assign the drive on PHY20 of EDGE to be accessed only by the first port of HUB
      instead of the second port.
  cmd> phyzone 20 8
Step 5 Assign the drive on PHY21 of EDGE to be accessed only by the second port of
HUB instead of the first port.
  cmd> phyzone 21 9
Step 6 Rest HUB and EDGE for taking effect with the new settings.
```

cmd> reset



NOTE

The command syntax is "phyzone phy_index group".

EDGE setting: This command can only set the corresponding group of different PHY ID.

For different kind of models and backplanes, the slot number does not equal to PHY ID number. JBOD slot number equals to CONN ELEM INDEX (CONN TYPE=0x20).

JBOD slot 1(Decimal) <=> CONN ELEM INDEX 0x01(Hexadecimal) <=> PHY ID (Decimal) Slot 1 <=> 0x01 <=> 30

```
cmd >phyinfo
                        SSSSSSS
                  PHY
                                                                                  CONN CONN MAP DR
                        STMSTMA
                                                                      ZONE
     DEV
                                                        ROUTE ZONE CTRL CONN ELEM PHY PHY FR
PHY
                  CNG
                        PEPPPPT
      TYPE NLR CNT
                        IIITTTA ATTACHED SAS ADDR TYPE
ID
                                                               GRP
                                                                     BUS TYPE INDX LINK ID BL
00
01
             0x0 0x03
                                                                0x01 0x04 0x00 0x00 0x00 000 11
             0x0 0x03
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00 0x00 001
                                                                                                   11
02
03
04
05
             0x0 0x03
                                                                0x01 0x04 0x00 0x00 0x00 002 11
             0x0
                  0x03
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00 0x00 003
             0x0 0x03
                                                                0x01 0x04 0x00 0x00 0x00 004
             0x0
                                                                0x01 0x04
                                                                            0x00
                  0x03
                                                                                  0x00
                                                                                        0x00
                                                                                               005
06
             0x0 0x03
                                                                0x01 0x04 0x00 0x00 0x00 006 11
07
             0x0
                  0x03
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00
                                                                0x01 0x04 0x00 0x00 0x00 008
             0x0 0x03
             0x0 0x03
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00
             0x0 0x03
                                                                0x01 0x04 0x00 0x00 0x00 010
11
             0x0
                  0x03
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00
                                                                                         0x00
12
             0x0 0x03
                                                                0x01 0x04 0x00 0x00 0x00 012
13
             0x0
                  0x03
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00
                                                                                        0x00 013
14
15
             0x0 0x03
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00
                                                                                        0x00 014
                                                                0x01 0x04 0x00
                                                                                  0x00 0x00 015
                                                                                                   11
             0x0
                  0x03
16
      EXP 22.5G 0x04
                              -1- 50015B21 685A7B3F
                                                                0x01 0x04 0x00
                                                                                  0x00 0x00 016
                             -1- 50015B21_685A7B3F
-1- 50015B21_685A7B3F
17
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00
                                                                                  0x00 0x00 017
18
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 018
                              -1- 50015B21_685A7B3F
-1- 50015B21_685A7B3F
19
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 019
20
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 020
21
22
23
24
25
                              -1- 50015B21_685A7B3F
-1- 50015B21_685A7B3F
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 021
                                                                0x01 0x04 0x00 0x00 0x00 022
      EXP 22.5G 0x04
                             --1- 50015B21_685A7B3F

--1- 50015B21_685A623F

--1- 50015B21_685A623F

--1- 50015B21_685A623F

--1- 50015B21_685A623F

--1- 50015B21_685A623F

--1- 50015B21_685A623F
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 023
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 024
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 025
26
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 026
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 027
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00
                                                                                              028
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 029
                              -1- 50015B21_685A623F
                                                                0x01 0x04 0x00 0x00 0x00 030
      EXP 22.5G 0x04
                              -1- 50015B21_685A623F
-1- 50015B21_685A8D3F
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 031
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 032
      EXP 22.5G 0x04
                              -1- 50015B21_685A8D3F
                                                                0x01 0x04 0x00 0x00 0x00 033
           22.5G 0x04
                              -1- 50015B21 685A8D3F
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00
                                                                                        0x00 034
                               -1- 50015B21 685A8D3F
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 035
                             --1- 50015B21_685A853F

--1- 50015B21_685A853F

--1- 50015B21_685A853F

--1- 50015B21_685A853F

--1- 50015B21_685A8D3F

--1- 50015B21_685A8D3F

--1- 50015B21_685A8D3F

--1- 50015B21_685A8D3F

--1- 50015B21_685A8D3F
           22.5G
                  0x04
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00
                                                                                         0x00
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00 0x00 0x00 037
                                                                0x01 0x04
           22.5G
                  0x04
                                                                            0x00
                                                                                  0x00
                                                                                         0x00 038
      EXP 22.5G 0x04
                                                                0x01 0x04 0x00
                                                                                  0x00
                                                                                         0x00 039
      EXP
           22.5G
                  0x06
                                                                0x01 0x04
                                                                            0x00
                                                                                  0x00
                                                                                         0x00 040
41
      EXP 22.5G 0x06
                                                                0x01 0x04 0x00
                                                                                  0x00
                                                                                        0x00 041
42
      EXP 22.5G 0x06
                                                                0x01 0x04 0x00
                                                                                  0x00
                                                                                        0x00 042
43
      EXP 22.5G 0x06
                                                                0x01 0x04 0x00
                                                                                  0x00
                                                                                        0x00 043
                             --1- 50015B21_685A853F
--1- 50015B21_685A853F
44
      EXP 22.5G 0x06
                                                                0x01 0x04 0x00 0x00 0x00 044
45
      EXP 22.5G 0x06
                                                                0x01 0x04 0x00 0x00 0x00 045
46
                              -1- 50015B21_685A853F
-1- 50015B21_685A853F
      EXP 22.5G 0x06
                                                                0x01 0x04 0x00 0x00 0x00 046
47
      EXP 22.5G 0x06
                                                                0x01 0x04 0x00 0x00 0x00 047
SXP0 END 22.5G 0x01 --11--- 50015B23_68E6893D
SXP1 END 22.5G 0x01 1----1- 50015B23_68E6893F
                                                                0x01 0x04 0x2F 0x6D 0x00 048
                                                                0x01 0x04 0x00 0x00 0x00 049
                                                                0x01 0x04 0x00 0x00 0x00 050
SXP2 END 22.5G 0x01 -1---
                               -- 50015B23_68E6893E
SXP3
             0x0 0x00
                                                                0x00 0x04 0x00 0x00 0x00 051
Expander Change Count:
Zone Configuring:
Self Configuring:
 Configuring: 0
```

Edge0, Edge1, Edge2, Edge3 Top View Location

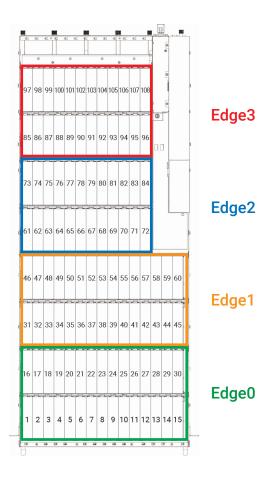


Table 1 Edge3 PHY ID to JBOD slot number

slot	slot	slot	slot	slot	slot	slot	slot	slot	slot	slot	slot
97	98	99	100	101	102	103	104	105	106	107	108
PHY 25	PHY 24	PHY 23	PHY 22	PHY 21	PHY	PHY 19	PHY 18	PHY 09	PHY	PHY 07	PHY 06
	24	23		21	20	19	10	_	08	07	00
slot	slot	slot	slot	slot	slot	slot	slot	slot	slot	slot	slot
85	86	87	88	89	90	91	92	93	94	95	96
PHY	PHY	PHY	PHY	PHY	PHY	PHY	PHY	PHY	PHY	PHY	PHY
26	27	28	29	30	31	00	01	02	03	04	05

Table 2 Edge2 PHY ID to JBOD slot number

| slot |
|------|------|------|------|------|------|------|------|------|------|------|------|
| 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 | 83 | 84 |
| PHY |
| 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 09 | 08 | 07 | 06 |
| slot |
| 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 |
| PHY |
| 26 | 27 | 28 | 29 | 30 | 31 | 00 | 01 | 02 | 03 | 04 | 05 |

Table 3 Edge1 PHY ID to JBOD slot number

| slot |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| PHY |
| 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 11 | 10 | 09 | 08 | 07 |
| slot |
| 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 |
| PHY |
| 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 02 | 03 | 04 | 05 | 06 |

Table 4 Edge0 PHY ID to JBOD slot number

| slot |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 |
| PHY |
| 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 11 | 10 | 09 | 08 | 07 |
| slot |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| PHY |
| 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 02 | 03 | 04 | 05 | 06 |

For example, to assign JBOD slot 1-4 (PHY30/PHY31/PHY32/PHY33) for group 8.

cmd> phyzone on

cmd> phyzone 30 08

cmd> phyzone 31 08

cmd> phyzone 32 08

cmd> phyzone 33 08

```
cmd >
cmd >phyzone on
Succeeded to enable zoning


cmd >phyzone 30 08
Succeeded to set zone group for the phy

cmd >phyzone 31 08
Succeeded to set zone group for the phy

cmd >phyzone 32 08
Succeeded to set zone group for the phy

cmd >phyzone 33 08
Succeeded to set zone group for the phy
```

HUB setting: There are four PHY ID number of each wide port. Please refer to the following table of Hub "PHY ID" and JBOD "wide port".

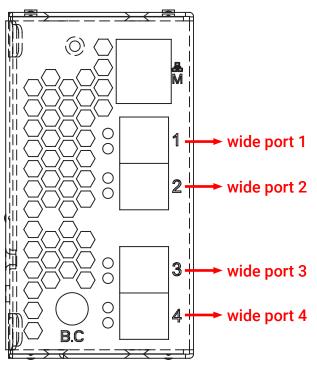

HUB PHY ID to JBOD wide port

wide port 1										
PHY12	PHY13	PHY13 PHY14								
	wide port 2									
PHY08	PHY08 PHY09 PHY10 PHY11									
	wide	port 3								
PHY04	PHY05	PHY06	PHY07							
wide port 4										
PHY00	PHY01	PHY02	PHY03							

For example, to assign wide port 1 (PHY12-PHY15) for group 8.

cmd> phyzone on

cmd> phyzone 12 08

cmd> phyzone 13 08

cmd> phyzone 14 08

cmd> phyzone 15 08



NOTE

Power Cycle

For dual expander JBOD, complete the setting of EDGE and HUB. Meanwhile, PRI EXP and SEC EXP should be applied with the same configuration.

After the T10 zoning configuration, you need to power cycle the JBOD to make PRI EXP and SEC EXP simultaneously operate.

3.3.3 How to get all revisions in AIC® SAS Expander

- (A) Expander firmware revision cmd> rev
- (B) Expander configuration revision cmd> showmfg
- (C) MCU firmware revision or sensor information (MCU firmware revision is reported by Hub only) cmd> sensor
- 3.3.4 How to configure enclosure address (HUB only)
- (A) Get the current enclosure address cmd> enclosure_addr Enclosure Address: 0x500605B0000272BF
- (B) Set the enclosure address with 0x500605B0000272BF. The new setting will take effect after reset. cmd> enclosure_addr 500605B0000272BF cmd> reset
- 3.3.5 How to configure standby timer for all disk drives (EDGE only)

This feature is applicable for SAS/SATA drives. Standby timer is in units of minutes. Setting standby timer with 0 minute disables this feature.

- (A) Get current standby timer cmd> standby_timer Standby Timer: 0 minutes
- (B) Set the standby timer with 10 minutes. The new setting will take effect after reset. cmd> standby_timer 10 cmd> reset



NOTE

This function is not recommended to use with RAID card due to the RAID card limitation.

3.3.6 How to configure wide port checker

This feature is applicable for SAS drives instead of SATA drives. If there is no connection with any active SAS initiator by checking all wide ports, AIC® Expander Controller stops all attached SAS drives to save power consumption of SAS drives. Otherwise, AIC® Expander Controller starts all attached SAS drives to provide drive access service to any active SAS initiator. The same setting should be applied to HUB and EGDE.

- (A) Get the current state of wide port checker cmd> check_wide_portChecking wide port is OFF
- (B) Enable checking wide port. The new setting will take effect after reset.

cmd> check_wide_port on cmd> reset

(C) Disable checking wide port. The new setting will take effect after reset. cmd> check_wide_port off cmd> reset

3.3.7 How to power off/on all disk drives automatically

This feature is applicable for SAS/SATA drives. If there is no connection with any active SAS initiator by checking all wide ports, AIC® Expander Controller powers off all attached SAS/SATA drives to save power consumption. Otherwise, AIC® Expander Controller powers on all attached SAS/SATA drives to provide drive access service to any active SAS initiator. The same setting should be applied to HUB and EDGE.

cmd> check_wide_port standby cmd> reset

3.3.8 How to configure EDFB (EDGE only)

The default EDFB configuration is off.

- (A) Check the current configuration cmd> edfbEDFB is OFF
- (B) Enable the EDFB cmd>edfb on
- (C) Disable the EDFB cmd> edfb off
- 3.3.9 How to configure power setting (HUB only)

This feature is for restoring on AC power loss. Three supported options are "keep off," keep on," and "keep last state." The default setting is "keep off."



NOTE

This feature will be over-written by Hub MFG.

- (A) Get the current power setting cmd> power_setting Power setting: keep off
- (B) Set "keep off" cmd> power_setting keep_off
- (C) Set "keep on" cmd> power_setting keep_on
- (D) Set "keep last state" cmd> power_setting keep_last_state

3.3.10 How to configure zone count

Before you begin, your JBOD must be equipped with HUB/EDGE setting.

There are 3 kinds of zoning options that can be implemented by Command Line interface operation. By using the zoning option, four of the SFF-8674 ports will have a variety of zone group settings.

Remove the SAS cable between the HBA/RAID card and the 4U108 before configuring zone count. Power the 4U108 off after configuring zone count. Power on the 4U108, and then insert the SAS cable.

Three zone configurations supported are one zone, two zones, and four zones. The default configuration is one zone of which T10 zoning configuration is disabled. T10 zoning configuration of the other configurations (two zones and four zones) is enabled. All COM ports for HUB and EDGE should be applied with the same configuration.

- (A) Get current zone count cmd> zonecount Zone Count 1
- (B) Set zone count = 2 cmd> zonecount 2 Succeeded to set zone count 2
- (C) Predefined zones

(C-1) For 4U78

(C-1-1) When Zone Count = 1, T10 zoning is disabled.

HUB:

Zone #	1
Wideport	1, 2, 3, 4

EDGE:

Zone #	1
Slot	1~78

(C-1-2) When Zone Count = 2, T10 zoning is enabled.

HUB:

Zone #	1	2
Wideport	1, 2	3, 4

EDGE:

Zone #	1	2
Slot	1~39	40~78

(C-1-3) When Zone Count = 4, T10 zoning is enabled.

HUB:

Zone #	1	2	3	4
Wideport	1	2	3	4

EDGE:

Zone #	1	2	3	4
Slot	1~20	21~40	41~60	61~78

(C-2) For 4U108

(C-2-1) When Zone Count = 1, T10 zoning is disabled.

HUB:

Zone #	1
Wideport	1, 2, 3, 4

EDGE:

Zone #	1
Slot	1~108

(C-2-2) When Zone Count = 2, T10 zoning is enabled.

HUB:

Zone #	1	2
Wideport	1, 2	3, 4

EDGE:

Zone #	1	2
Slot	1~54	55~108

(C-2-3) When Zone Count = 4, T10 zoning is enabled.

HUB:

Zone #	1	2	3	4
Wideport	1	2	3	4

EDGE:


Zone #	1	2	3	4
Slot	1~27	28~54	55~81	82~108

Zone count 1:


108 drives per zone. All SFF-8674 ports and drives are at the same zone group.

SEE FIGURE BELOW.

 Expander rear panel



Group 1

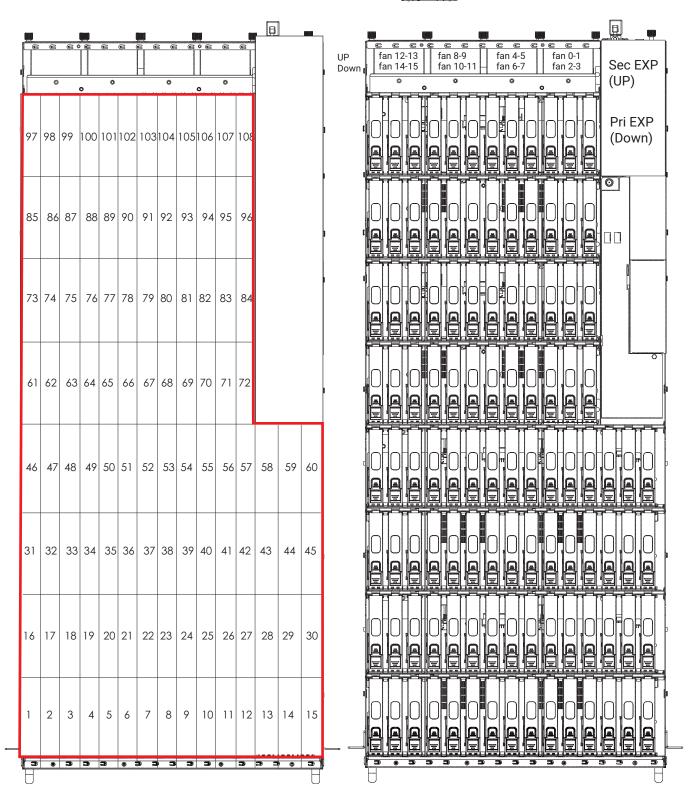



Zone count 2:

54 drives per zone. Port 1 and port 2 are in zone group 1. Port 3 and 4 are in zone group 2.

SEE FIGURE BELOW.

 Expander rear panel



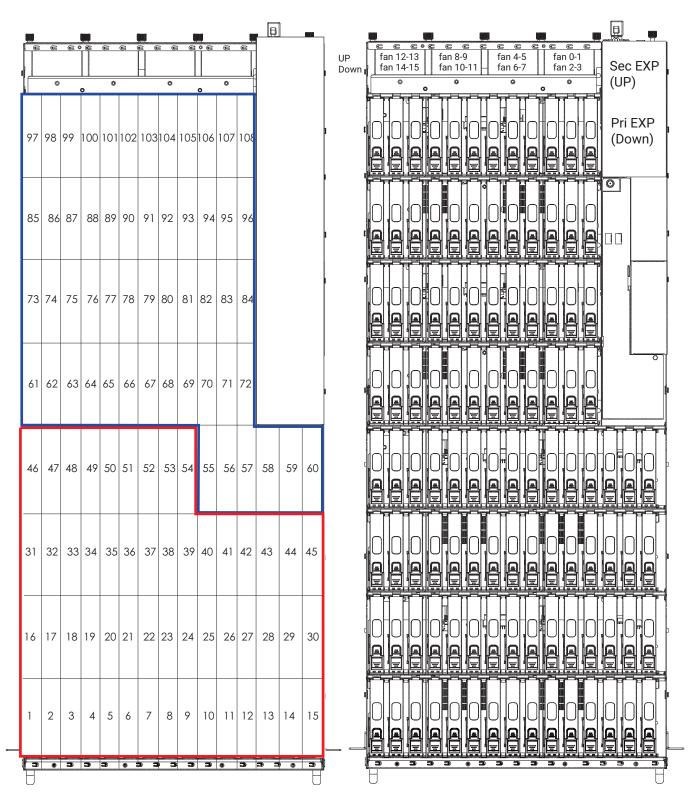

3.3.11 How to configure zoning of the wide port (HUB only)

Remove the SAS cable (SFF-8674) between the HBA/RAID card and the JBOD-4U108 before configuration T10 zoning. After configuring T10 zoning, please power cycle the JBOD-4U108 and then insert the SAS cable back (SFF-8674).

After enabling T10 zoning, five predefined groups are Group1, Group8, Group9, Group10, and Group11.

- (A) Get current zoning of wide port 1 cmd> zone_port 1 Wideport 01 for Zone Group 01
- (B) Set wideport 1 as Zone Group 8 cmd> zone_port 1 8 Succeeded to set zone group for the phy

3.3.12 How to configure zoning of the disk slot (EDGE only)

Remove the SAS cable(SFF-8674) between the HBA/RAID card and the JBOD-4U108 before configuration T10 zoning. After configuring T10 zoning, please power cycle the JBOD-4U108 and then insert the SAS cable back(SFF-8674).

After enabling T10 zoning, five predefined groups are Group1, Group8, Group9, Group10, and Group11.

- (A) Get current zoning of Disk Slot 10 cmd> zone_slot 10 Slot 10 for Zone Group 1.
- (B) Set Disk Slot 10 as Zone Group 8 cmd> zone_slot 10 8 Succeeded to set zone group for the phy

3.4 Vendor Specific Vital Product Data (VPD) Page

The Vendor Specific VPD pages provide MFR_ID, MFR_MODEL, MFR_REVISION, MFR_SERIAL, and MFR_FW_ REVISION of the power module 0 (page code 0xC1) and power module 1 (page code 0xC2).

Vendor Specific VPD Page Format

BYTE/BIT	7	6	5	4	3	2	1	0
1	MFR_ID							
m	IVIFR_ID							
m+1	0x20 (ASCII code space)							
m+2	MED MODEL							
n	MFR_MODEL							
n+1	0x20 (ASCII code space)							
n+2	MFR_REVISION							
0								
o+1	0x20 (ASCII code space)							
o+2	MED CEDIAL							
р	MFR_SERIAL							
p+1	0x20 (ASCII code space)							
p+2	MFR_FW_REVISION							
q								
q+1	0x20 (ASCII code space)							

Chapter 4. BMC Configuration Settings

4.1 Login

1. Push the "[" key, it will show the IPMI serial interface.

```
IPMI Terminal Interface

Usage:
Terminal Text command: [SYS Command]
Terminal IPMI command: [NetFnLun SeqNum Cmd Data 0 ... Data N]

Type [SYS HELP] - To get list of Text Command
Press CTRL+X or CTRL+C - To exit Terminal

IPMI Terminal:/> [
```

Type command for login the interface. #[sys pwd -u admin admin]
It will response [OK]

```
IPMI Terminal:/> [SYS PWD -U admin admin ]
[OK]
```

2. Change user password.

Due to security principles, you need to change your password when logging in for the first time. There are 16 Bytes that can be filled with ASCII Hex, at least 8 Bytes with value, and the rest fill in 0.

Change the password to "12345678":

```
IPMI Terminal:/> [18 00 47 02 02 31 32 33 34 35 36 37 38 00 00 00 00 00 00 00 00 ]
[1C 00 47 00]
```

Retry to login the interface. #[sys pwd -u admin 12345678] It will response [OK]

```
IPMI Terminal:/> [SYS PWD -U admin 12345678 ]
[OK]
```

3. Find LAN information.

```
\mathbf{1}_{\text{hex}} = \mathbf{1}_{\text{dec}}
2_{\text{hex}} = 2_{\text{dec}}
3_{\text{hex}} = 3_{\text{dec}}
\mathbf{5}_{\text{hex}} = 5_{\text{dec}}
6_{\text{hex}} = 6_{\text{dec}}
7_{\text{hex}} = 7_{\text{dec}}
\mathbf{8}_{\text{hex}} = 8_{\text{dec}}
9_{\text{hex}} = 9_{\text{dec}}
A_{hex} = 10_{dec}
\mathbf{B}_{\text{hex}} = 11_{\text{dec}}
C_{\text{hex}} = 12_{\text{dec}}
D_{\text{hex}} = 13_{\text{dec}}
E_{\text{hex}} = 14_{\text{dec}}
F_{\text{hex}} = 15_{\text{dec}}
```

Find LAN static IP /DHCP [30 00 02 01 04 00 00] Find LAN IP [30 00 02 01 03 00 00] Find submask [30 00 02 01 06 00 00] Find gateway [30 00 02 01 0C 00 00]

```
IPMI Terminal:/> [30 00 02 01 04 00 00 ]
[34 00 02 00 11 02]

IPMI Terminal:/> [30 00 02 01 03 00 00 ]
[34 00 02 00 11 C0 A8 15 44]

IPMI Terminal:/> [30 00 02 01 06 00 00 ]
[34 00 02 00 11 FF FF FF 00]

IPMI Terminal:/> [30 00 02 01 0C 00 00 ]
[34 00 02 00 11 C0 A8 15 FE]
```

Find LAN static IP /DHCP: 01 is static IP and 02 is DHCP. The red box represents hexadecimal digits. According to the left figure, the IP is 16*12 + 0 = 192, 16*10 + 8 = 168, 16*1 + 5 = 21, 16*4 + 4 = 68. Therefore, the IP is 192.168.21.68

4. Set LAN information.

Set LAN static IP /DHCP [30 00 01 01 04 01/02] Set LAN IP [30 00 01 01 03 C0 A8 0B 0B] Set submask [30 00 01 01 06 FF FF FF 00] Set gateway [30 00 01 01 0C C0 A8 00 01]

```
IPMI Terminal:/> [30 00 01 01 04 01 ]
[34 00 01 00]

IPMI Terminal:/> [30 00 01 01 03 C0 A8 0B 0B ]
[34 00 01 00]

IPMI Terminal:/> [30 00 01 01 06 FF FF FF 00 ]
[34 00 01 00]

IPMI Terminal:/> [30 00 01 01 0C C0 A8 0B 01 ]
[34 00 01 00]
```


The digit in the red box is completion code.

00 represents the confirmed code.

The digits in the green box are can be configured to any value.


If you want to change the IP address, you must set the LAN status to static.

- 5. Connect to RJ45 port. Set the local host IP to 192.168.11.xx segment.
- 6. Open the web browser and enter default IP http://192.168.11.11. When the login window appears, set the user name and password from step 2.
- 7. Click Log In to continue.

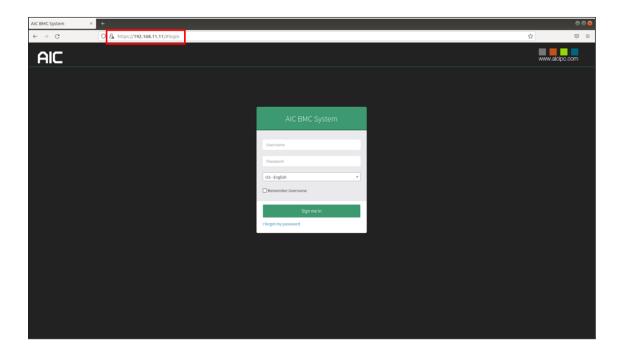

4.2 Sensor's Location for Fan and Temperature

EXP: expander chip

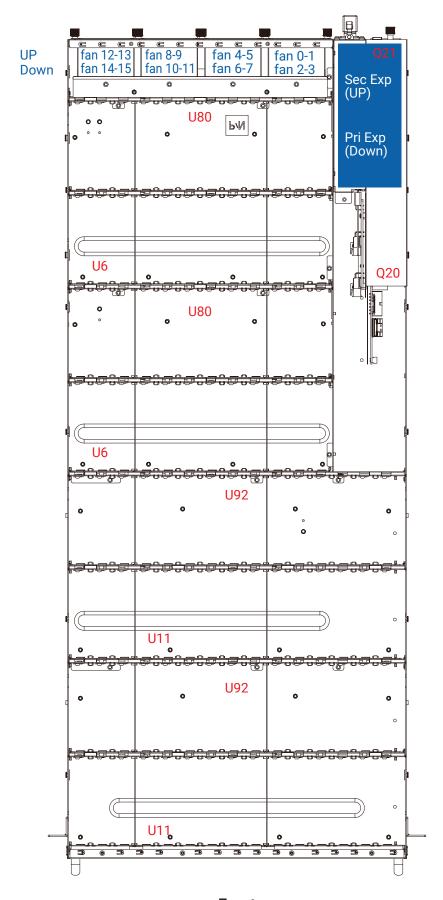


Front

4.3 Expander Setting via SOL

Step 1 Plug in the BMC LAN port.



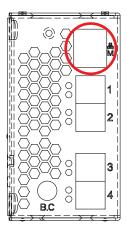

Step 2 Log into the BMC interface. Please refer to 4.1 Login.

Step 3 Initiate SOL. Use one of the methods below to configure the expander setting.


4.3.1 SOL

There are two methods to initiate Sol.

Method 1


1. Select an expander under **Select expander** and click Activate.



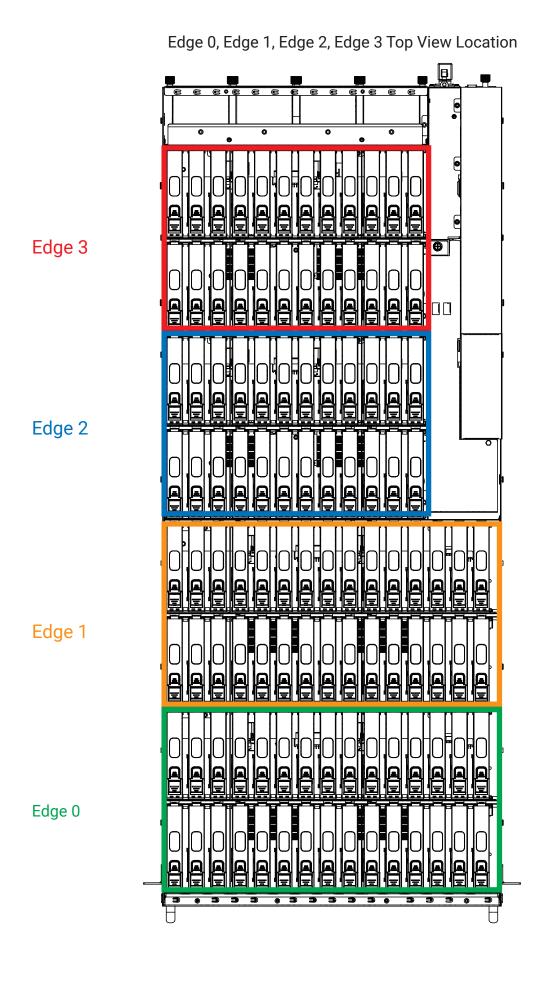

79

2. Now you can use the expander smart console via BMC SOL.

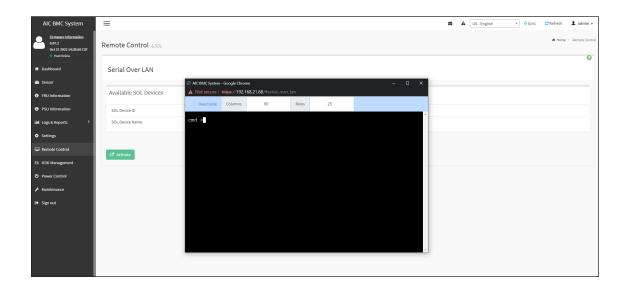

Method 2

1. In addition, you can use ipmitool to start SOL function.

#ipmitool -I lanplus -H <BMC IP> -U admin -P admin sol activate

```
C:\Users\sw2\Desktop\ipmitool_test>ipmitool.exe -I lanplus -H 192.168.11.11 -U a
dmin -P admin sol activate
[SOL Session operational. Use ~? for help]
cnd >
cnd >
cnd >
cnd >
cmd >sensor
Hub Fan-0 speed : 6930 RPM
      Hub Fan-1 speed : 7290 RPM
     System Fan-Ø speed : 5113 RPM
Voltage Sensor 12V : 12.3 V
                        : good
     Power-0
     Power-1
                         : good
     Current Model
                        : 4U78swapHub
                        : off
     Alarm-system
     Alarm-system : off
Alarm-temperature : off
     Alarn-fan
                        : off
                         : off
     Alarn-power
                         : off
      Buzzer-state
     Buzzer-nute
                         : off
     MCU firmware version : 0.2
 cnd >
```

2. When you need to use SOL, type "~." to exit this function.

```
Current Model : 4U78swapHub

Alarm-systen : off
Alarm-temperature : off
Alarm-fan : off
Alarm-power : off
Buzzer-state : off
Buzzer-mute : off

MCU firmware version : 0.2

cmd >
cm
```

3. If you want to switch to another expander, you do not need to close SOL. Use the command below to switch your expander.

SET EXPANDER

NetFN 3C

Command Code: 40h


Message	Byte	Data Field		
Request	1	Expander select 00h: Hub 01h: Edge0 02h: Edge1 03h: Edge2 04h: Edge3 (4U108 only)		
	1	Select Expander		
Response	2	Expander is being updated FFh: idle		
	3	SOL active Expander FFh: idle		

#ipmitool -I lanplus -H <BMC IP> -U admin -P admin raw 0x3C 0x40 0x0

4.4 Web UI

4.4.1 User Name and Password

Initial access of MegaRAC SP-X prompts you to enter the User Name and Password. A sample screenshot of the login screen is given below.

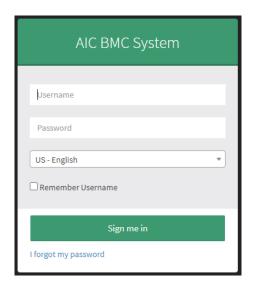

Login page

The fields are explained as follows

Username: Enter your username in this field. **Password:** Enter your password in this field.

Language Selection: Language selection drop-down will be populated based on supported languages in Web UI as a part of multi-language support feature. Drop-down option value will be selected based on the browser language. Default language will be selected as US-English if the browser configured language not supported by Web UI. Entire Web UI pages language strings will be displayed based on selected language from drop-down.

Remember Username: Check this option to remember your login Username. If you select this option, the browser will save your credentials internally in its memory, and when you open that site the next time, it will auto-fill Username for you.

Using MegaRAC SP-X


The MegaRAC GUI consists of various menu items.

4.4.2 Menu Bar

Firmware Information will be displayed with the latest version, date and time details. Power Control Status will be displayed as Host Online. To Change the Power Control Status, click Host Online link.

A screenshot of the menu bar is shown below.

- Dashboard
- Sensor
- FRU Information
- PSU Information
- Logs & Reports
- Settings
- Remote Control
- HDD Management
- Power Control
- Maintenance
- Sign out

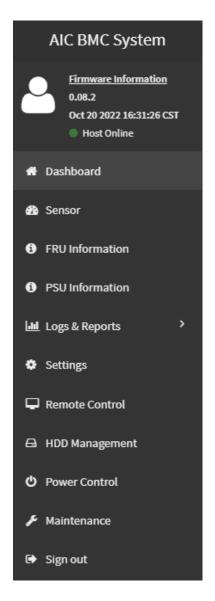

Menu Bar

4.4.3 Quick Button and Logged-in User

The user information and quick buttons are located at the top right of the MegaRAC GUI. A screenshot of the logged-in user information is shown below.



User Information

The logged-in user information shows the logged-in user, his/her privilege and the four quick buttons allowing you to perform the following functions.

Message: Click the **≥** icon to view the event log alert messages. On clicking the messages, it will navigate to the Logs and Reports page.

Language Selection: Change the language to view the language strings in different languages.

Refresh: Click the Refresh icon or pressing key F5 to reload the current page.

Sync: Click the Sync icon to synchronize with Latest Sensor and Event Log updates.


Sign out: Click the sign out icon to log out of the MegaRAC GUI.

Notification: Click **A** to view the notification received.

Help: The Help icon (②) is Located at the top right of each page in MegaRAC GUI. Click this help icon to view more detailed field descriptions

4.4.4 Dashboard

The Dashboard page gives the overall information about the status of a device. To open the Dashboard page, click Dashboard from the menu bar. A sample screenshot of the Dashboard page is shown below.

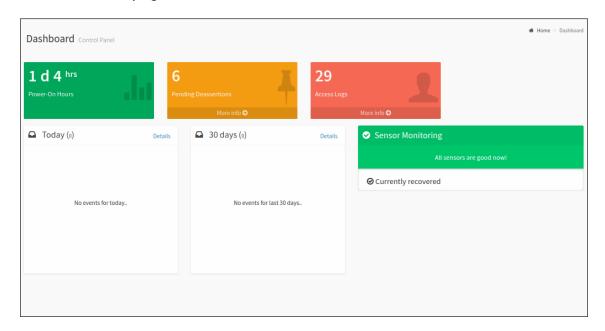

BMC Power-On Hours

BMC Power-On Hours will keep on accumulated and will be reset to zero when you flash a new image.

Pending Deassertions

It lists all the asserted events which are waiting for deassert state. To know about the pending events details, click the More info link. This navigates to the Event Log page and display all the asserted events that are waiting for deassertion.

Access Logs

A graphical representation of all events incurred by various sensors and occupied/ available space in logs can be viewed. If you click on the More info link, you can view the Audit Log page.

Today & 30 Days (Event Logs)

This page displays the list of event logs occurred by the different sensors on this device. Click Details link on Today and 30 days to view the event logs for Today and 30 days respectively.

Sensor Monitoring


It lists all the critical sensors on the device. If you click on any list sensor, you can view the Sensor detail page with the Sensor information and Sensor Events details.

4.4.5 Sensor

The Sensor Readings page displays all the sensor related information.

To open the Sensor Readings page, click Sensor from the menu. Click on any sensor to show more information about that particular sensor, including thresholds and a graphical representation of all associated events.

A screenshot of Sensor Readings page is given below.

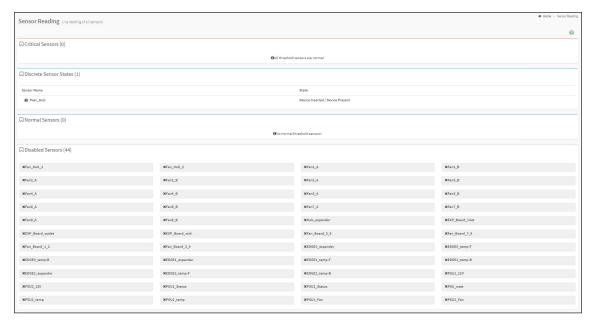

Sensor Readings Page

The Sensor Readings page contains the following information.

In this Sensor Reading page, Live readings for all the available sensors with details like Sensor Name, Status, Current Reading and Behavior will be appeared, else you can choose the sensor type that you want to display from the list. Some examples for sensors are Temperature Sensors and Fan Sensors etc.

4.4.5.1 Sensor Detail

Select a particular Sensor from the Critical Sensor or Normal Sensor lists. The Sensor Information as Live Widget and Thresholds for the selected sensor will be displayed as shown below.

For Illustrative Purpose, a sample screenshot of Sensor detail page with Change Thresholds option is shown and explained below.



Sensor detail



NOTE

Widgets are little gadgets, which provide real time information about a particular sensor. User can track a sensor's behavior over a specific amount of time at specific intervals. The result will be displayed as a line graph in the widget. The session will not expire, until the widgets gets a live data of the last widget that is kept opened.

For the selected sensor, this widget gives a dynamic representation of the readings for the sensor.


Thresholds are of six types:

- Lower Non-Recoverable (LNR)
- Lower Critical (LC)
- Lower Non-Critical (LNC)
- Upper Non-Recoverable (UNR)
- Upper Critical (UC)
- Upper Non-Critical (UNC)

4.4.6 FRU Information

FRU Information page displays the BMC's FRU device information. FRU page shows information like Basic Information, Chassis Information, Board Information and Product Information of the FRU device.

To open the FRU Information page, click FRU Information from the menu bar. Select a FRU Device ID from the FRU Information section to view the details of the selected device. A screenshot of FRU Information page is given below.

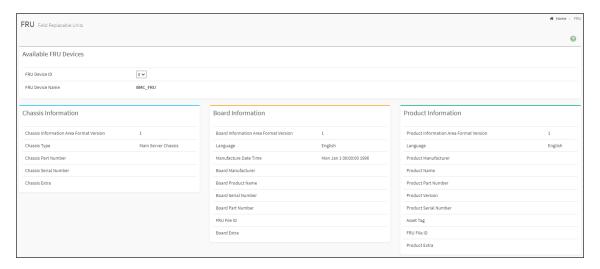

FRU Information Page

The following fields are displayed here for the selected device.

Available FRU Devices

- FRU device ID Select the device ID from the drop down list
- FRU Device Name The device name of the selected FRU device.

Chassis Information

- Chassis Information Area Format Version
- Chassis Type
- Chassis Part Number
- Chassis Serial Number
- Chassis Extra

Board Information

- Board Information Area Format Version
- Language
- Manufacture Date Time
- Board Manufacturer
- Board Product Name
- Board Serial Number
- Board Part Number
- FRU File ID
- Board Extra

Product Information


- Product Information Area Format Version
- Language
- Product Manufacturer
- Product Name
- Product Part Number
- Product Version
- Product Serial Number
- Asset Tag
- FRU File ID
- Product Extra

4.4.7 Logs & Reports

The Logs & Reports page displays the following information.

- IPMI Event Log
- Audit Log

A screenshot displaying the menu items under Logs & Reports is shown below

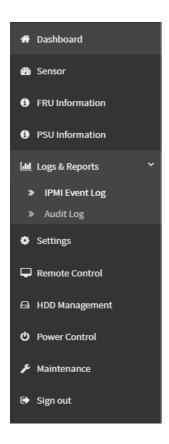


Logs & Reports - Menu

4.4.7.1 IPMI Event Log

This page displays the list of event logs occurred by the different sensors on this device. Double click on a record to see the details of that entry. You can use the sensor type or sensor name filter options to view those specific events or you can also sort the list of entries by clicking on any of the column headers.

To open the Event Log page, click Logs & Reports > Event Log from the menu bar. A sample screenshot of Event Log page is shown below.

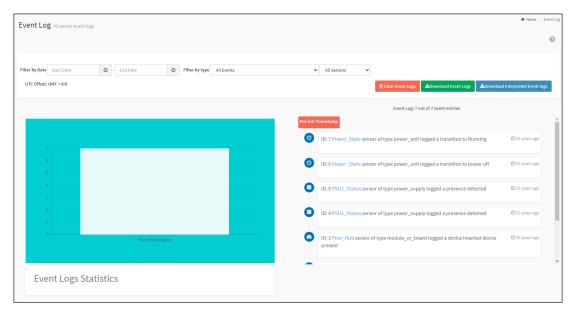

Event Log Page

The Event Log page consists of the following Fields.

Filter By Date: Filtering can be done by selecting Start Date and End Date using Calendar.

Filter By Type: The category could be either All Events, System Event Records, OEM Event Records, BIOS Generated Events, SMI Handler Events, System Management Software Events, System Software - OEM Events, Remote Console Software Events, Terminal Mode Remote Console software Events.

UTC Offset: Displays the current UTC Offset value based on which event Time Stamps will be updated. Navigational arrows can be used to selectively access different pages of the Event Log.

Event Log Statistics: Displays the statistical graph for the selected date.

Clear Event Logs: To delete all the event logs.

Download Event Logs: To download the event logs.

4.4.7.2 Audit Log

Audit Log page will display all the system events occurred in this device that has been already configured.




NOTE

Logs have to be configured under Settings -> Log Settings -> Advanced Log Settings in order to display any entries.

To open the Event Log page, click Logs & Reports > Audit Log from the menu

A sample screenshot of Audit Log page is shown below.

Download: To download the audit logs.

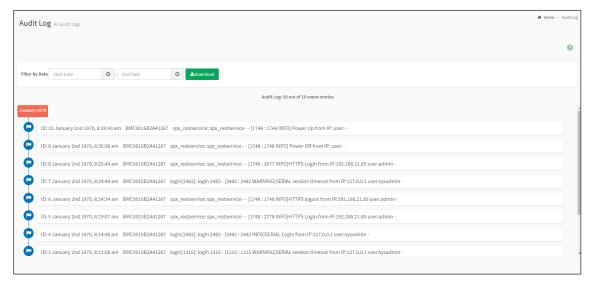

Audit Log

4.4.8 Settings

This group of pages allows you to access various configuration settings. A screenshot of Configuration Group menu is shown below.




Configuration Group Menu

- Date & Time
- Log Settings
- Network Settings
- Platform Event Filter
- Services
- SMTP Settings
- System Firewall
- User Management
- Power Restore Policy
- Zone Configurations

A detailed description of the Configuration menu is given below.

4.4.8.1 Date & Time

This field is used to set the date and time on the BMC. A sample screenshot of Date & Time is shown as below.

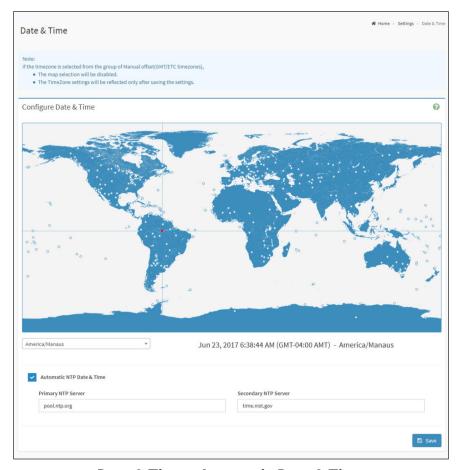

Date & Time - Automatic Date & Time

The Date & Time section consists of the following fields.

Configure Date & Time: Displays Time zone list containing the UTC offset along with the locations and Navigational line to select the location which can be used to display the exact local time.

Select Time Zone: This field is used to set the date and time on the BMC.

Automatic Date & Time: To automatically synchronize Date and Time with the NTP Server.

- **Primary NTP Server:** To configure a primary NTP server to use when automatically setting the date and time.
- Secondary NTP Server: To configure a secondary NTP server to use when automatically set-ting the date and time.

Save: To save the settings.



NOTE

If the time zone is selected as Manual Offset, the map selection will be disabled. The Time Zone settings will be reflected only after saving the settings.

4.4.8.2 Log Settings

System and Audit log page displays a list of system logs and audit logs occurred in this device.

To open Log Settings page, click Settings > Log Settings from the menu bar. A sample screenshot of Log Settings page is shown below.



System and Audit Log Settings

The fields of Log Settings page are explained below.

- SEL Log Settings Policy
- Advanced Log Settings

SEL Log Setting Policy

To open Log Settings page, click Settings > Log Settings > SEL Log Settings Policy from the menu bar. A sample screenshot of SEL Log Settings Policy page is shown below.




SEL Log Settings Policy

This page is used to configure the log policy for the event log. The fields are as followed **Log Policy:** This field is to enable or disable the Linear Storage Policy or Circular Storage Policy.

Save: To save the configured settings

Advanced Log Settings

To open Advanced Log Settings page, click Settings > Log Settings > Advanced Log Settings from the menu bar. A sample screenshot of **Advanced Log Settings Policy** page is shown below.

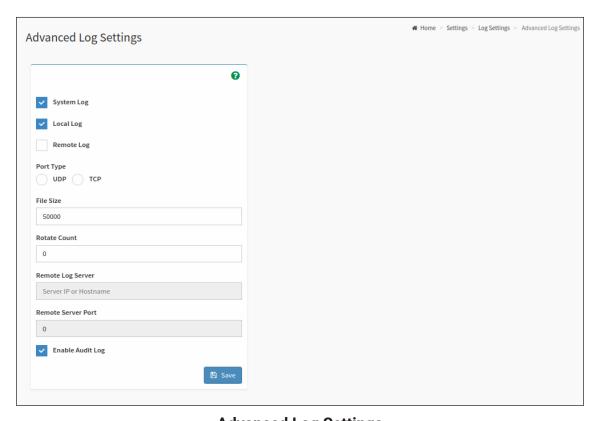

Advanced Log Settings

This page is used to configure the log policy for the event log. The fields are as followed.

System Log: This field is used to enable or disable the System Log. Select **System Log** to view all system events. Entries can be filtered based on their classification levels. Specifies the Location for system logs, whether it should be preserved in a **Local Log/Remote Log**.

Local Log: Select Local Log to save the logs locally (BMC).

Remote Log: Select Remote Log to save the logs in a remote machine.



NOTE

- You can select either *Local Log/Remote Log* or both Logs as per the requirement.
- Either one of the Log selection is mandatory.

Port Type: Port Type is supported with the enable of Remote Log. You can select either UDP/TCP as per the requirement.

File Size: This field is to specify the size of the file in bytes if the selected log type is local.



NOTE

Size ranges from 3 to 65535. Log files are rotated when they grow bigger than size bytes mentioned, with regards for the last rotation time interval (1 minute).

Rotate Count: To back up the log information in back up files.



NOTE

- Values supported are 0 and 1.
 - When log information exceeds the file size, the old log information is automatically moved to back up files based on the rotate count value. If rotate count is zero, then old log information gets cleared permanently.
 - File Size and Rotate Count options will be available only when Local Log is enabled.

Remote Log Server: This field is to specify the Remote server address to log the system events.



NOTE

Server address will support the following:

- IPv4 address format.
- FQDN (Fully qualified domain name) format.
- Maximum allowed size is 64 bytes.

Remote Server Port: This field is to specify the Remote Server port address to log the system events.



NOTE

Remote Log Server and Remote Server Port options will be available only when Remote Log is enabled.


Enable Audit Log: To enable or disable the audit log.

Save: To save the changes

4.4.8.3 Network Settings

The Network Settings Page is used to configure the network settings for the available LAN channels.


A sample screenshot of Network Settings page is shown below.

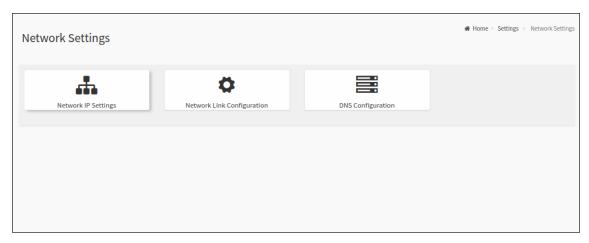

Network Settings

Network IP Settings

To open Network Settings page, click Settings -> Network Settings -> Network IP Settings from the menu bar. A sample screenshot of Network IP Settings Page is shown below.

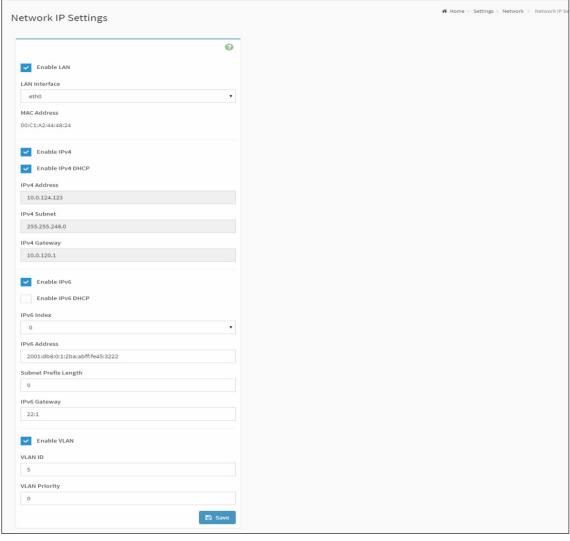

The fields of Network IP Settings page are explained below.

Enable LAN: To enable or disable the LAN Settings.

LAN Interface: Lists the LAN interfaces.

MAC Address: This field displays the MAC Address of the device. This is a read only field.

Enable IPv4: This option is to enable/disable the IPv4 settings in the device.

Enable IPv4 DHCP: This option is to enable IPv4 DHCP support for the selected interface.

IPv4 Address, IPv4 Subnet Mask, and IPv4 Default Gateway: These fields are for specifying the static IPv4 address, Subnet Mask and Default Gateway to be configured to the device.



- IP Address made of 4 numbers separated by dots as in "xxx.xxx.xxx.xxx".
- Each Number ranges from 0 to 255.
- First Number must not be 0.

Enable IPv6: To Enable/Disable the IPv6 configuration settings.

Enable IPv6 DHCP: To Enable/Disable the IPv6 settings in the device. It dynamically configures IPv6 address using DHCP (Dynamic Host Configuration Protocol).



NOTE

Disable this Enable IPv6 DHCP field to enable and enter the values in following fields such as IPv6 Index, IPv6 Address, Subnet Prefix length and IPv6 Gateway.

IPv6 Index: To specify a static IPv6 Index to be configured to the device. E.g.: 0.

IPv6 Address: To specify a static IPv6 address to be configured to the device. Eg: 2004::2010. User can mention.

Subnet Prefix length: To specify the subnet prefix length for the IPv6 settings.



NOTE

Value ranges from 0 to 128.

IPv6 Gateway: Specify v6 default gateway for the IPv6 settings.



If core feature IPV6_COMPLIANCE and SUPPORT_IPMIIPV6_LAN_PARAM_ONLY are enabled, the IPv6 default Gateway field will not be displayed.

Enable VLAN: To enable/disable the VLAN support for selected interface.

VLAN ID: The Identification for VLAN configuration.



NOTE

Value ranges from 2 to 4094.

VLAN Priority: The priority for VLAN configuration.



NOTE


- Value ranges from 0 to 7.
- 7 is the highest priority for VLAN.

Save: To save the entries.

Network Link Configuration

This page is used to configure the network link configuration for available network interfaces.

To open **Network Link** page, click Settings > Network Settings > Network Link Configuration from the menu bar. A sample screenshot of **Network Link Configuration** page is shown below.

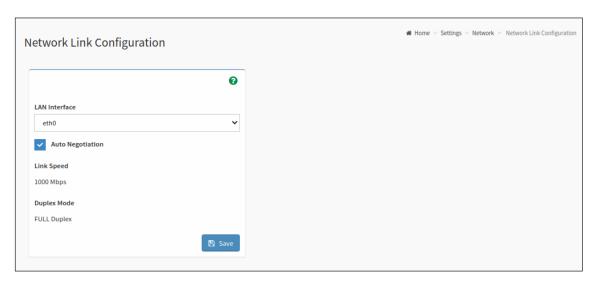

Network Link Configuration Page

The fields of Network Link Configuration page are explained below.

LAN Interface: Select the required network interface from the list to which the Link speed and duplex mode to be configured.

Auto Negotiation: This option is enabled to allow the device to perform automatic configuration to achieve the best possible mode of operation (speed and duplex) over a link.

Link Speed: Link speed will list all the supported capabilities of the network interface. It can be 10/100/1000 Mbps.



NOTE

Link speed of 1000 Mbps is not applicable, when Auto Negotiation is OFF.


Duplex Mode: Duplex Mode could be either Half Duplex or Full Duplex.

Save: To save the settings.

DNC Configuration

The **Domain Name System (DNS)** is a distributed hierarchical naming system for computers, services, or any resource connected to the Internet or a private network. It associates the information with domain names assigned to each of the participants. Most importantly, it translates domain names meaningful to humans into the numerical (binary) identifiers associated with networking equipment for the purpose of locating and addressing these devices worldwide.

The DNS Server settings page is used to manage the DNS settings of a device. To open DNS Server Settings page, click Settings > Network Settings > DNS Configuration from the menu bar. A sample screenshot of DNS Configuration page is shown below.

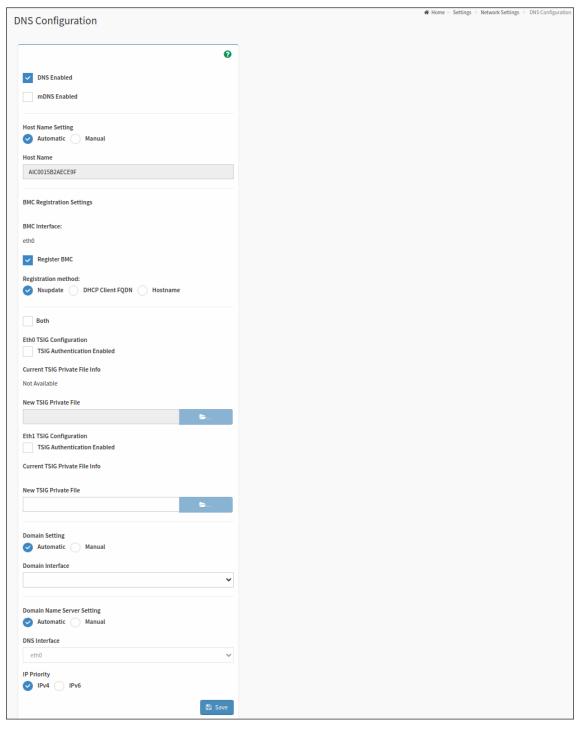

The fields of DNS Configuration page are explained below.

Domain Name Service Configuration

DNS Enabled: To enable/disable all the DNS Service Configurations. **mDNS Enable:** To enable/disable the mDNS Support Configurations. **Host Name Settings:** Choose either Automatic or Manual settings.

Host Name: It displays host name of the device. If the Host setting is chosen as Manual, then specify the host name of the device.



NOTE

- Value ranges from 1 to 64 alpha-numeric characters.
- Special characters '-'(hyphen) and '_'(underscore) are allowed.
- It must not start or end with a '-'(hyphen). IE browsers won't work correctly if any part of the host name contain underscore (_) character.

BMC Registration Settings

BMC Interface: Options to register the BMC through the Interfaces (eth0ð1).

Register BMC: To register BMC through registration method.

Registration Method

Options to register the BMC are through NS Update or DHCP Client FQDN or Hostname.

TSIG Configuration

Both: Check this option to modify TSIG authentication for both interfaces.

Eth 0&1:

- TSIG Authentication Enabled: Check this box to enable TSIG authentication while registering DNS via nsupdate. Separate TSIG files can be uploaded for each LAN interface.
- **Current TSIG Private File:** The information of Current TSIG private file along with its uploaded date/time will be displayed (read-only).
- **New TSIG Private File:** Browse and navigate to the TSIG private file.



NOTE

TSIG file should be of private type.

Domain Setting: Select whether the domain interface will be configured manually or automatically.

- Automatic If you Select Automatic, the Domain Name cannot be configured as it will be done automatically. The field will be disabled.
- Manual If the Domain setting is chosen as Manual, then specify the domain name of the device.



NOTE

If you select "Automatic" it displays the Domain Interface option. If you select "Manual" it displays "Domain name"

Domain Name: It displays the domain name of the device.

Domain Name Server Setting

Automatic - If you select Automatic "DNS Interface" option should be explained.

Manual - Specify the DNS (Domain Name System) server address to be configured for the BMC.

IP Priority:

- If IP Priority is IPv4, it will have 2 IPv4 DNS servers and 1 IPv6 DNS server.
- If IP Priority is IPv6, it will have 2 IPv6 DNS servers and 1 IPv4 DNS server.



This is not applicable for Manual configuration.

DNS Server 1, 2 & 3

To specify the DNS (Domain Name System) server address to be configured for the BMC.



- IPv4 Addresses should be given in dotted decimal representation.
- IPv6 Addresses are supported and must be global unicast addresses.

DNS Server Address will support the following:

- IPv4 Address format.
- IPv6 Address format.

Save: To save the entered changes.


4.4.8.4 Platform Event Filter

Platform Event Filter (PEF) provides a mechanism for configuring the BMC to take selected actions on event messages that it receives or has internally generated. These actions include operations such as system power-off, system reset, as well as triggering the generation of an alert.

The PEF Management is used to configure the following

- Event Filters
- Alert Policies
- LAN Destinations


To open PEF Management Settings page, click Settings > Platform Event Filter from the menu bar. A sample screenshot of Platform Event Filter page is shown below.

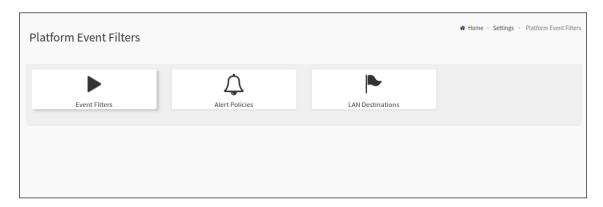

Platform Event Filter Page

Event Filters

A PEF implementation is recommended to provide at least 40 entries in the event filter table. A subset of these entries should be pre-configured for common system failure events, such as over-temperature, power system failure, fan failure events, etc. Remaining entries can be made available for 'OEM' or System Management Software configured events. Note that individual entries can be tagged as being reserved for system use - so this ratio of pre-configured entries to run-time configurable entries can be reallocated if necessary.

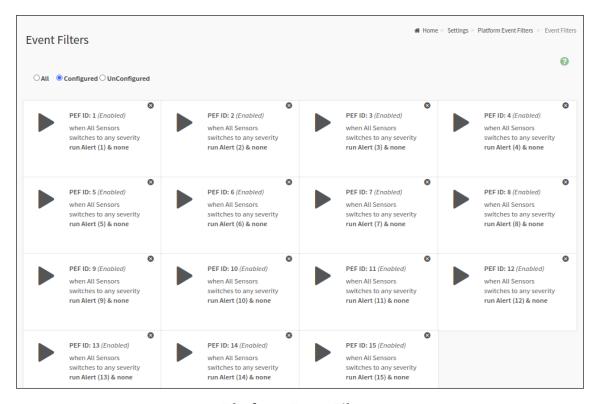


Platform Event Filters

The fields of Platform Event Filters Tab are explained below.

This page contains Pre-configured 40 Events with PEF IDs. Click Delete icon (x) on the top right corner to directly delete an item from the list.

Procedure:

- 1. Click the **Event Filters** section to configure the event filters in the available slots.
- 2. To Add an Event Filter entry, select a free section to open the Event Filter entry Page. A sample screenshot of Event Filter Configuration page is shown below.

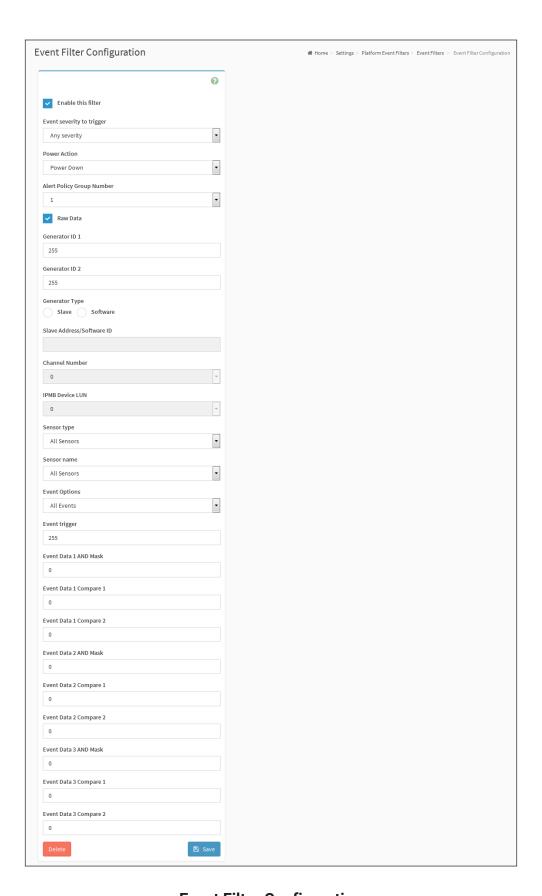

Event Filter Configuration

In the **Event Filter Configuration** section,

- In **Enable this filter**, check this option to enable the PEF settings.
- In **Event Severity to trigger**, select any one of the Event severity from the list.
- Event Filter Action Alert: It is checked by default. This action enables PEF Alert action (read-only).
- Select any one of the Power Action either Power down, Power reset or Power cycle from the drop down list
- Choose any one of the configured Alert Policy Group Number from the drop down list.



NOTE

Alert Policy has to be configured - under Settings->PEF->Alert Policy.

- Check Raw Data option to fill the Generator ID with raw data.
- Generator ID 1 field is used to give raw generator ID1 data value.
- Generator ID 2 field is used to give raw generator ID2 data value.



NOTE

In RAW data field, specify hexadecimal value prefix with '0x'.

- In the Event Generator section, choose the event generator as Slave Address if event was generated from IPMB. Otherwise as System Software ID - if event was generated from system software.
- In the Slave Address/Software ID field, specify corresponding I2C Slave Address or System Software ID.
- Choose the particular Channel Number that event message was received over. Or choose '0' if the event message was received via the system interface, primary IPMB, or internally generated by the BMC.
- Choose the corresponding IPMB Device LUN if event generated by IPMB.
- Select the Sensor Type of sensor that will trigger the event filter action.
- In the SensorName field, choose the particular sensor from the sensor list.
- Choose Event Option to be either All Events or Sensor Specific Events.
- Event Trigger field is used to give Event/Reading type value.



NOTE

Value ranges from 1 to 255.

Event Data 1 AND Mask field is used to indicate wildcarded or compared bits.



NOTE

Value ranges from 0 to 255.

 Event Data 1 Compare 1 & Event Data 1 Compare 2 fields are used to indicate whether each bit position's comparison is an exact comparison or not.




NOTE

Value ranges from 0 to 255.

- Event Data 2 AND Mask field is similar to Event Data 1 AND Mask.
- Event Data 2 Compare 1 & Event Data 2 Compare 2 fields are similar to Event Data 1 Compare 1 and Event Data 1 Compare 2 respectively.
- Event Data 3 AND Mask field is similar to Event Data 1 AND Mask.
- Event Data 3 Compare 1 & Event Data 3 Compare 2 fields are similar to Event Data 1 Compare 1 and Event Data 1 Compare 2 respectively.
- 3. Click Save to save the changes and return to event filter list.
- 4. Click Delete to delete the existing filter.


Alert Policies

This page is used to configure the Alert Policy for the PEF configuration. You can add, delete or modify an entry in this page.

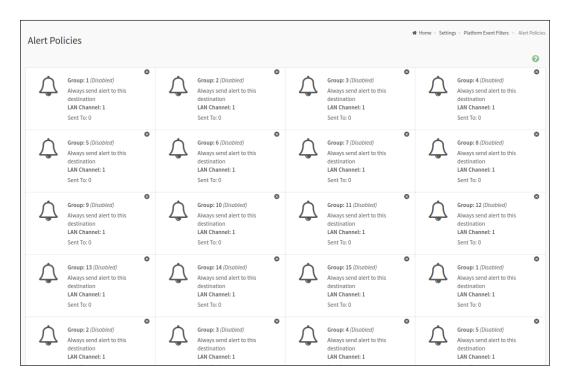

Platform Event Filters - Alert Policies

Select the slot and click on the empty slot to open the Alert Policies page as shown in the screenshot below.

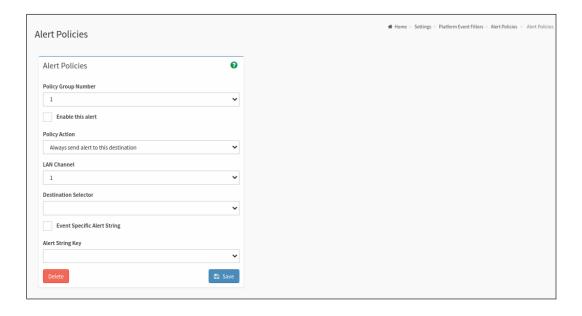

Add Alert Policies Page

The fields of Platform Event Filter – Alert Policies section are explained below.

Policy Group Number: Displays the Policy number of the configuration.

Enable this alert: To enable or disable the policy settings.

Policy Action: To choose any one of the Policy set values (0-5) from the list.

- **0** Always send alert to this destination.
- **1** If alert to previous destination was successful, do not send alert to this destination. Proceed to next entry in this policy set.
- **2** If alert to previous destination was successful, do not send alert to this destination. Do not process any more entries in this policy set.
- **3** If alert to previous destination was successful, do not send alert to this destination. Proceed to next entry in this policy set that is to a different channel.
- **4** If alert to previous destination was successful, do not send alert to this destination. Proceed to next entry in this policy set that is to a different destination type.

LAN Channel: To choose a particular channel from the available channel list.

Destination Selector: To choose a particular destination from the configured destination list.



NOTE

LAN Destination has to be configured - under **Settings** ->**Platform Event Filters** -> **LAN Destinations**.

Event Specific Alert String: To specify an event-specific Alert String.


Alert String Key: To specify which string is to be sent for this Alert Policy entry.

Save: To save the Alert Policies entries.

Delete: To delete the selected configured Alert Policy.


LAN Destinations

This page is used to configure the LAN destinations of PEF configuration. A sample screenshot of LAN Destination Page is given below.

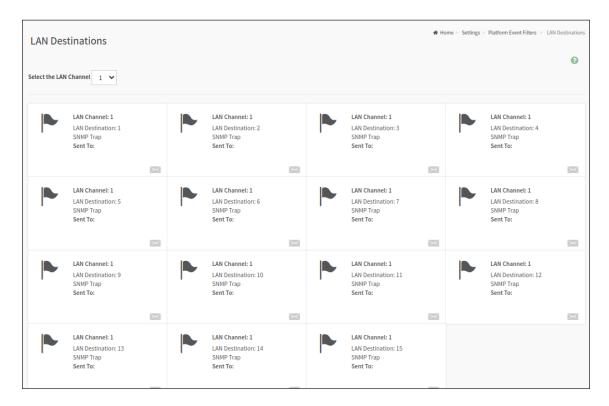

Platform Event Filters LAN Destinations

Select the slot and click on the empty slot to open the LAN Destination Configuration page as shown in the screenshot below.

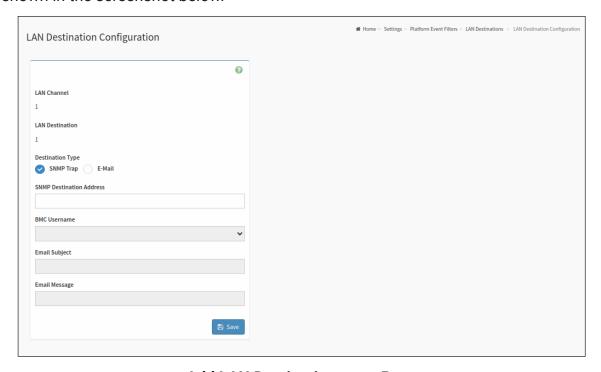

Add LAN Destination entry Page

The fields of **Platform Event Filter** – LAN Destinations are explained below.

Select the LAN Channel: To select the LAN Channel number.

LAN Channel: Displays LAN Channel Number for the selected slot (read-only).

LAN Destination: Displays ID for setting Destination Selector of Alert Policy (read-only).

Destination Type: Destination type can be either an SNMP Trap or an E-mail alert. For E-mail alerts, the four fields - SNMP Destination Address, BMC User Name, Email subject and Email message needs to be filled. The SMTP server information also has to be added - under Settings ->SMTP Settings. For SNMP Trap, only the SNMP Destination Address has to be filled.

SNMP Destination Address: If Destination type is SNMP Trap, then enter the IP address of the system that will receive the alert. Destination address will support the following:

- IPv4 address format.
- IPv6 address format.

BMC User Name: If Destination type is Email Alert, then choose the user to whom the email alert has to be sent. Email address for the user has to be configured under Settings->Users Management.

Email Subject & Email Message: These fields must be configured if email alert is chosen as destination type. An email will be sent to the configured email address of the user in case of any severity events with a subject specified in subject field and will contain the message field's content as the email body. These fields are not applicable for 'AMI-Format' email users.



NOTE

User should be configured under Settings > Users Management

Save: To add a new entry to the device. Alternatively, double click on a free slot.

Delete: To delete the selected configured LAN Destination.

Click Message icon () to send sample alert to configured destination.




NOTE

Test alert can be sent only with enabled SMTP configuration. SMTP support can be enabled under *Settings->SMTP Settings*.

4.4.8.5 Services

This page displays the basic information about services running in the BMC. Only Administrator can modify the service.

To open Services page, click Settings > Services from the menu bar. A sample screenshot of Services Page is shown below.

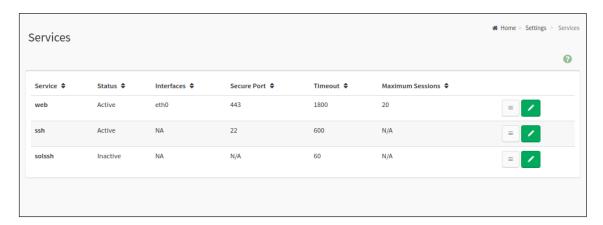

Services Page

The fields of Services Page are explained below.

Services: Displays service name of the selected slot (read-only).

Status: Displays the current status of the service, either active or inactive state.

Interfaces: It shows the interface in which service is running.

Secure Port: Used to configure secure port number for the service.

- Web default port is 443
- SSH default port is 22



NOTE

SOLSSH will not support secure port.

Timeout: Displays the session timeout value of the service. For web, SSH and telnet service, user can configure the session timeout value.



NOTE

- Web timeout value ranges from 300 to 1800 seconds.
- SSH timeout value ranges from 60 to 1800 seconds.

Maximum Sessions: Displays the maximum number of allowed sessions for the service.

Active Sessions: To view the current active sessions for the service.

To view the Active Sessions:

Procedure:

- 1. Click View Icon () to view the details about the active sessions for the service.
- 2. This opens the Active Session screen (for example Service Sessions) as shown in the screenshot below.



Service Sessions

- **3. Session Type:** Displays the type of the active sessions.
- 4. User: Displays the name of the user.
- 5. Client IP: Displays the IP addresses that are already configured for the active sessions.
- **6. Privilege:** Displays the access privilege of the user.
- 7. Select a slot and click **Terminate** icon () to terminate the particular session of the service.

To modify the existing services:

Procedure:


1. Select a slot and click Edit icon () to modify the configuration of the service.



NOTE

Whenever the configuration is modified, the service will be restarted automatically. User has to close the existing opened session for the service if needed.

2. This opens the Service Configuration screen as shown in the screenshot below.

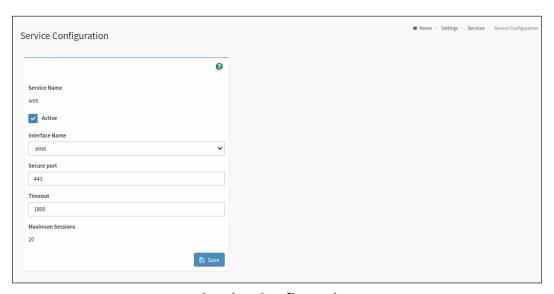

Service Configuration

- 3. Service Name is a read only field.
- 4. Activate the Current State by enabling the Active check box.



NOTE

Interfaces, Nonsecure port, Secure port, Time out and Maximum Sessions will not be active unless the current state is active.

- 5. Choose any one of the available interfaces from the Interface Name drop-down list.
- 6. Enter the Secure Port Number in the Secure Port field.
- 7. Enter the timeout value in the **Timeout** field.



NOTE

The values in the *Maximum Sessions* field cannot be modified.


8. Click Save to save the entered changes else click Cancel to exit.

4.4.8.6 SMTP Settings

Simple Mail Transfer Protocol (SMTP) is an Internet standard for electronic mail (e-mail) transmission across Internet Protocol (IP) networks.

Using MegaRAC GUI, you can configure the SMTP settings of the device.

To open SMTP Settings page, click Settings > SMTP Settings from the menu bar. A sample screenshot of SMTP Settings Page is shown below.

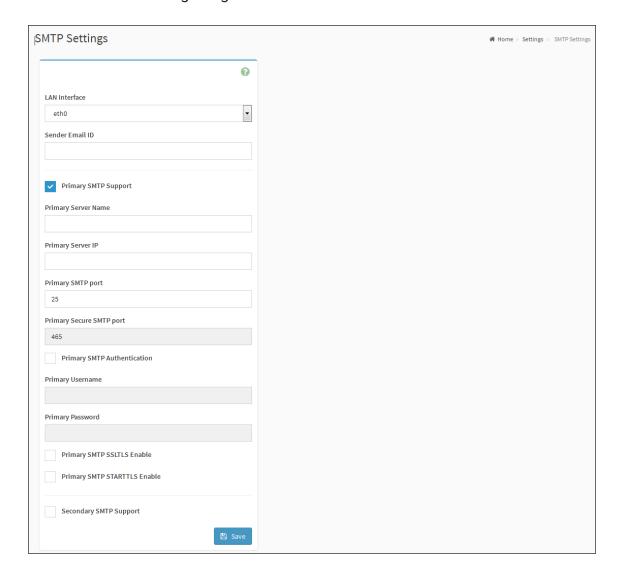

SMTP Settings Page

The fields of SMTP Settings Page are explained below.

LAN Interface: Displays the list of LAN channels available

Sender Email ID: A valid 'Sender Address' to indicate the BMC, whenever e-mail is sent. **Primary Server Name:** The 'Machine Name' of the BMC, from where the e-mail is sent.



NOTE

- Machine Name is a string of maximum 15 alpha-numeric characters.
- Space, special characters are not allowed.

Primary SMTP Support: To enable/disable SMTP support for the BMC.

Primary SMTP Port: To specify the SMTP Normal Port.

Primary Secure SMTP Port: To specify the SMTP Secure Port.



- For Primary SMTP Port Default Port is 25, and the Port value ranges from 1 to 65535.
- For Primary Secure SMTP Port Default Port is 465, and the Port value ranges from 1 to 65535.

Primary Server IP: The IP address of the SMTP Server. It is a mandatory field.



NOTE

- IP Address made of 4 numbers separated by dots as in "xxx.xxx. xxx.xxx".
- Each Number ranges from 0 to 255.
- First Number must not be 0.
- Supports IPv4 Address format and IPv6 Address format.

Primary SMTP Authentication: To enable/disable SMTP Authentication.



NOTE

SMTP Server Authentication Types supported are:

- CRAM-MD5
- LOGIN
- PLAIN

If the SMTP server does not support any one of the above authentication types, the user will get an error message stating, Authentication type is not supported by SMTP Server.

Primary Username: Enter username to access SMTP Accounts.



NOTE

- User Name can be of length 4 to 64 alpha-numeric characters, dot(.), dash(-), and underline(_).
- It must start with an alphabet.
- Other Special Characters are not allowed.

Primary Password: Enter password for the SMTP User Account.



- Password must be at least 4 characters long.
- White space is not allowed.
- This field will not allow more than 64 characters.

Primary SMTP STARTTLS Enable: To enable STARTTLS support for the SMTP Client.

- **Upload SMTP CA Certificate File:** File that contains the certificate of the trusted CA certs. CACERT key file should be of pem type,
- Upload SMTP Certificate File: Client certificate filename. CERT key file should be of pem type.
- **Upload SMTP Private Key:** Client private key filename. SMTP key file should be of pem type.



NOTE

To enable STARTTLS support, the respective SMTP support option should be enabled.

Secondary SMTP Support: It lists the Secondary SMTP Server configuration. It is an optional field. If the Primary SMTP server is not working fine, then it tries with Secondary SMTP Server configuration.



NOTE

Options of Secondary SMTP Support are same as Primary SMTP Support.

Save: To save the new SMTP server configuration.

4.4.8.7 System Firewall

The System Firewall page allows you to configure the firewall settings. The firewall rule can be set for an IP or range of IP Addresses or Port numbers. To view this page, you must at least be an operator. Only administrators can add or delete a firewall.


To open System Firewall page, click Settings >System Firewall from the menu bar.



Firewall Settings

General Firewall Settings

Click Settings > Firewall > General Firewall Settings from the menu bar. A sample screenshot of General Firewall Settings page is shown below.

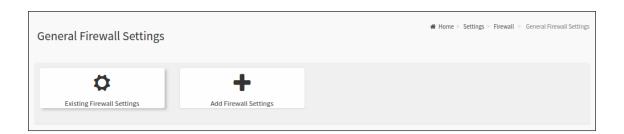

General Firewall Settings


The fields of **Firewall Settings** tab are explained below.

Existing Firewall Settings

A blank page will be opened if you did not add anything in "Add Firewall settings". If there is no Firewall Settings Exists, add a new Firewall settings by clicking link Add Firewall Settings page.

Procedure to Add Firewall settings

Click General Firewall Settings > Existing Firewall Settings icon. A sample screenshot of Existing Firewall Settings page is shown below.

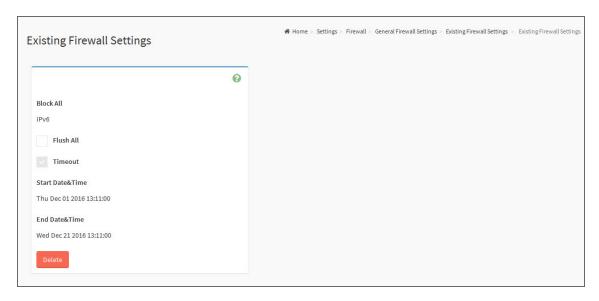


Existing Firewall Settings

- **Block All:** The blocked incoming IP's and Port's can be viewed.
- Flush All: To flush all the system firewall rules (Read-Only).
- Select **Timeout** to enable or disable firewall rules with timeout.
- Time Out The respective firewall rule effect Start Time, End Date, Start Time, End Time will be displayed.
- Delete: To Delete the system firewall rules.

Add Firewall Settings

1. Click General Firewall Settings > Add Firewall Settings. This opens the Existing Firewall Settings page as shown below.

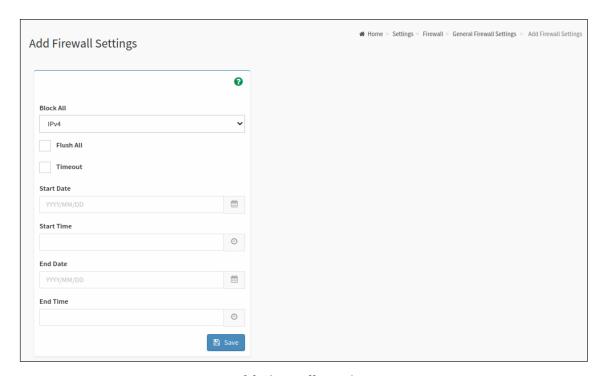

Add Firewall Settings

- 2. Select Block All to block all the incoming IP's and Port's.
- 3. Select Flush All to flush all the system firewall rules.
- 4. Select Timeout to enable or disable firewall rules with timeout.
- 5. Enter Start Time to start the respective firewall rule effect from this time.
- 6. Enter End Time to end the respective firewall rule effect from this time.



NOTE

The time should be in the dd-mm-yy:hh-mm format.

7. Click Save to save the changes made else click Cancel to go back to the previous screen.

IP Address Firewall Rules

Click Settings > Firewall > IP Address Firewall Rules from the menu bar. A sample screenshot of IP Address Firewall Rules page is shown below.




IP Address Firewall Rules

To View Existing IP Rules or a range of IP Addresses

A blank page will be opened if you did not add anything in "Add IP Rule". If there is no Add IP Rule Exists, add a new IP Rule by clicking link Add IP Rule page.

Procedure to Add IP Rule

- 1. Click Settings > System Firewall > IP Address Firewall Rules > Existing IP Rules. A blank page will be opened if you did not add anything in "Add IP Rule". If any rule is added, then the added rule will be listed in "Existing IP Rules" page.
- 2. Click the IP Addresses tab. A sample screenshot of IP Addresses tab is shown below.

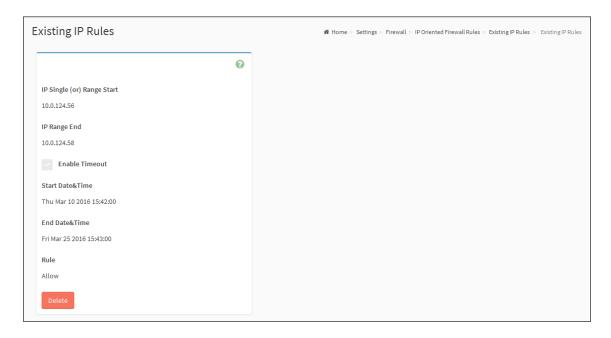

System Firewall - Existing IP Rule

IP Single (or) Range Start: To show the configured Port Address or Range of Ports.

IP Range End: To show the configured Port Address or Range of Ports.

Enable Timeout: To enable/disable Timeout.

Start Date: The respective firewall rule effect will start from this date. **Start Time:** The respective firewall rule effect will start from this time. **End Date:** The respective firewall rule effect will end from this date.

End Time: The respective firewall rule effect will end from this time.


Rule: To indicate the current setting of the listed Port or Range of Port rules (Allow or

Block) status.

Delete: To delete the selected slot.

Procedure To add an IP address or range of IP addresses

 Click Settings > System Firewall > IP Address Firewall Rules > Add New IP Rule to add a new IP or range of IP address.

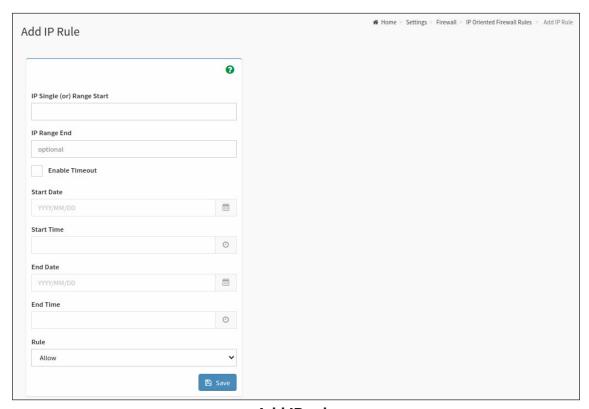

Add IP rule

2. In the Add new rule for IP page, Enter the IP address and a range of IP addresses in the IP Single or IP Range Start field.



NOTE

IP Address will support IPv4 Address format only:

- IPv4 Address made of 4 numbers separated by dots as in xxx.xxx.xxx.xxx.
- Each number ranges from 0 to 255.
- First number must not be 0.

- 3. Enter IP range end value in the IP Range End field.
- 4. Enable **Timeout** to enable firewall rules with timeout.
- 5. Enter **Start Date** to start the respective firewall rule effect from this date.
- 6. Enter **End Date** to end the respective firewall rule effect from this date.
- 7. Enter **Start Time** to start the respective firewall rule effect from this time.
- 8. Enter **End Time** to end the respective firewall rule effect from this time.



NOTE

The date and time should be in the YYYY/MM/DD and hh-mm format respectively.

- 9. Determine the rule to block or accept.
- 10. Click Save to save the changes made.

Port Firewall Rules


Click Settings > Firewall > Port Firewall Rules from the menu bar. A sample screenshot of Port Firewall Rules page is shown below.



Port Firewall Rules

To view Existing Port Rules

- 1. Click Settings > System Firewall > Port Firewall Rules > Existing Port Rules. A blank page will be opened if you did not add anything in "Add New port Rule". If any rule is added, then the added rule will be listed in "Existing Port Rules" page
- 2. Click the Existing Port Rules. A sample screenshot of Port tab is shown below.

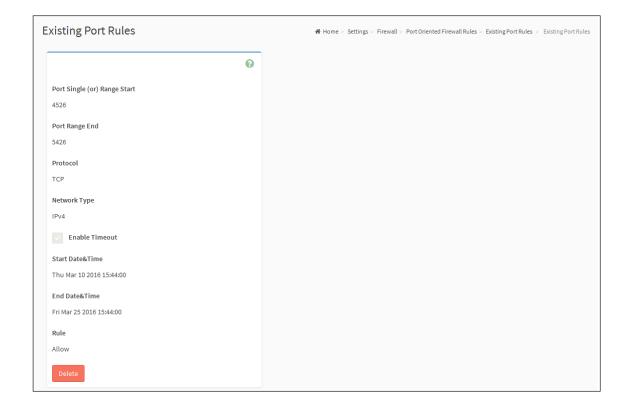

System Firewall - Existing Port Rules

The fields of System Firewall: **Existing Port Rules** page are explained below.

Port Single (or) Range Start: To configure the Port or Range of Port Addresses.

Port Range End: To configure the Port or Range of Port Addresses.

Protocol: This field specifies the protocols for the configured Port or Port Ranges.

Network Type : This field specifies the affected network type for the particular Port or Port

Ranges.

Enable Timeout: To enable or disable firewall rules with timeout.

Start Date : The respective firewall rule effect will start from this time.

Start Time : The respective firewall rule will start from this time. **End Date :** The respective firewall rule effect will end on this date.


End Time: The respective firewall rule will end at this time.

Rule: To indicate Allow or Block status.

Delete: To delete the entry to the firewall rules list.

To Add Port/Range of ports

1. To add a new rage of Port address, click the Add button.

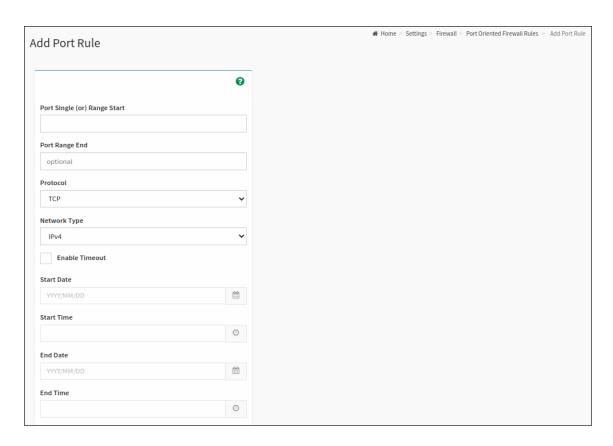

Add Port rule

2. In the **Add new rule for Port** window, Enter the port number or a range of port numbers in the **Port Single (or) Range Start** field.



NOTE

Port value ranges from 1 to 65535.

- 3. Enter the end value in the **Port Range End** field.
- 4. Select the **Protocol** to be either TCP or UDP or Bot.
- 5. Select the **Network Type**. It may be IPv4 or IPv6 or Both.
- 6. Select **Timeout** to enable or disable firewall rules with timeout.
- 7. Enter **Start Time** to start the respective firewall rule effect from this time.
- 8. Enter **Start Date** to start the respective firewall rule effect from this date.
- 9. Enter **End Date** to end the respective firewall rule effect on this date.
- 10. Enter **End Time** to end the respective firewall rule effect at this time.



NOTE


The time should be in the YYYY/MM/DD:hh-mm format.

- 11. Select the **Rule** to determine the rule to **Block** or **Allow**.
- 1. 12. Click Save to save the changes made.

4.4.8.8 User Management

The User Management page allows you to view the current list of user slots for the server. You can add a new user and modify or delete the existing users.

To open User Management page, click Settings > User Management from the menu bar. A sample screenshot of User Management page is shown below.

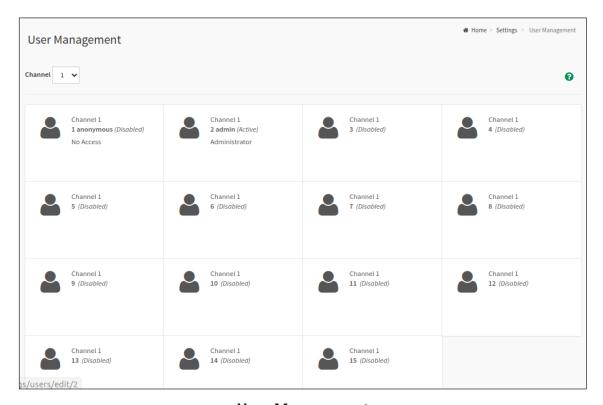

User Management

Click user icon () and select any free slot to add a new user from the User Management main page.

Click Delete icon (x) on the top right corner to directly delete an item from the list.



NOTE

The Free slots are shown as "Disabled" in all columns for the slot.

The fields of User Management Page are explained below.

Channel: To choose a particular channel from the available channel list.

User ID: Displays the ID number of the user.



NOTE

The list contains a maximum of fifteen users only.

User Name: Displays the name of the user.

User Access: To enable or disable the access privilege of the user. **Network Privilege:** Displays the network access privilege of the user.

SNMP Status: Displays if the SNMP status for the user is enabled or Disabled.


E-mail ID: Displays e-mail address of the user.

Add User: To add a new user.

Delete User: To delete an existing user.

Procedure to add a new User

1. To add a new user, select a free section and click on the empty section. This opens the Add User screen as shown in the screenshot below.

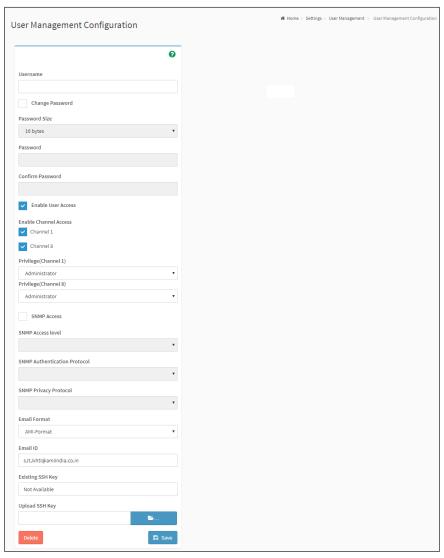

User Management Configuration Page

2. Enter the name of the user in the **User Name** field.



NOTE

- User Name is a string of 1 to 16 alpha-numeric characters.
- It must start with an alphabetical character.
- It is case-sensitive.
- Special characters '-'(hyphen), '_'(underscore), '@'(at sign) are allowed.
- For 20 Bytes password, LAN session will not be established.
- 3. Set **Password Size** for the new password.
- 4. In the **Password** and **Confirm Password** fields, enter and confirm your new password.

NOTE

- Password should be the combination of alphabets, numbers, symbol and upper case characters.
- White space is not allowed.
- This field will not allow more than 16/20 characters based on Password size field value.
- This field will not allow the below mentioned characters.
- The password should be a string, if you try to set password using "ipmitool user set password".

Hex	Char
00	NUL '\0'
01	SOH (start of heading)
02	STX (start of text)
03	ETX (end of text)
04	EOT (end of transmission)
05	ENQ (enquiry)
06	ACK (acknowledge)
07	BEL '\a' (bell)
08	BS '\b' (backspace)
09	HT '\t' (horizontal tab)
0A	LF '\n' (new line)
0B	VT '\v' (vertical tab)
0C	FF '\f' (form feed)
0D	CR '\r' (carriage ret)
0E	SO (shift out)
0F	SI (shift in)
10	DLE (data link escape)
11	DC1 (device control 1)
12	DC2 (device control 2)
13	DC3 (device control 3)
14	DC4 (device control 4)
15	NAK (negative ack.)

Hex	Char
16	SYN (synchronous idle)
17	ETB (end of trans. blk)
18	CAN (cancel)
19	EM (end of medium)
1A	SUB (substitute)
1B	ESC (escape)
1C	FS (file separator)
1D	GS (group separator)
1E	RS (record separator)
1F	US (unit separator)
20	SPACE
7F	DEL

5. In **Enable User Access**, select this option to enable the network access for the appropriate user.



NOTE

- Enabling Channel User Access will intern assign the IPMI messaging privilege to the specific Channel user.
- It is recommended that the IPMI messaging option should be enabled for the user to enable the User Access option, while creating User through IPMI.
- 6. In **Enable Channel Access** field, select the channel/channels to enable the network access for the appropriate channels.
- 7. In the **Privilege** field, select the privilege assigned to the user which could be Administrator, Operator, User, OEM or None. By default, the channel privileges will be displayed based on the channel availability.
- 8. Check the SNMP Access check box to enable SNMP access for the user.



NOTE

Password field is mandatory, if SNMP Status is enabled.

- 9. Choose the SNMP Access level option for user from the **SNMP Access level** (SHA or MD5) drop-down list. Either it can be Read Only or Read Write.
- 10. Choose the **SNMP Authentication Protocol** (SHA or MD5) to use for SNMP settings from the drop down list.



NOTE

Password field is mandatory, if Authentication protocol is changed.

- 11. Choose the Encryption algorithm to use for SNMP settings from the **SNMP Privacy protocol** (AES or DES) drop-down list.
- 12. In the **Email ID** field, enter the email ID of the user. If the user forgets the password, the new password will be mailed to the configured email address.



NOTE

SMTP Server must be configured to send emails.

Email Format: Two types of formats are available:

AMI-Format: The subject of this mail format is 'Alert from (your Host name)'. The mail content shows sensor information, ex: Sensor type and Description.

Fixed-Subject Format: This format displays the message according to user's setting. You must set the subject and message for email alert.

13. In the Upload SSH Key field, click Browse and select the SSH key file.



NOTE

SSH key file should be of pub type.

14. Click Save to save the new user and return to the users list.

To Modify User

- 1. To modify the existing user, click on the active user tab.
- 2. Check Change Password, if you wish to change the existing Password.
- 3. Follow the steps (3 to 15) of Procedure to add a new User.
- 4. Click Save to save the changes and return to the users list.
- 5. Click Save to save the changes and return to the users list.

Important:

Reserved Users: There are certain reserved users which cannot be added as BMC Users. The list of reserved users are given below,

- sysadmin
- daemon
- sshd
- ntp
- root

4.4.8.9 Power Restore Policy

To open Power Restore Policy page, click Settings > Power Restore Policy from the menu bar. A sample screenshot of Power Restore Policy page is shown below.



Power Restore Policy

After an unexpected power failure, the state of the system power supply when the power supply is restored.

Always-off: Keep power off


Previous: Restore to the previous state

Always-on: Keep power on

4.4.8.10 Zone Configurations

Remove the SAS cable (SFF-8644) between the HBA/RAID card and the JBOD-4U78 before configuration T10 zoning. After configuring T10 zoning, please power cycle the JBOD-4U78 and then insert the SAS cable back (SFF-8644).

To open Zone Configurations page, click Settings > Zone Configurations from the menu bar. A sample screenshot of Zone Configurations page is shown below.

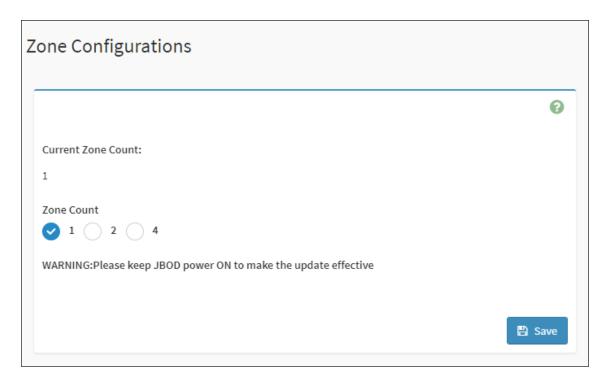

In the BMC Web UI, we only provide three default settings (1, 2, 4), The chassis is set to three states (1, 2, 4) through EXP console command "zonecount".

4.4.9 Remote Control


The Remote Control page consists of the following options. A sample screenshot is displayed below.



Remote Control page

To open Remote Control page, click Remote Control from the menu bar.

Open the Remote Control page, click Activate. A sample screenshot of the Remote serial over lan page is shown below.

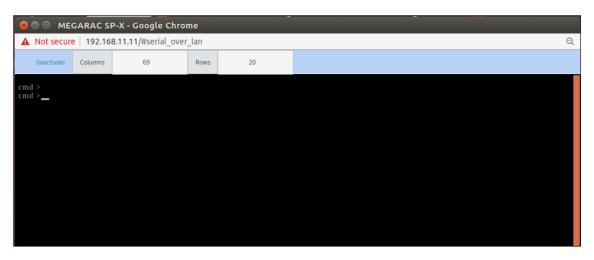


serial over lan

4.4.10 HDD Management

This page allows you to view and control the hard disk drivers.


To open HDD Management, click HDD Management from the menu bar. A sample screenshot of HDD Management page is shown below.

When host is currently off

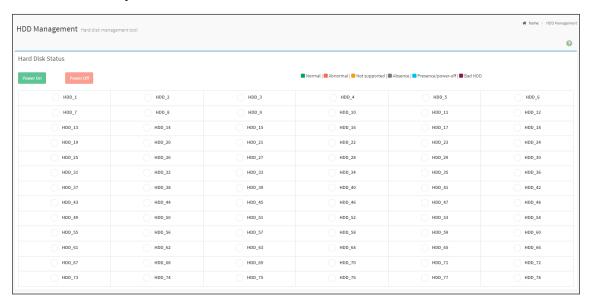

HDD Management page

When host is currently on

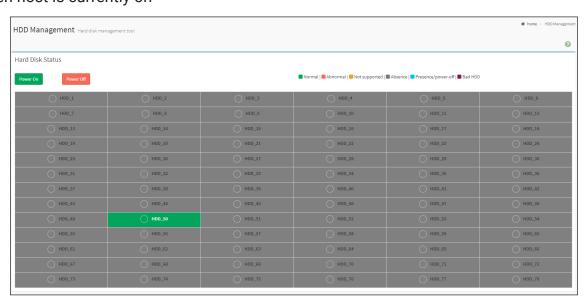

HDD Management page


Each hard disk driver will display a different color, each color represents a different state including normal, abnormal and absence, etc.

Power on: To power on the hard disk driver. **Power off:** To power off the hard disk driver.

4.4.11 Power Control

This page allows you to view and control the power of your server.

To open Power Control, click Power Control from the menu bar. A sample screenshot of Power Control is shown below.

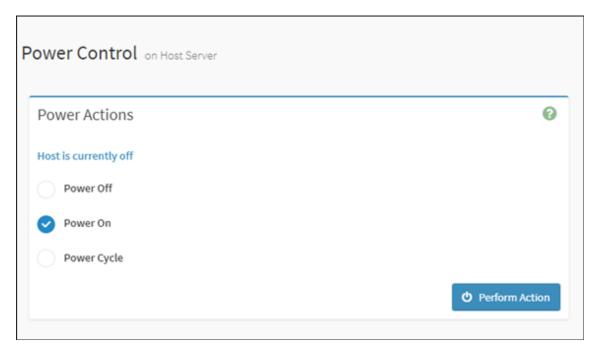

Power Control

The various options of Power Control are given below.

Power Off: To immediately power off the server.

Power On: To power on the server.

Power Cycle: This option will first power off, and then reboot the system (cold boot).

4.4.12 Maintenance Group

To open Power Control, click Maintenance from the menu bar. A sample screenshot of Maintenance page is displayed below.



Maintenance


- Backup Configuration
- Firmware Image Location
- BMC Firmware Information
- BMC Firmware Update
- Preserve Configuration
- Restore Configuration
- Expander Update
- BMC Rest

A detailed description is given below.

4.4.12.1 Backup Configuration

This page allows you to select the specific configuration items to be backup in case of "Backup Configuration".

To open Backup Configuration page, click Maintenance > Backup Configuration from the menu bar. A sample screenshot of Backup Configuration page is shown below.

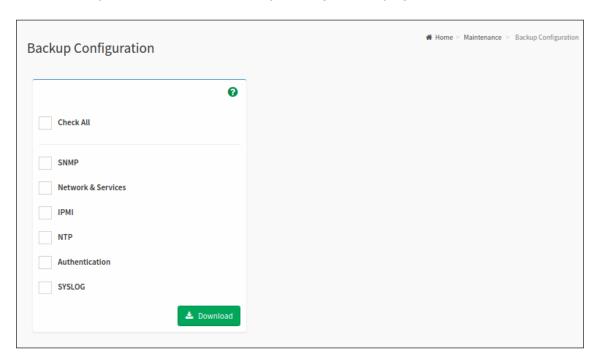

Backup Configuration

Check All: To select all the configuration list.

Download: To download and save the configuration files backup from BMC to client system.



NOTE

During backup, because of security concern, the mechanism parses sensitive data to filter it out and not backup sensitive files. User has to set password again after restoring configuration by using default user in case of login failure.

Procedure for Backup Configuration:

 Click Check All to back up all the configuration items or check the configuration that needs to be back up. The Backup Configuration page will appear as shown in the above screenshot.



NOTE


Network configurations are inter-related to IPMI, and hence by default IPMI configurations will be selected automatically when you select "Network and Services" to be backed up.

2. Click Download Config to save the backup file to the client system.

4.4.12.2 Firmware Image Location

This page is used to configure firmware image into the BMC.

To open **Firmware Image Location**, click **Maintenance** > **Firmware Image Location** from the menu bar. A sample screenshot of **Firmware Image Location** page is shown below.

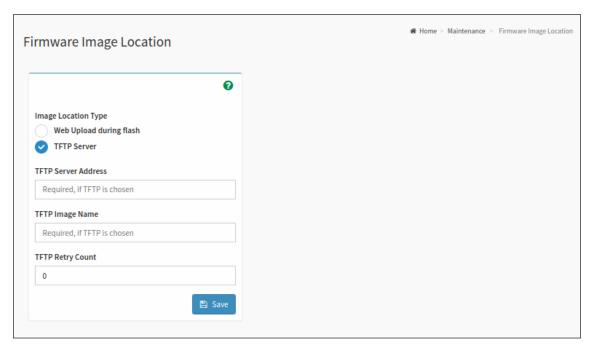

Firmware Image Location

The various options of Image Transfer Protocol are given below.

Image Location Type: Type of location to transfer the firmware image into the BMC either Web **Upload during Flash** or **TFTP Server**.

TFTP Server Address: Address of the server where the firmware image is stored.



NOTE

The Server supports both IPv4 and IPv6 addresses

- IP Address made of 4 numbers separated by dots as in "xxx.xxx.xxx.xxx".
- Each number ranges from 0 to 255.
- First number must not be 0.
- Hexadecimal digits are expressed as lower-case letters.

TFTP Image Name: Full Source path with filename of the firmware image is stored on TFTP Server.


TFTP Retry Count: Number of times to be retried in case a transfer failure occurs. Retry count ranges from 0 to 255.

Save: To save the configured settings.

4.4.12.3 BMC Firmware Information

This page shows the BMC Firmware Information.

To open BMC Firmware Information page, click Maintenance > BMC Firmware Information from the menu bar. A sample screenshot of BMC Firmware Information page is shown below.

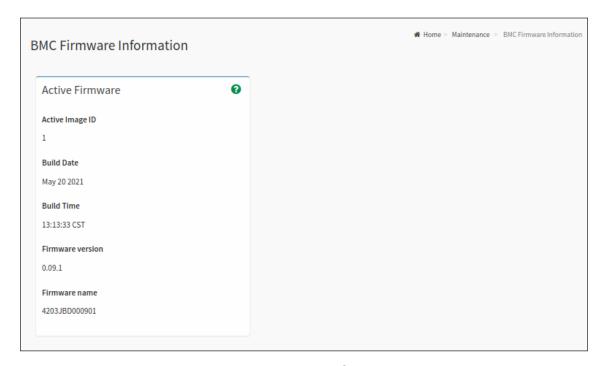

Backup Firmware Information

The various fields of BMC Firmware Information page are given below.

Active Image ID: Describes the Active Image ID of the active BMC image.

Build Date: Describes the Build Date of the active BMC image. **Build Time:** Describes the Build Time of the active BMC image.

Firmware version: Describes the Firmware version of the active BMC image.

Firmware name: Describes the Firmware name of the active BMC image.

4.4.12.4 BMC Firmware Update

This wizard takes you through the process of firmware upgradation. A reset of the box will automatically follow if the upgrade is completed or cancelled. An option to Preserve All Configuration is available. Enable it, if you wish to preserve configured settings through the upgrade.



Warning

Please note that after entering update mode widgets, other web pages and services will not work. All open widgets will be closed automatically. If upgrade process is cancelled in the middle of the wizard, the device will be reset.



The firmware upgrade process is a crucial operation. Make sure that the chances of a power or connectivity loss are minimal when performing this operation.

Once you enter into Update Mode and choose to cancel the firmware flash operation, the BMC must be reset. This means that you must close the Internet browser and log back onto the BMC before you can perform any other types of operations.

Once Firmware upgrade using web is started, the regular IPMI command will not be allowed for safety concern if **Enable IPMI Command handling during flashing** support is disabled in project configuration.

This feature enables the user to perform all Firmware Update operations such as Firmware Update.

To configure, choose 'Firmware Image Location' under Maintenance. To open BMC Firmware Update page, click Maintenance > BMC Firmware Update from the menu bar. A sample screenshot of BMC Firmware Update Page is shown below.

Procedure


1. Click Choose File to select firmware image.



NOTE

A file upload pop-up will be displayed for http/https but in the case of tftp files, the file is automatically uploaded displaying the status of upload.

2. Click Start firmware update to load the Firmware Update information. A sample screenshot is displayed below.

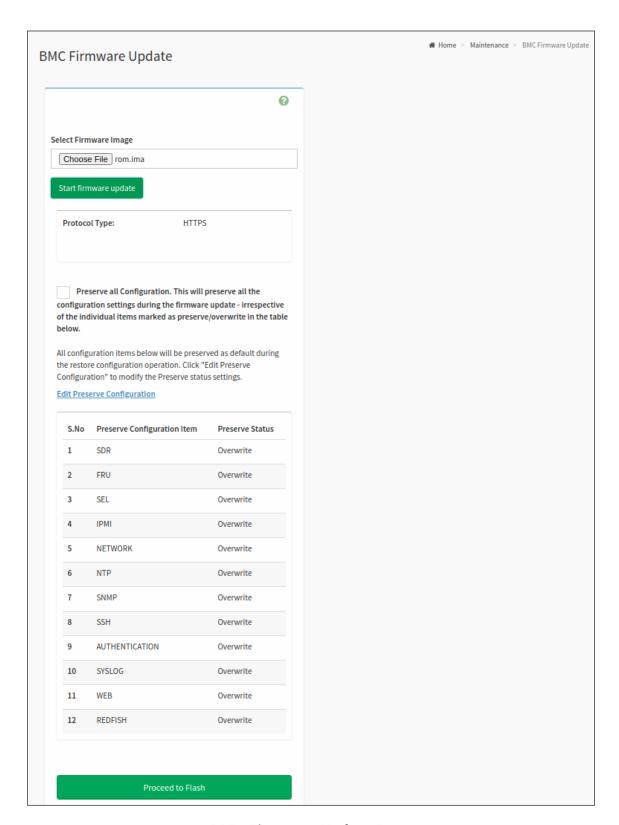

BMC Firmware Update Page



NOTE

SignImage Public Key is feature based option. If encrypted Signimage feature is enabled, then support to **Upload** a public.pem key info option will be available.




NOTE

Dual Firmware Update:

Select an Image (Inactive Image, Image 1, Image 2 or Both Image) from **Image to be Updated** drop-down list. The selected image will be getting flashed.

- Image to be Updated: To update an Image (Inactive, Image 1, Image 2 or Both) to be flashed. If You select an Inactive image, the Inactive image will be flashed. If you select both images, then Both Image 1 and Image 2 will be flashed with uploaded image file.
- **reboot the device after update:** This option is used to reboot the device after the firmware update.

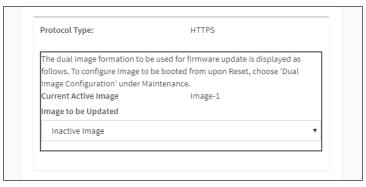

Dual Image Selected

- 3. Click Preserve all Configuration to preserve all configuration.
 - Preserve all Configuration: To preserve all configuration.
 - Edit Preserve Configuration: To modify the Preserve status settings.


The protocol information to be used for firmware image transfer during this update is as follows.



NOTE

All configuration items will be preserved/overwrite as default during the restore configuration operation.


4. Click Proceed to Flash, it will prompt you with the warning message. Click Ok to start the Firmware update.

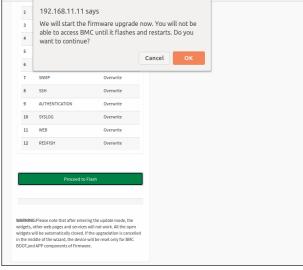

Firmware Update

- 5. The Firmware update undergoes the following steps:
 - a. Closing all active client requests
 - b. Preparing Device for Firmware Upgrade
 - c. Uploading Firmware Image.

A sample screenshot is shown as below.

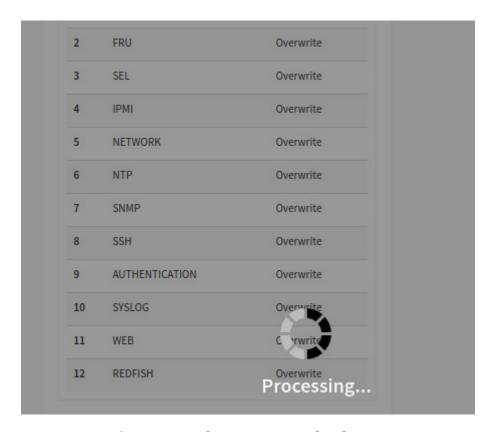

Firmware Update - Image Upload Start

d. Verifying Firmware Image

In Section Based Firmware Update, you can configure the firmware image for section based flashing. Check the required sections and click Proceed to update the firmware. If flashing is required for all images, select the option Full Flash.

If you select **Version Compare Flash** option from web, the current and uploaded module versions, FMHlocation, size will be compared.

If the modules differ in size and location, proceed with force firmware upgrade.


If all the module versions are same, restart BMC by saying all the module versions are similar.

If only few module versions are differing, those modules will be flashed.




NOTE

Only selected sections of the firmware will be updated. Other sections are skipped. Before starting flash operation, you are advised to verify the compatibility between image sections.

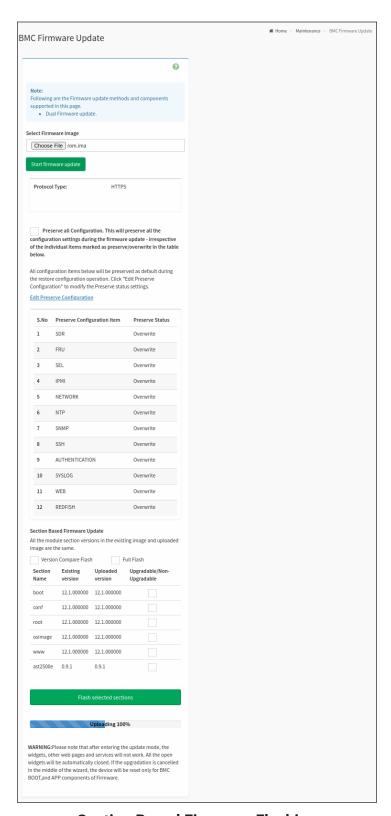

Section Based Firmware Flashing

- e. Flashing Firmware Image
- f. Resetting the image. The sample screenshot of Firmware update is as shown below.

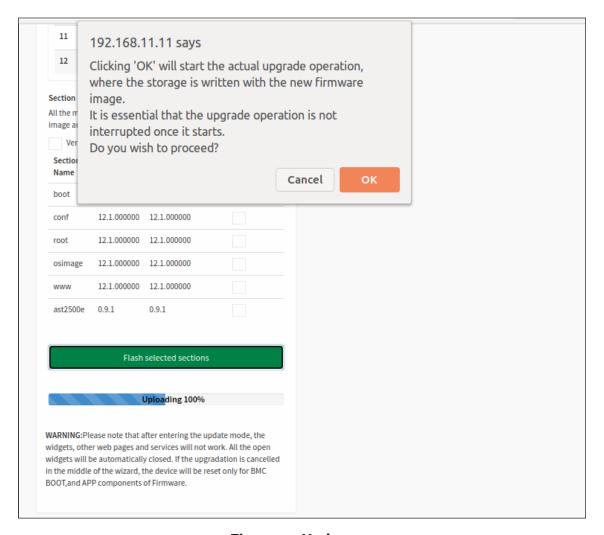

Firmware Update



NOTE

The Firmware Update page will be disabled and you will not be able to perform any other tasks until firmware upgrade is completed and the device is rebooted. You can now follow the instructions presented in the subsequent pages to successfully update the card's firmware. The device will reset if update is canceled. The device will also reset upon successful completion of firmware update.

4.4.12.5 Preserve Configuration


This page allows the user to configure the preserve configuration items, which will be used by the Restore factory defaults to preserve the existing configuration without overwriting with defaults/ Firmware Upgrade configuration.

To open Preserve Configuration page, click Maintenance > Preserve Configuration from the menu bar. A sample screenshot of Preserve Configuration page is shown below.



NOTE

You can navigate to the Firmware Update Page and Restore Factory Defaults by clicking the respective links.

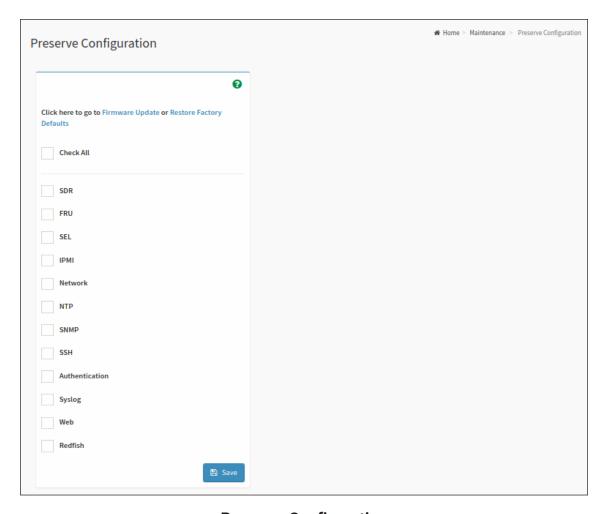

Preserve Configuration

The various fields of Preserve Configuration are as follows.

Click here to go to Firmware Update or Restore Factory Defaults: This link will redirect to the Firmware Update or Restore Factory Defaults page which needs to be preserved.

Check All: To check the entire configuration list.

Save: To save any changes made.



NOTE

This configuration is used by Restore Factory Defaults process.

- **SDR**: the sensor data record information will be preserved.
- FRU: the fru data will be preserved.
- **SEL**: the system event logs that are being logged by the IPMI will be preserved.
- **IPMI**: preserve the IPMI configurations such as SEL rep size, SDR rep size, interface specific, enable/disable, Primary/Secondary, IPMB Bus number etc.
- Network: To save network settings related with IPMI (LAN IP or DHCP configuration), selecting "IPMI" will automatically select another option "Network" and it's vice versa. After restore configuration, the Network Configuration will be preserved successfully.
- NTP: automatic or manual network type protocol and time settings will be preserved.
- SNMP: the SNMP user configurations and the SNMP user's privilege levels will be preserved.
- **SSH**: ssh configuration will be preserved.
- **Authentication**: Authentication related documents and settings will be preserved.
- **Syslog**: the system log configuration details will be preserved.
- **Web**: the firmware image location details will be preserved.
- Redfish: Redfish's files and settings will be preserved.

4.4.12.6 Restore Configuration

This page allows you to restore the configuration files from the client system to the BMC. To open Restore Configuration page, click Maintenance > Restore Configuration from the menu bar. A sample screenshot of Restore Configuration page is shown below.



Restore Configuration

The various fields Restore Configuration page are given below.

Config File: This option is used to select the file which was back up earlier.

Upload: To upload the backup file to restore the backup files.

Restore Factory Defaults


This option is used to restore the factory defaults of the device firmware. This section lists the configuration items that will be preserved during restore factory default configuration.



Warning

Please note that after entering restore factory widgets, other web pages and services will not work. All open widgets will be closed automatically. The device will reset and reboot within few minutes.

To open Restore Factory Defaults page, click Maintenance > Restore Factory Defaults from the menu bar. A sample screenshot of Restore Factory Defaults Page is shown below.

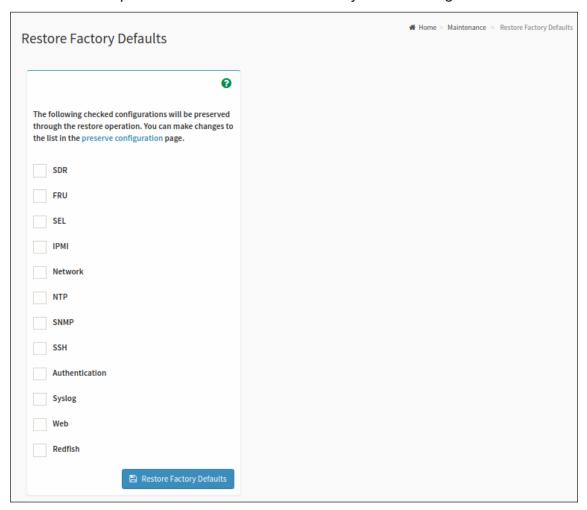

Restore Factory Defaults

Procedure

- 1. Click Preserve Configuration to redirect to Preserve Configuration page, which is used to preserve the particular configuration not to be overwritten by the default configuration.
- 2. Click Restore Factory Defaults to restore the factory defaults of the device firmware.




NOTE

When Restore Factory Defaults action is performed, there might be some log events present after performing restore operation. Those events might be newly generated which can be verified using its timestamp.

4.4.12.7 Expander Update

This page is used to update expander.

To open Expander Update page, click Maintenance > Expander Update from the menu bar. A sample screenshot of Expander Update page is shown below.

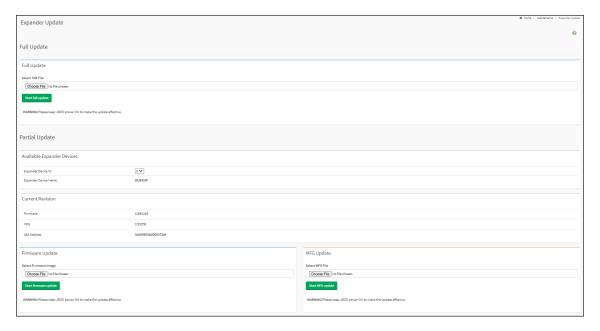

Expander Update page

Full Update

Use TAR archives for full expander updates.

Full Update:

- a. Click Choose File to select firmware TAR file.
- b. Click Start full update to update all Expander Firmware

Resetting the image. The sample screenshot of Firmware update is as shown below.



Partial Update

Current Revision: current expander information includes expander firmware version, MFG version and SAS Address.


Firmware Update:

- a. Click Choose File to select firmware image.
- b. Click Start firmware update to update Expander Firmware

MFG Update:

- a. Click Choose File to select firmware image.
- b. Click Start firmware update to update MFG Firmware.

Resetting the image. The sample screenshot of Firmware update is as shown below.

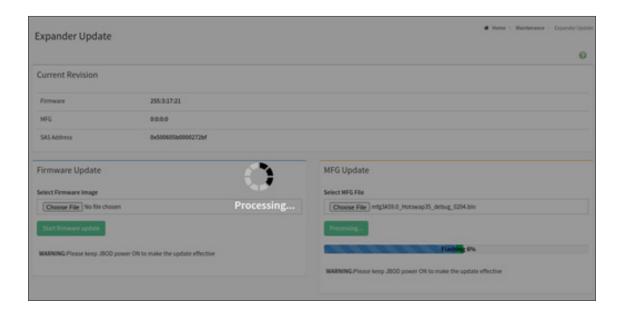

Firmware Update

4.4.12.8 BMC Reset

This page is used to reset BMC.

To open BMC Reset page, click Maintenance > BMC Reset from the menu bar. A sample screenshot of BMC Reset page is shown below.




BMC Reset page

Self: activate BMC **Others:** other BMC

4.4.13 Sign Out

To log out from the MegaRAC GUI, click the icon ($\boxed{\blacksquare}$) on the top right corner of the screen. A sample screenshot is shown below.

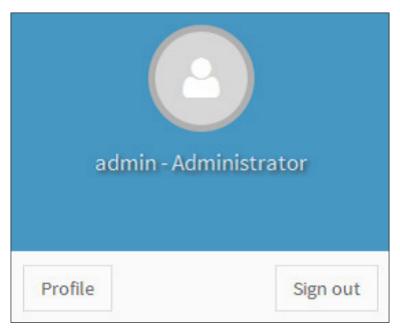

Sign out

Click Sign Out to perform log out from the MegaRAC GUI. A Warning message will be prompted you to proceed further, click OK to log out else Cancel to retain the MegaRAC GUI.

Chapter 5. Technical Support



Taiwan, Global Headquarters

Address: No. 152, Section 4, Linghang N. Rd, Dayuan District,

Taoyuan City 337, Taiwan Tel: +886-3-433-9188 Fax: +886-3-287-1818

Sales Email: sales@aicipc.com.tw Support Email: support@aicipc.com

Shanghai, China

Address: Room 215, Building 4, No.471 Guiping Road, Xuhui District, Shanghai City,

200233 China

Tel: +86-21-54961421

Sales Email: sales@aicipc.com.cn Support Email: support@aicipc.com

Moscow, Russia

Address: No.500, 5th Floor, 5th Entrance, 32A, Khoroshevskoye Shosse, Moscow,

123007

Tel: +7-4997019998

Sales Email: support-ru@aicipc.com.tw Support Email: rma.russia@aicipc.com.tw

North California, United States

Address: 48531 Warm Springs Boulvard Suite 404 Fremont, CA

94539, United States Tel: +1-510-573-6730

Sales Email: sales@aicipc.com Support Email: support@aicipc.com

South California, United States

Address: 21808 Garcia Lane City of Industry, CA 91789,

United States

Toll free: + 1-866-800-0056 Tel: +1-909-895-8989

Fax: +1-909-895-8999

Sales Email: sales@aicipc.com Support Email: support@aicipc.com

New Jersey, United States

Address: 322 Route 46 West Suite 100 Parsippany, NJ 07054 United States

Tel: +1-973-884-8886 Fax: +1-973-884-4794

Sales Email: sales@aicipc.com Support Email: support@aicipc.com

Houten, The Netherlands

Address: Peppelkade 58, 3992AK, Houten,

The Netherlands Tel: +31-30-6386789 Fax: +31-30-6360638

Sales Email: sales@aicipc.nl

Support Email: support@aicipc.com

For additional technical support or questions about trouble shooting, please contact the AIC® representative nearest to you or visit our AIC® website for more information. AIC® website: https://www.aicipc.com/en/fag.